





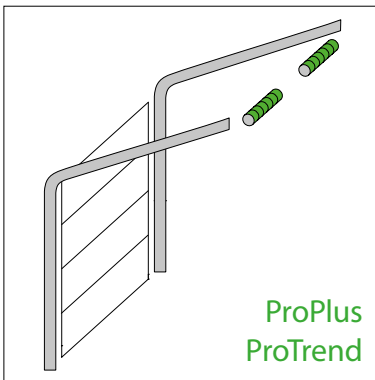


INSTALLATION MANUAL
Sectional Industrial Door
Inclined low mounting

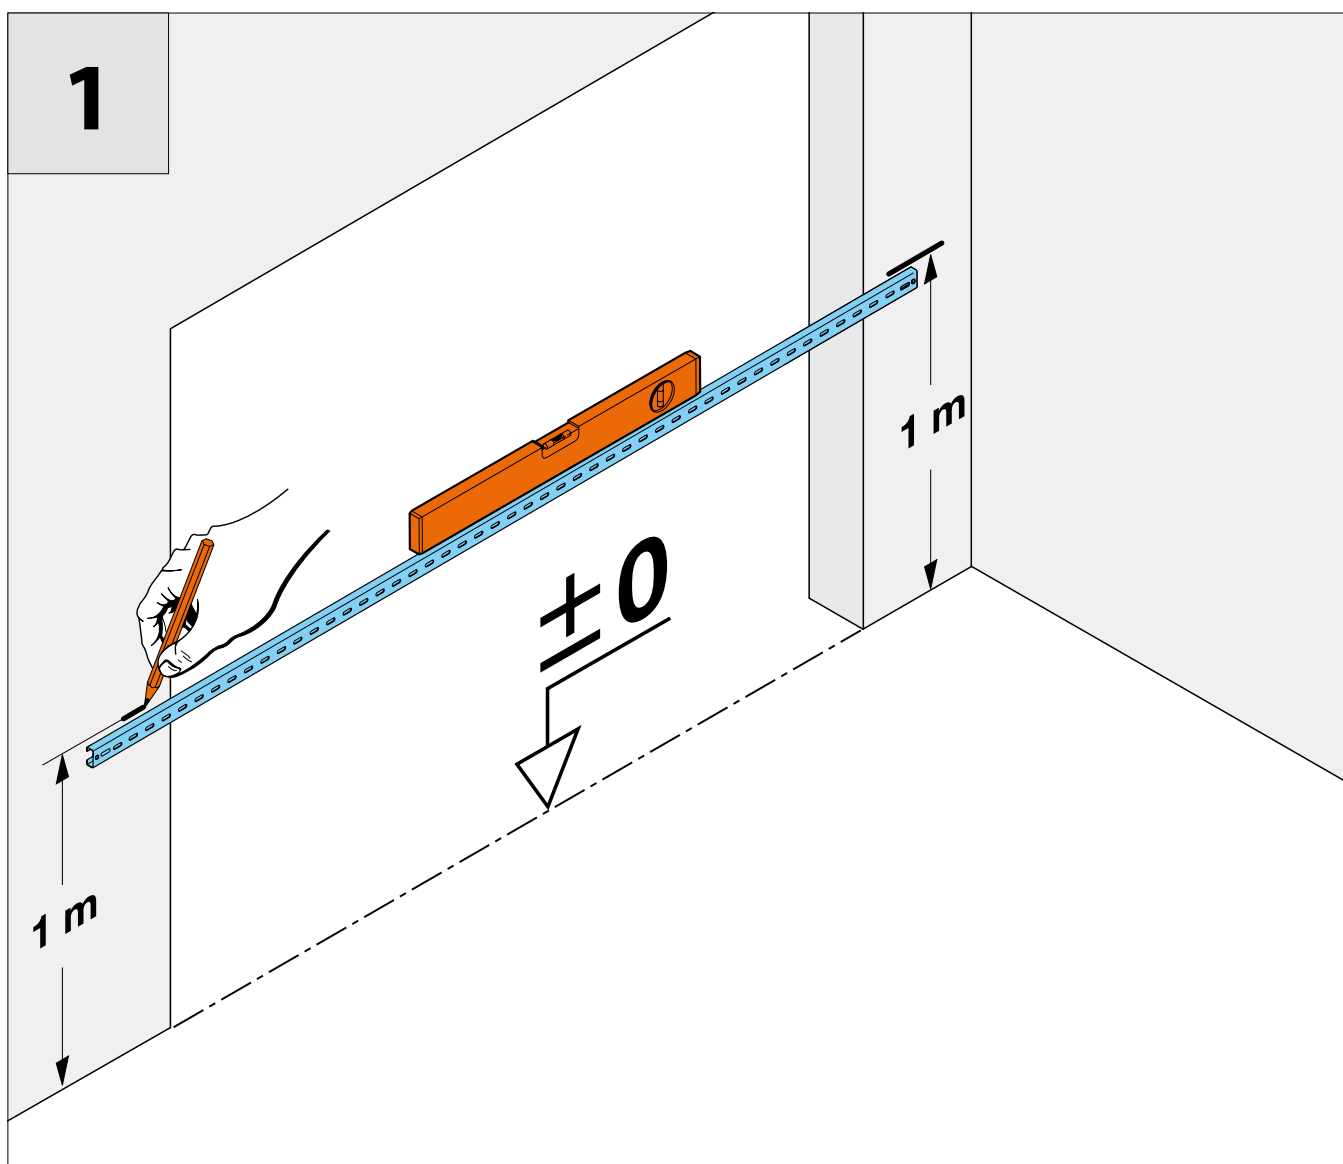

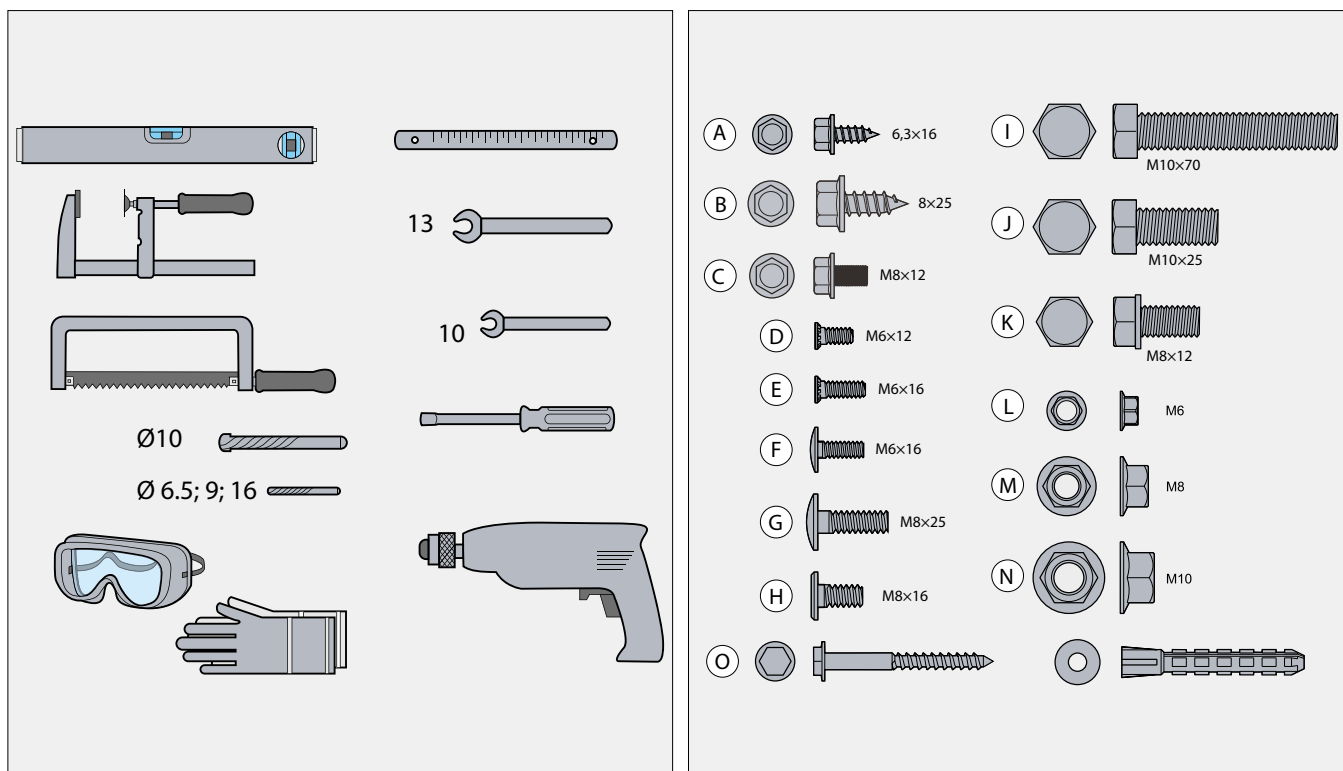


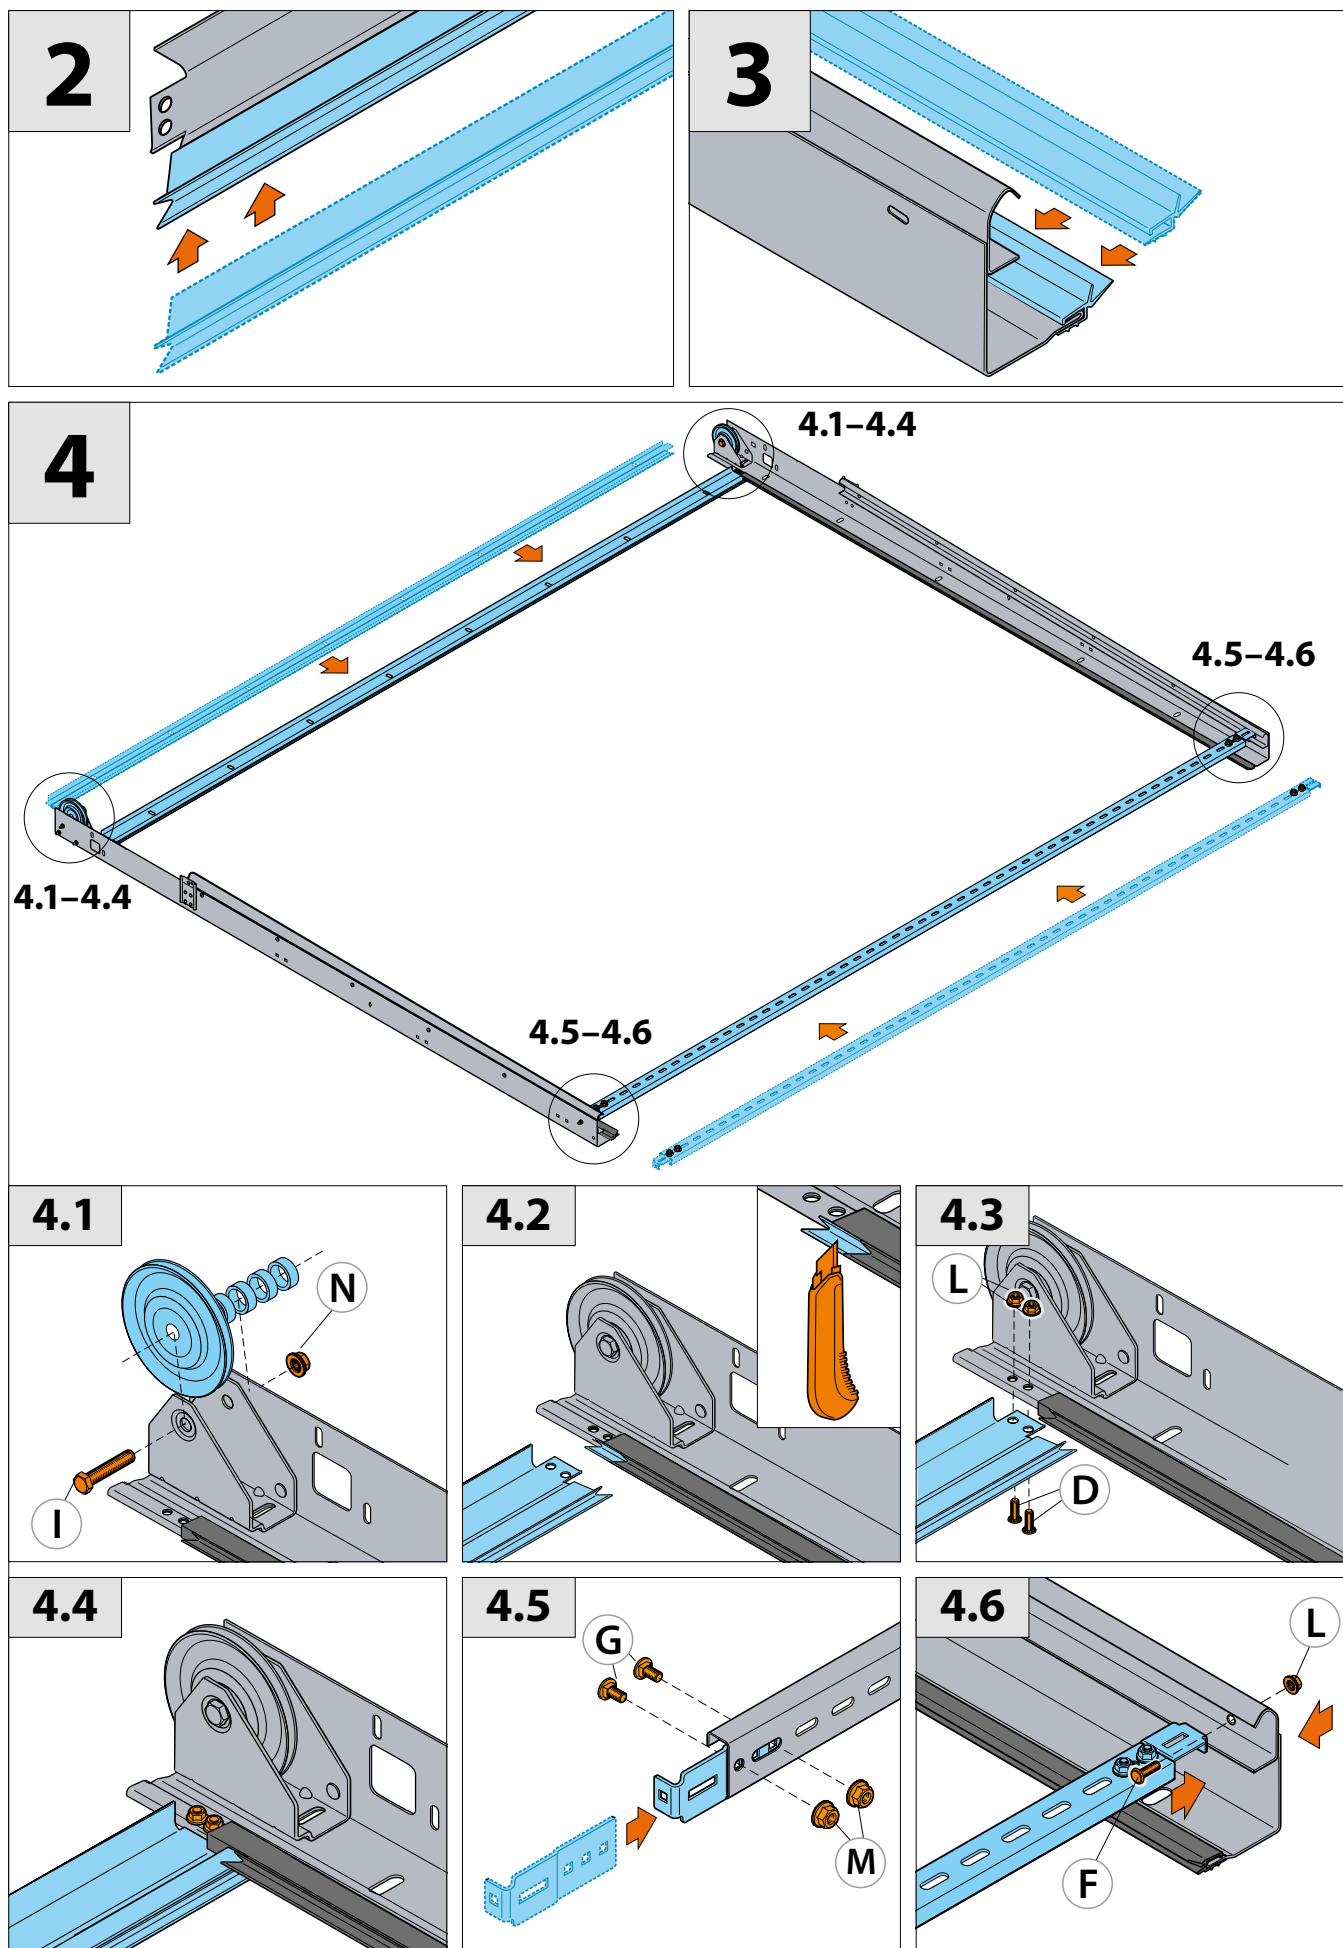





5

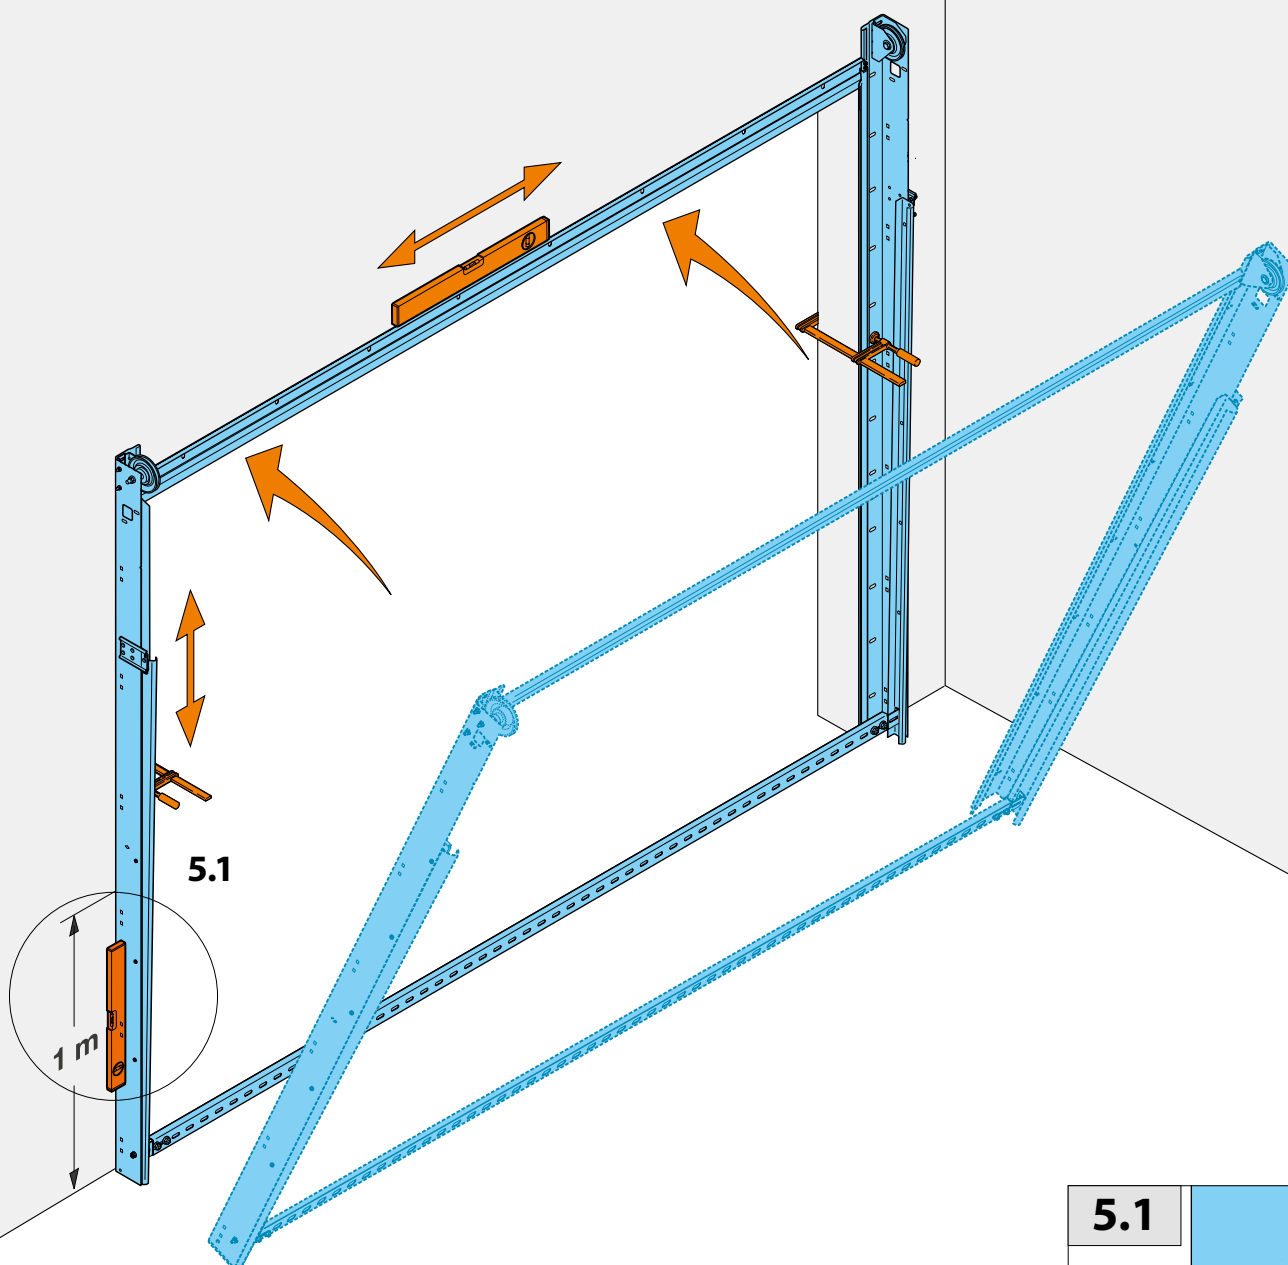





5.1





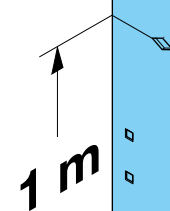


6a

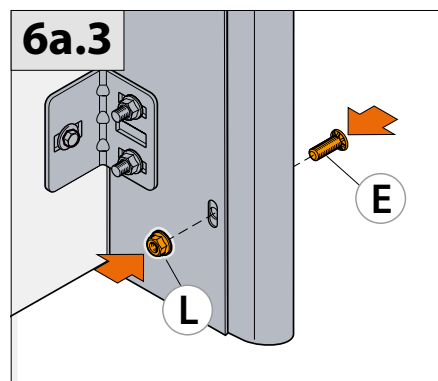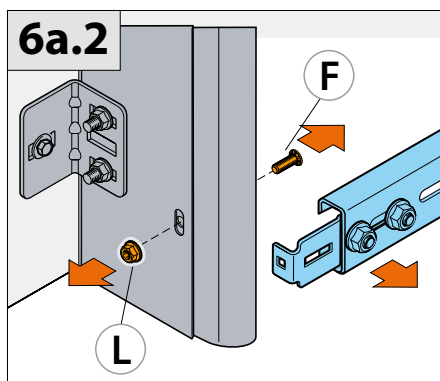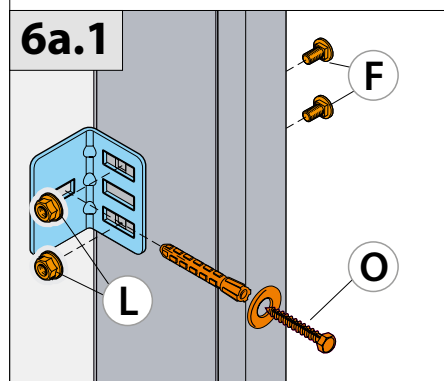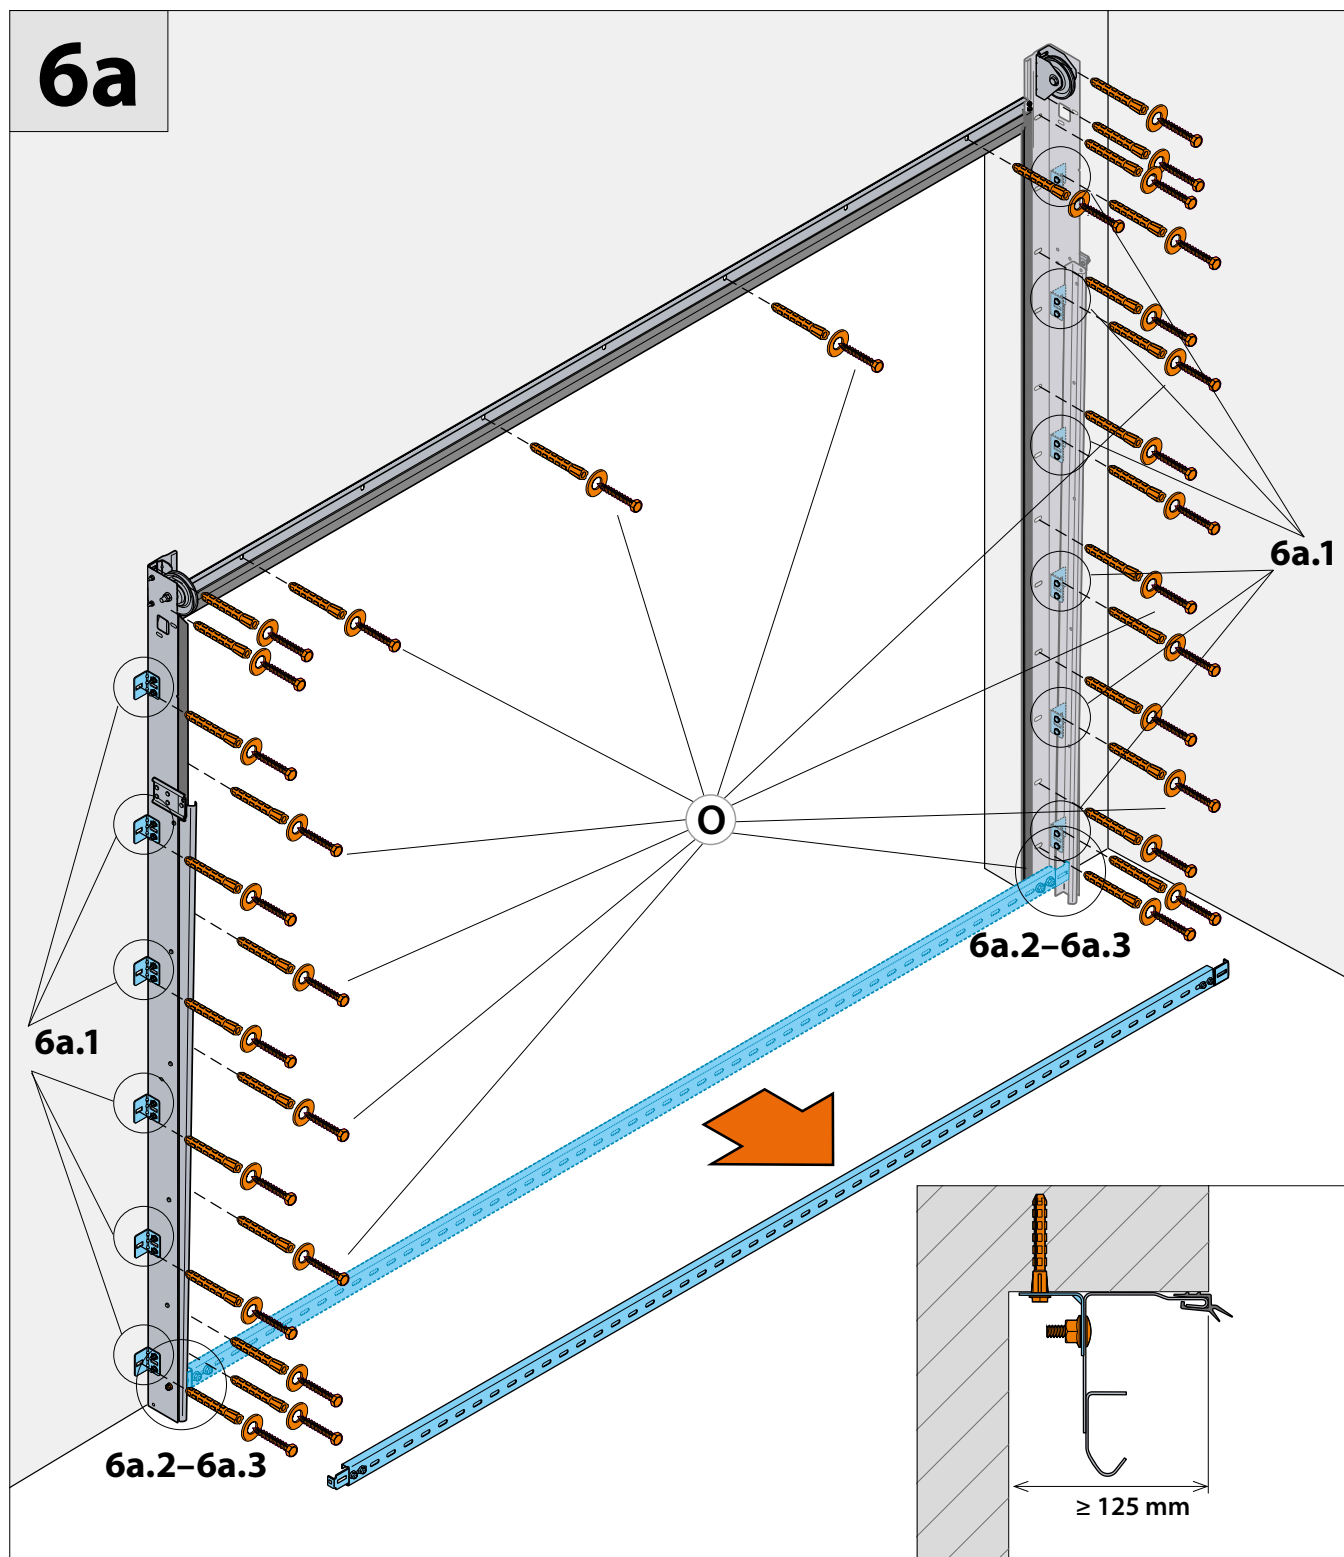


6b

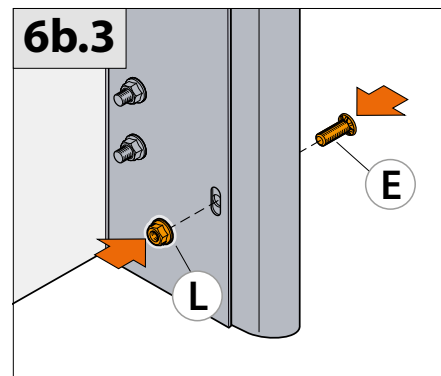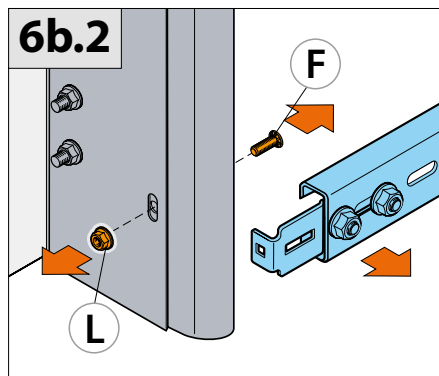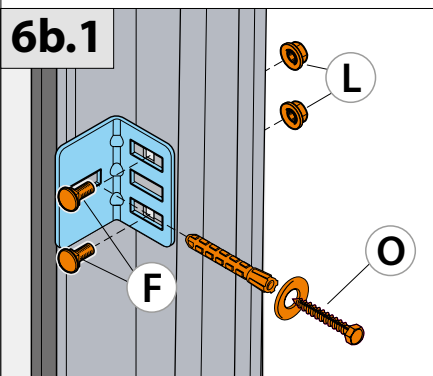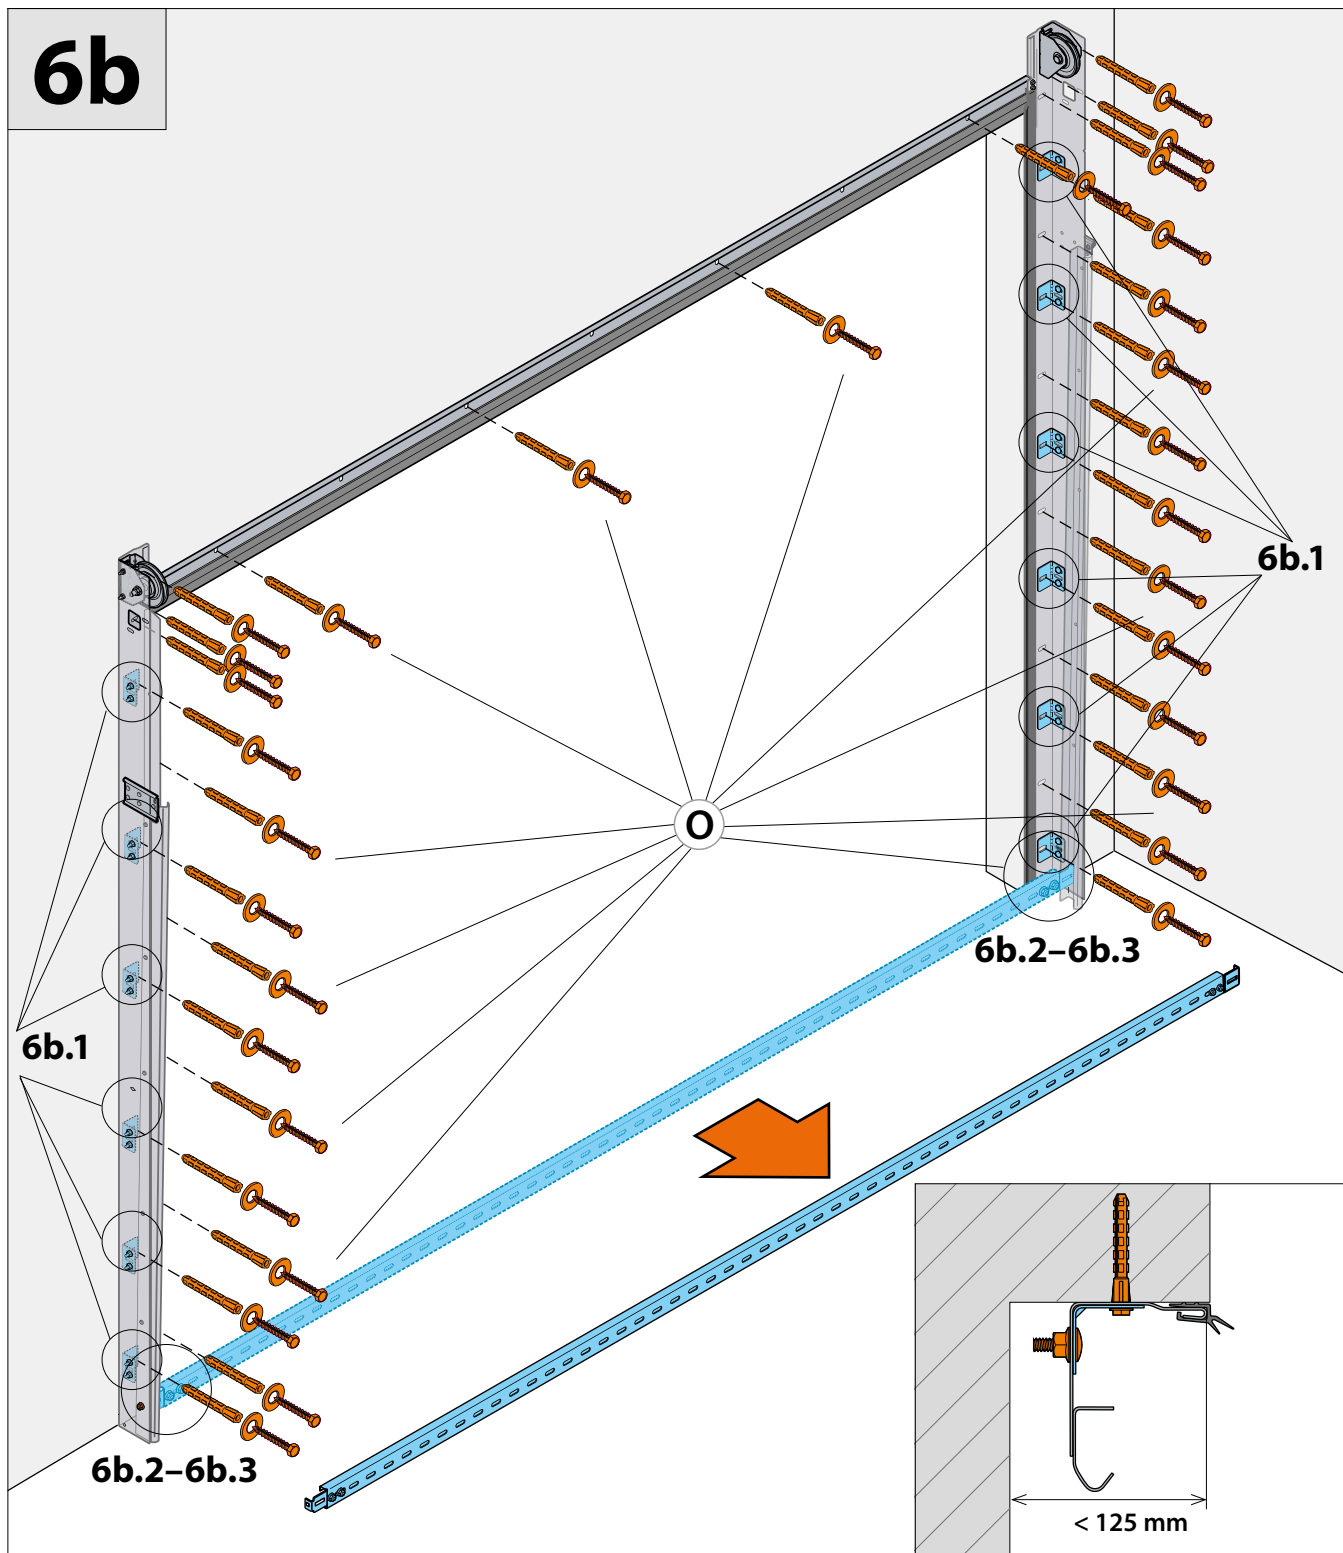

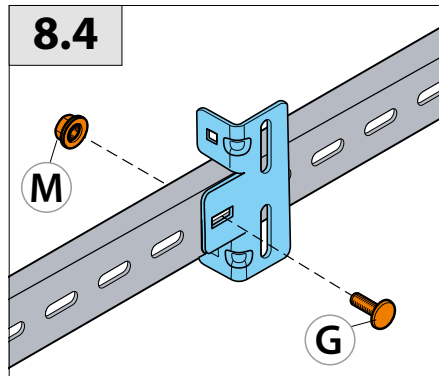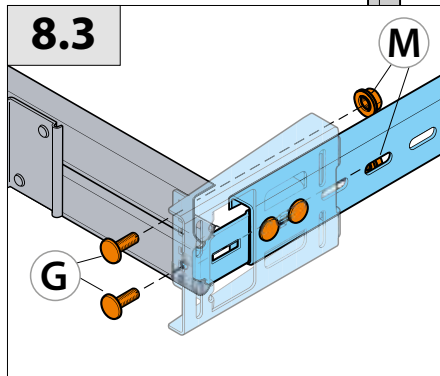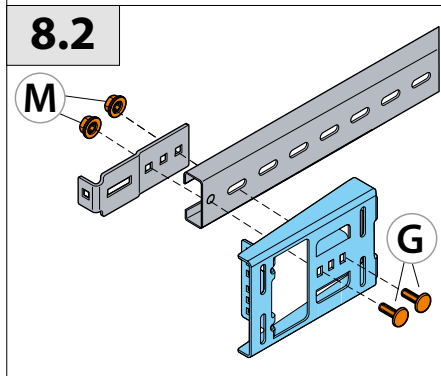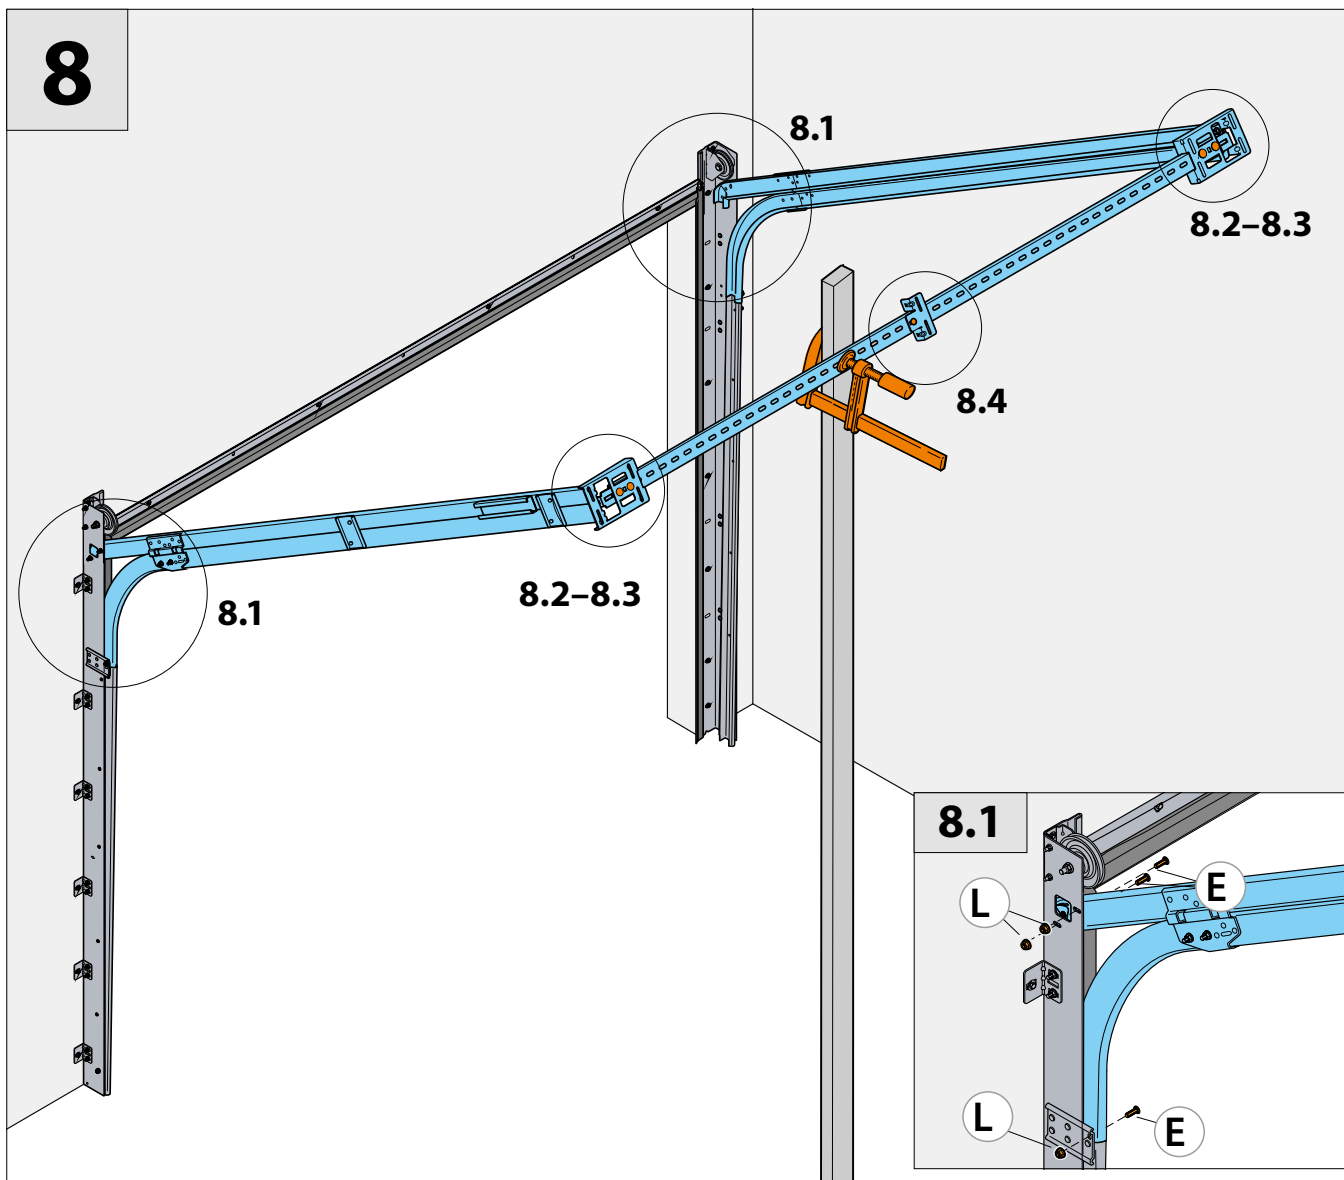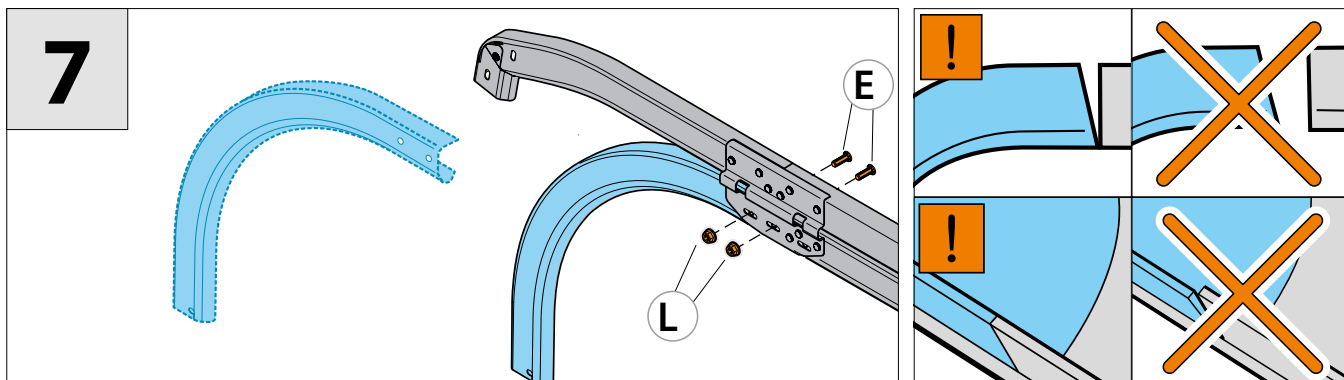





9

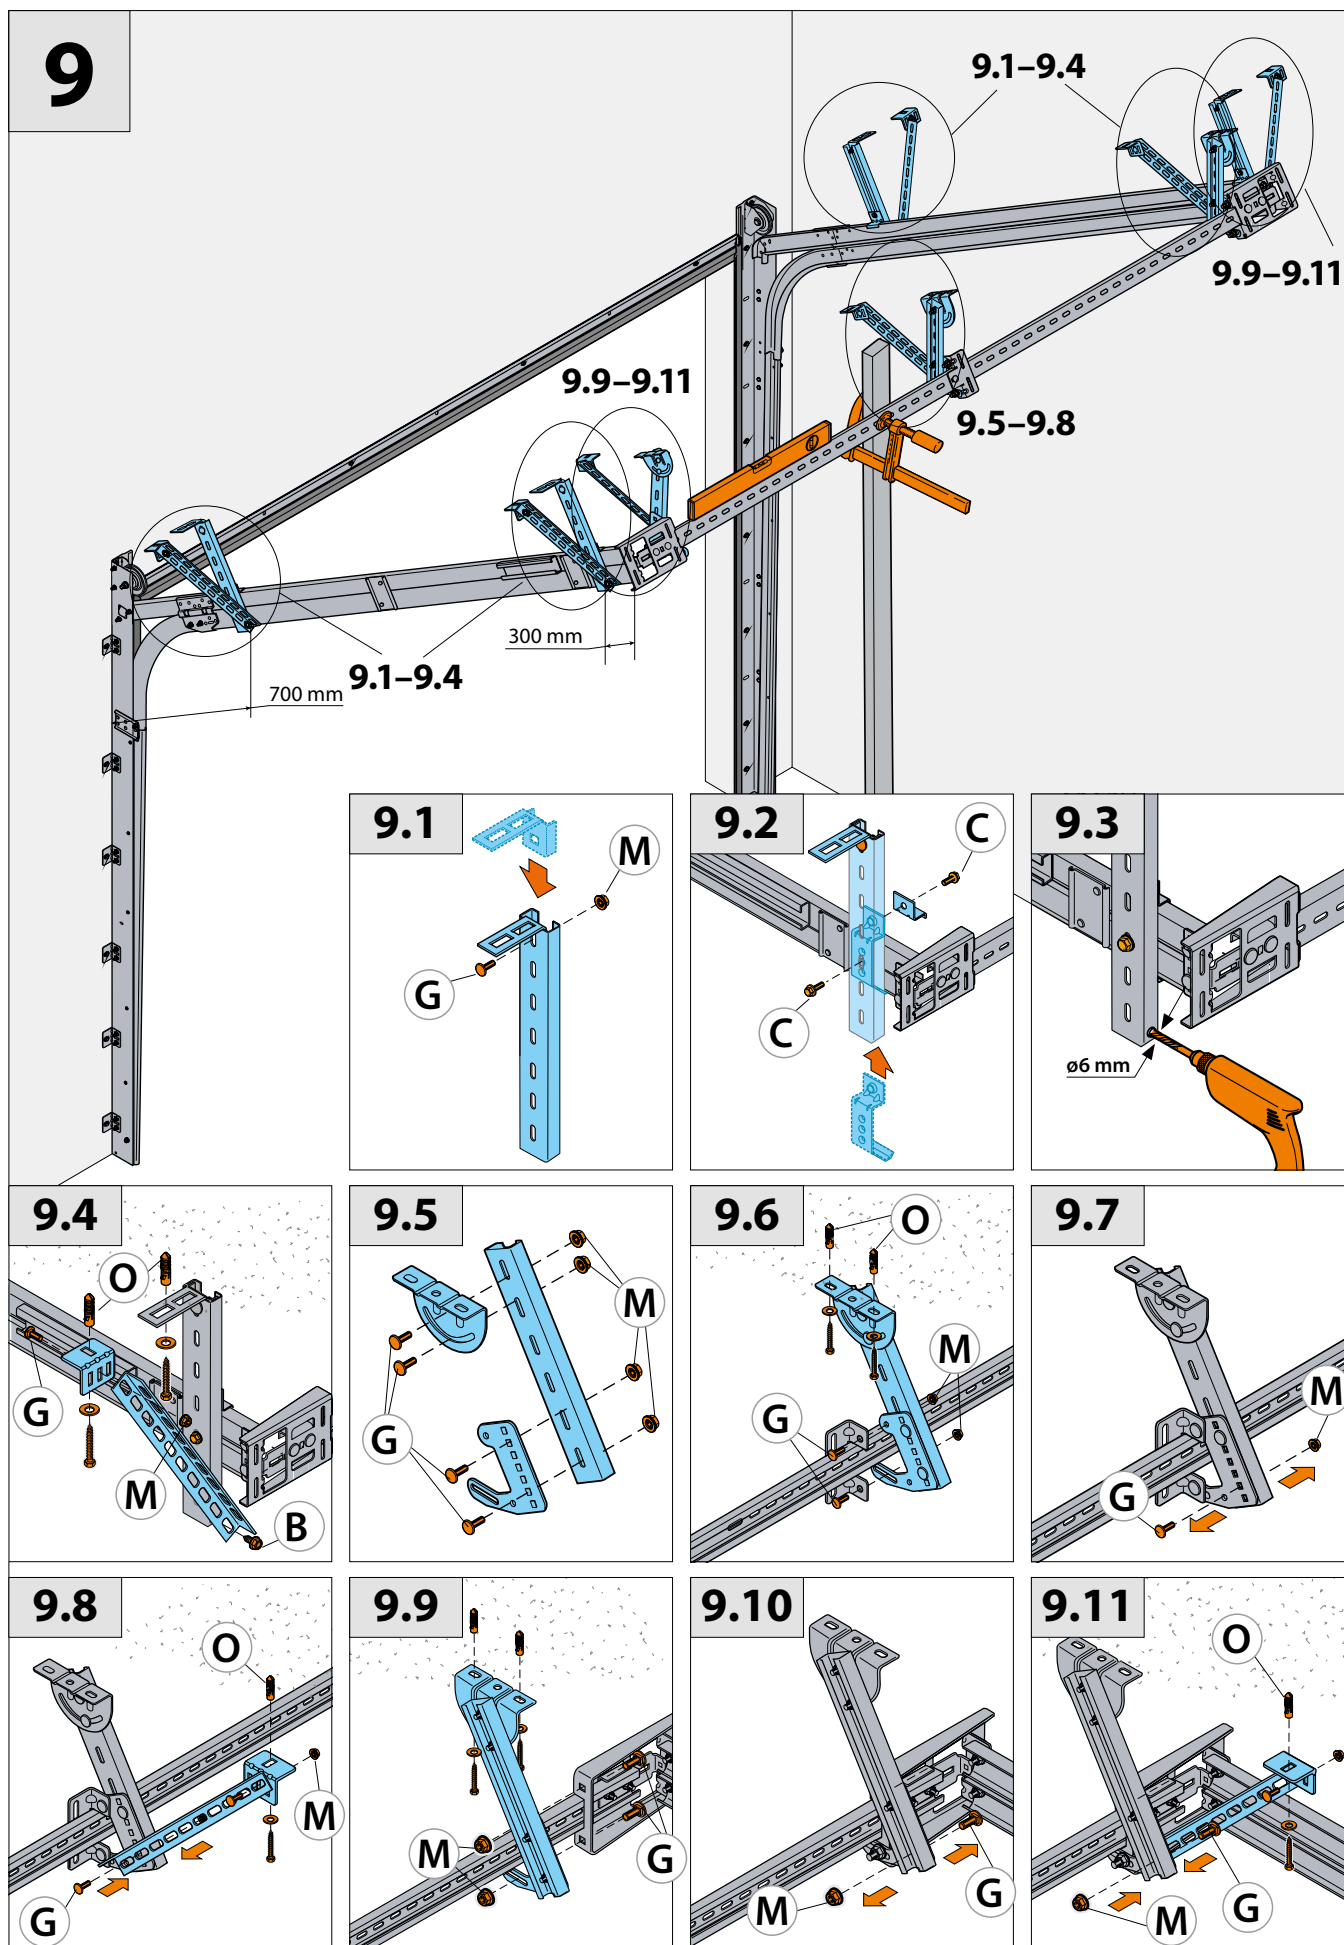


10

10.1–10.3


10.4–10.5

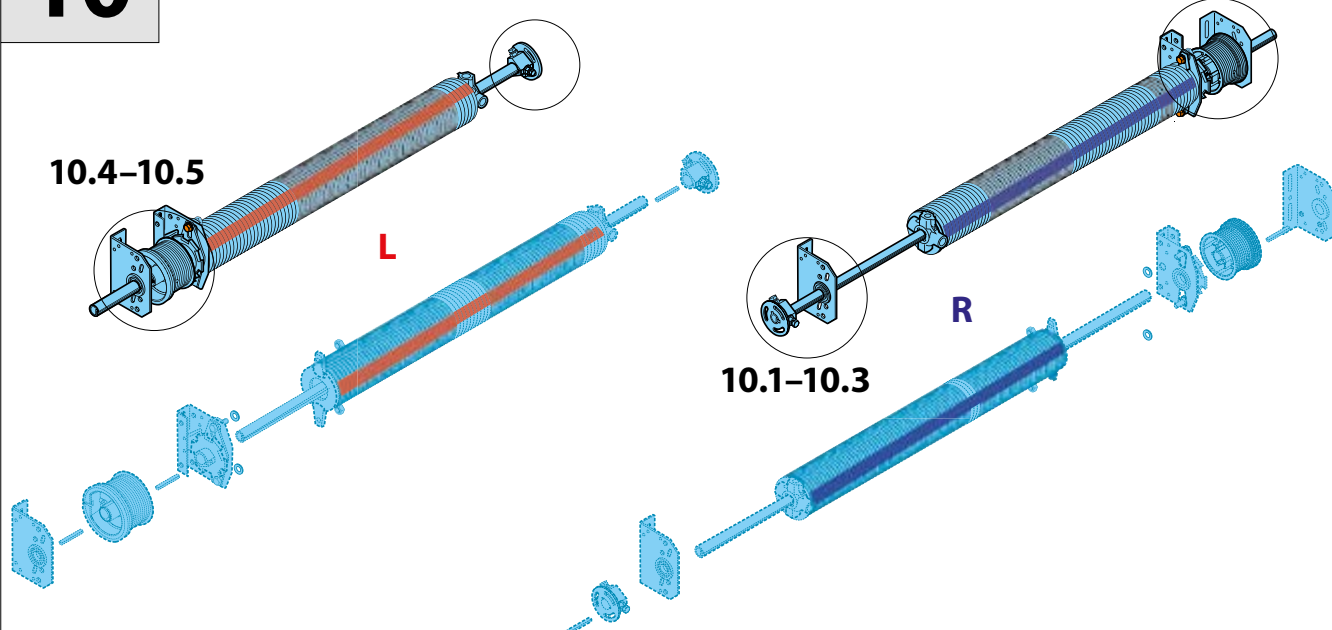


10.1

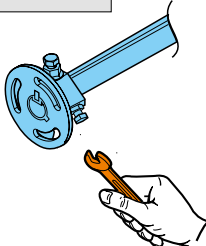


10.2

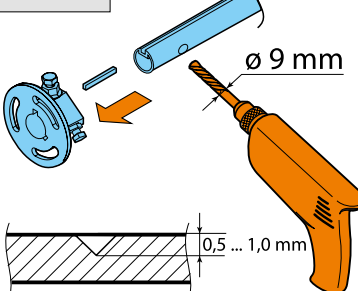


10.3

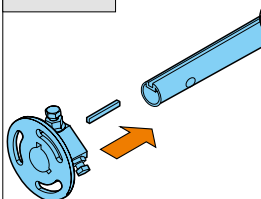


10.4a

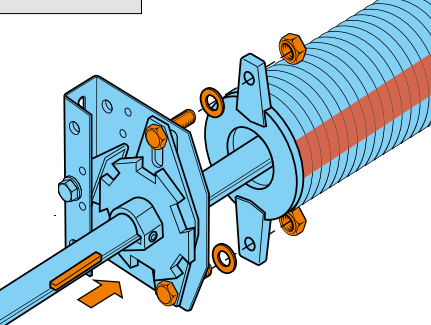



10.5a

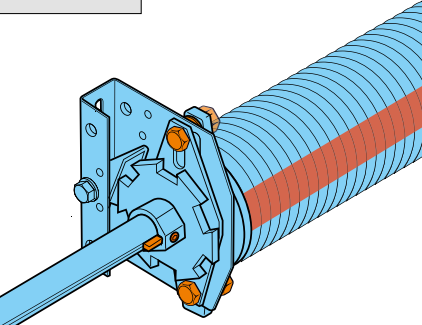


10.4b

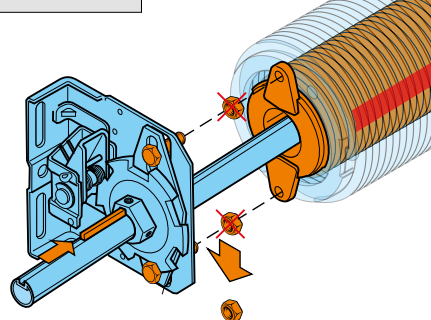


10.5b

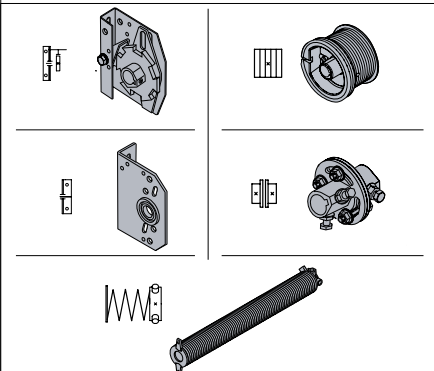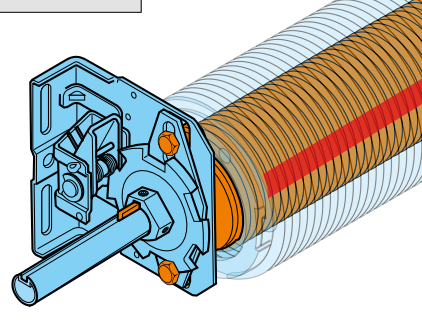


11

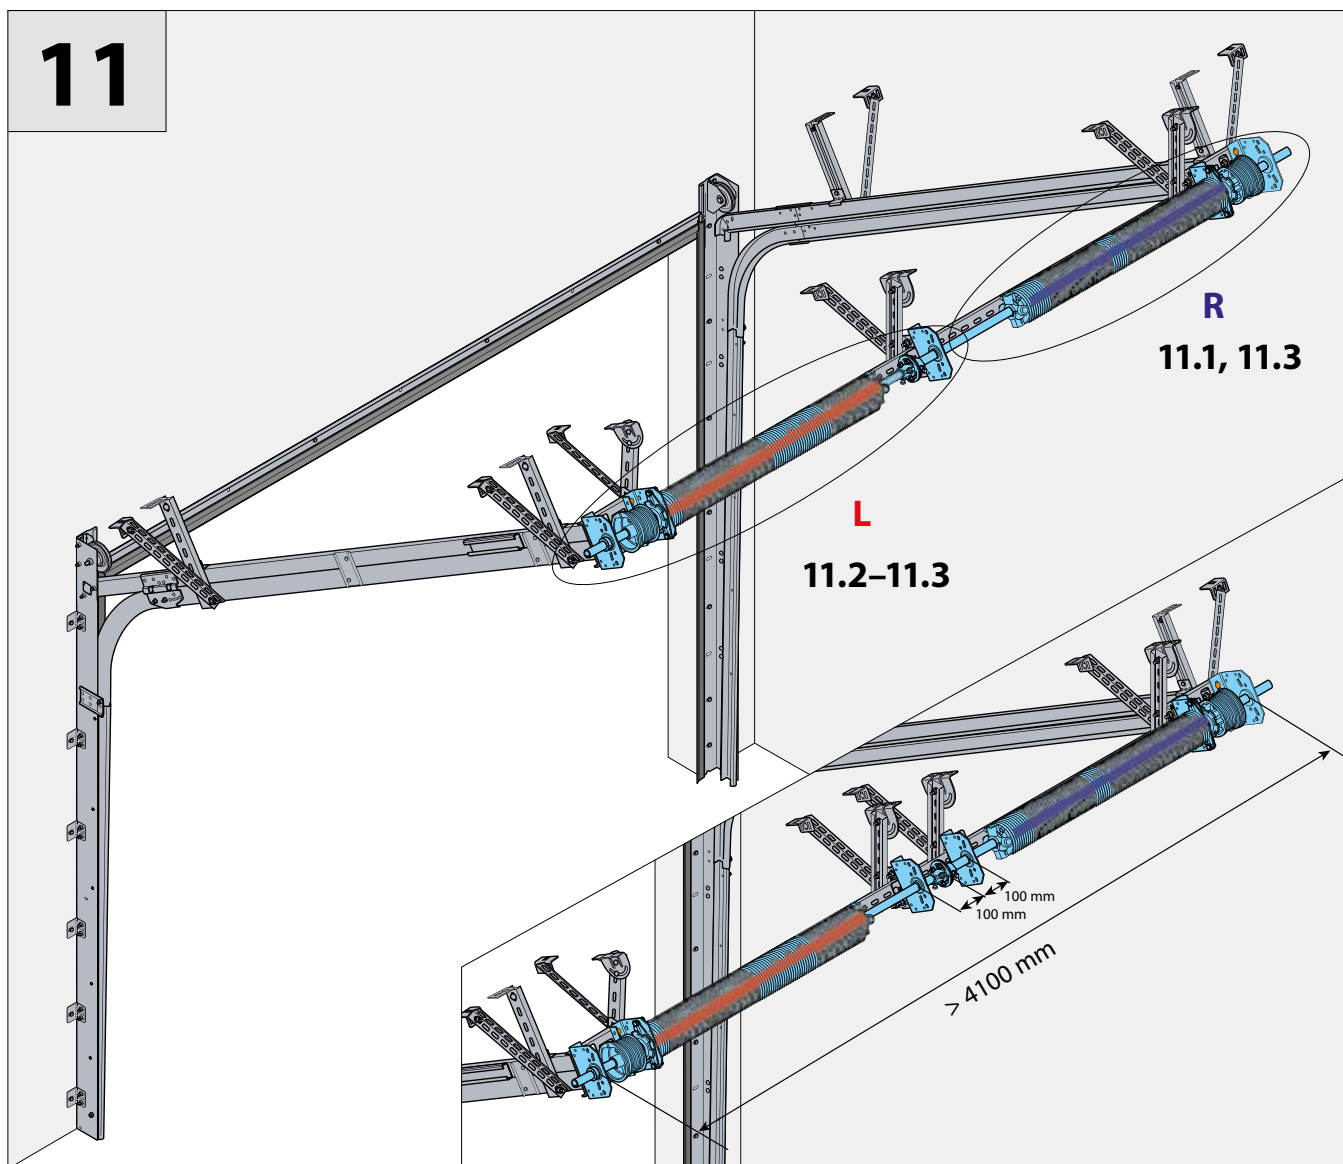


11.1

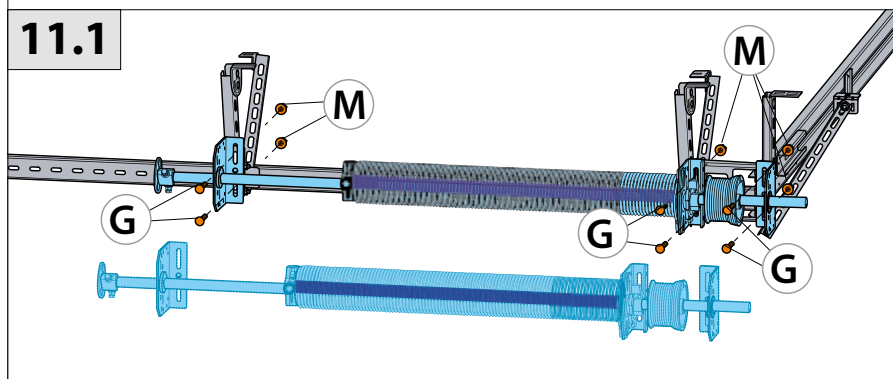


11.3

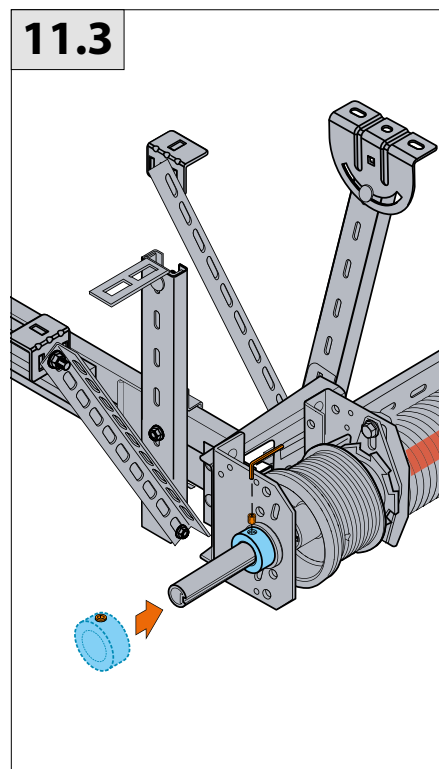


11.2

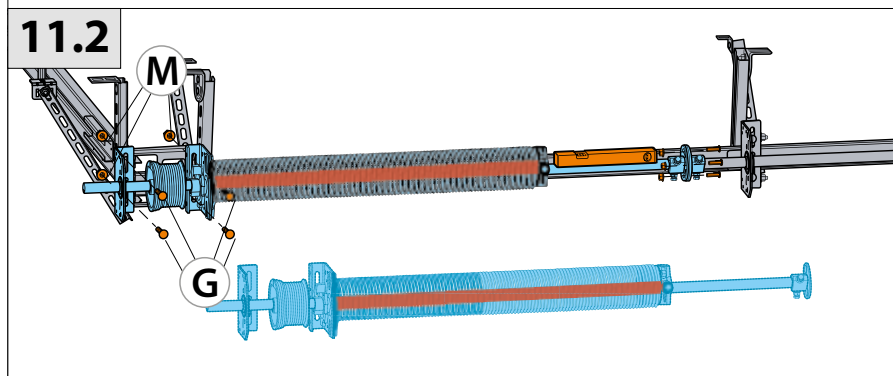

12a ProPlus

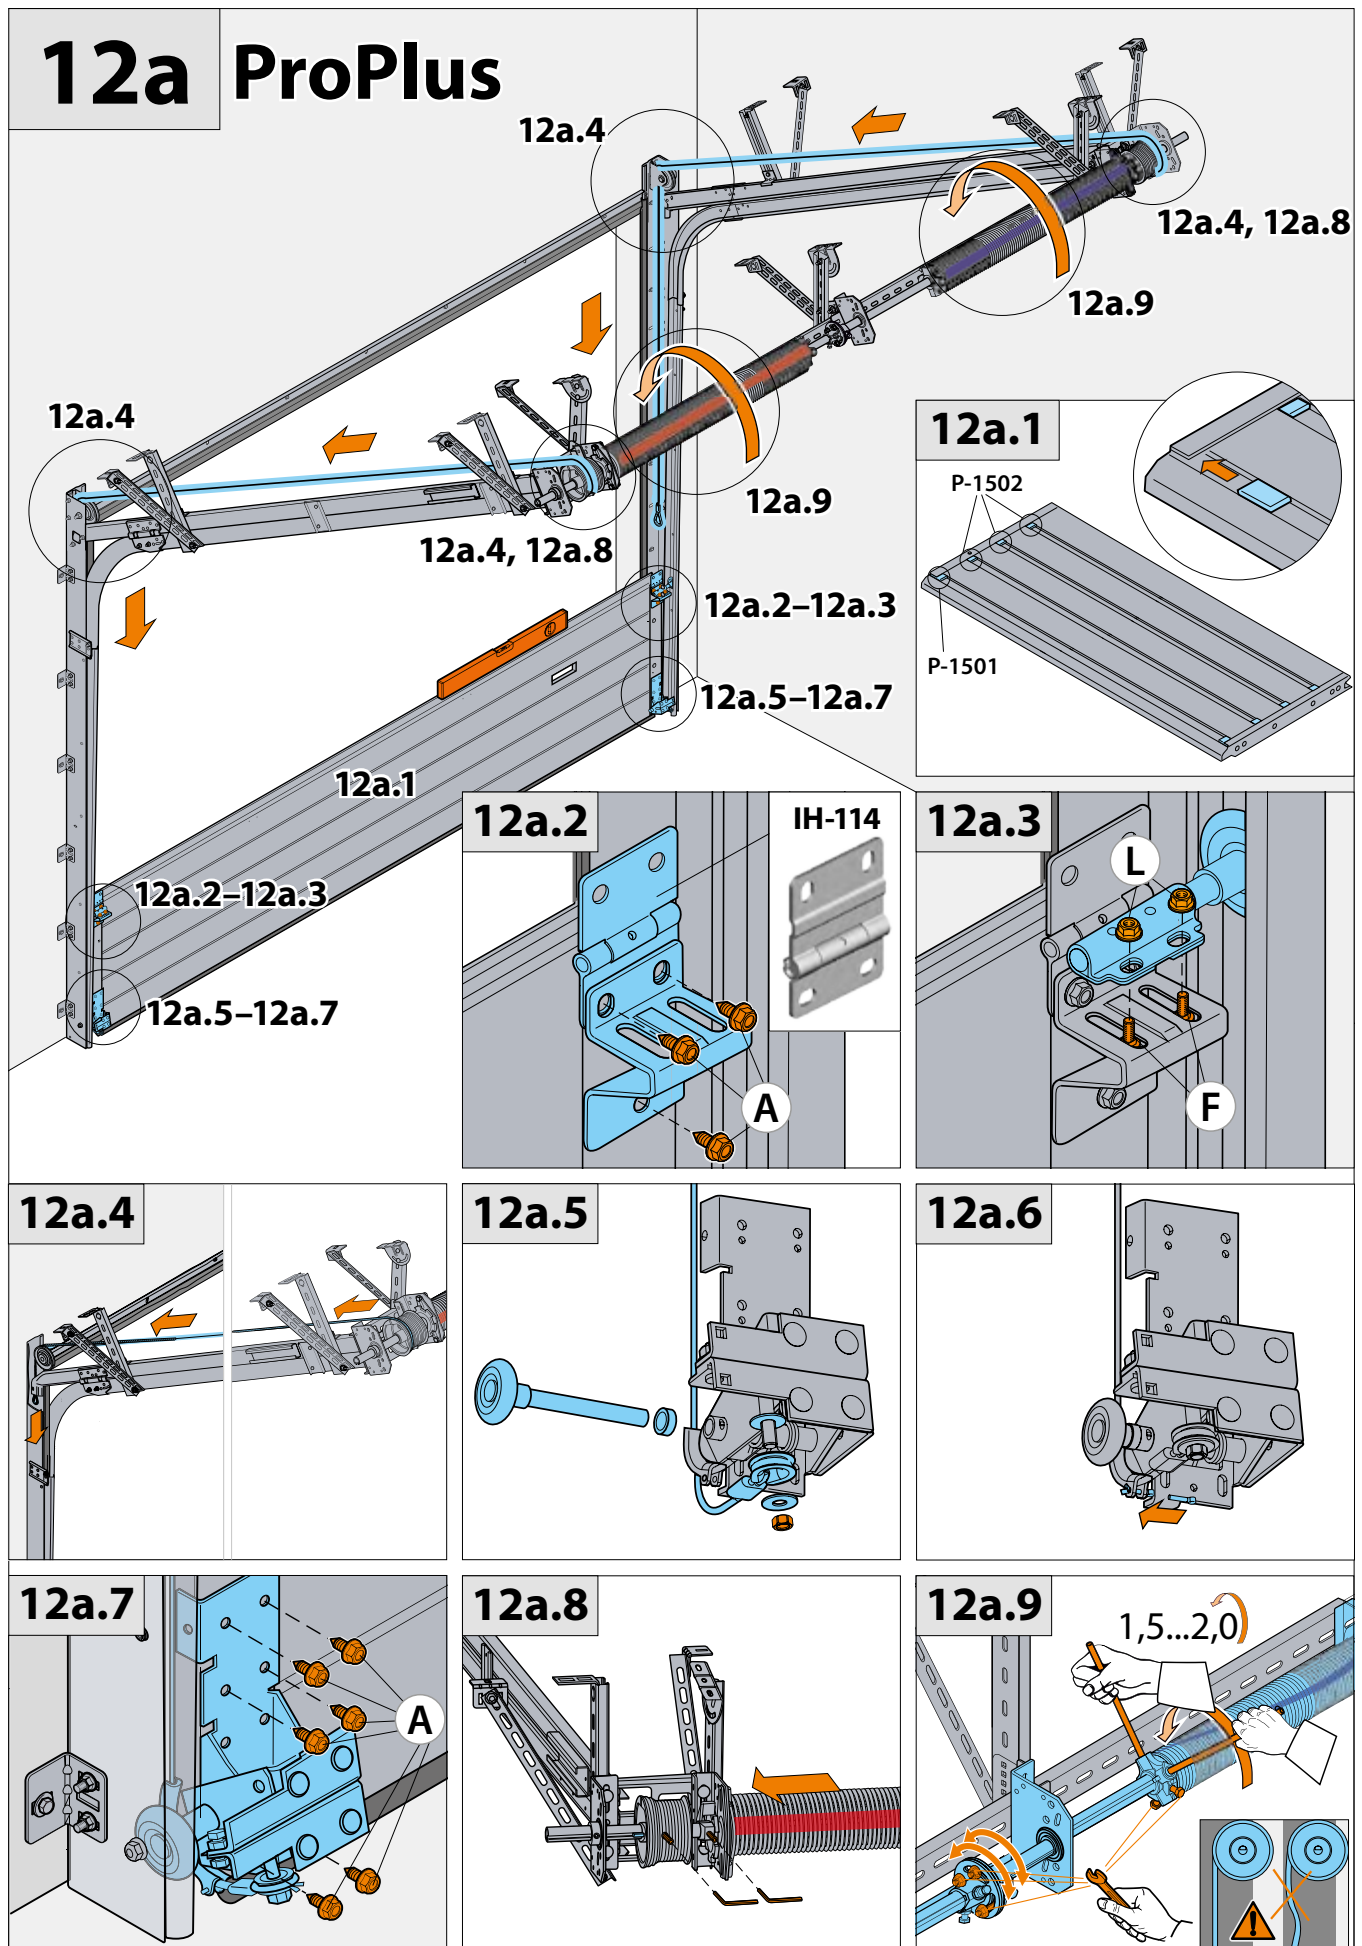


12b ProTrend

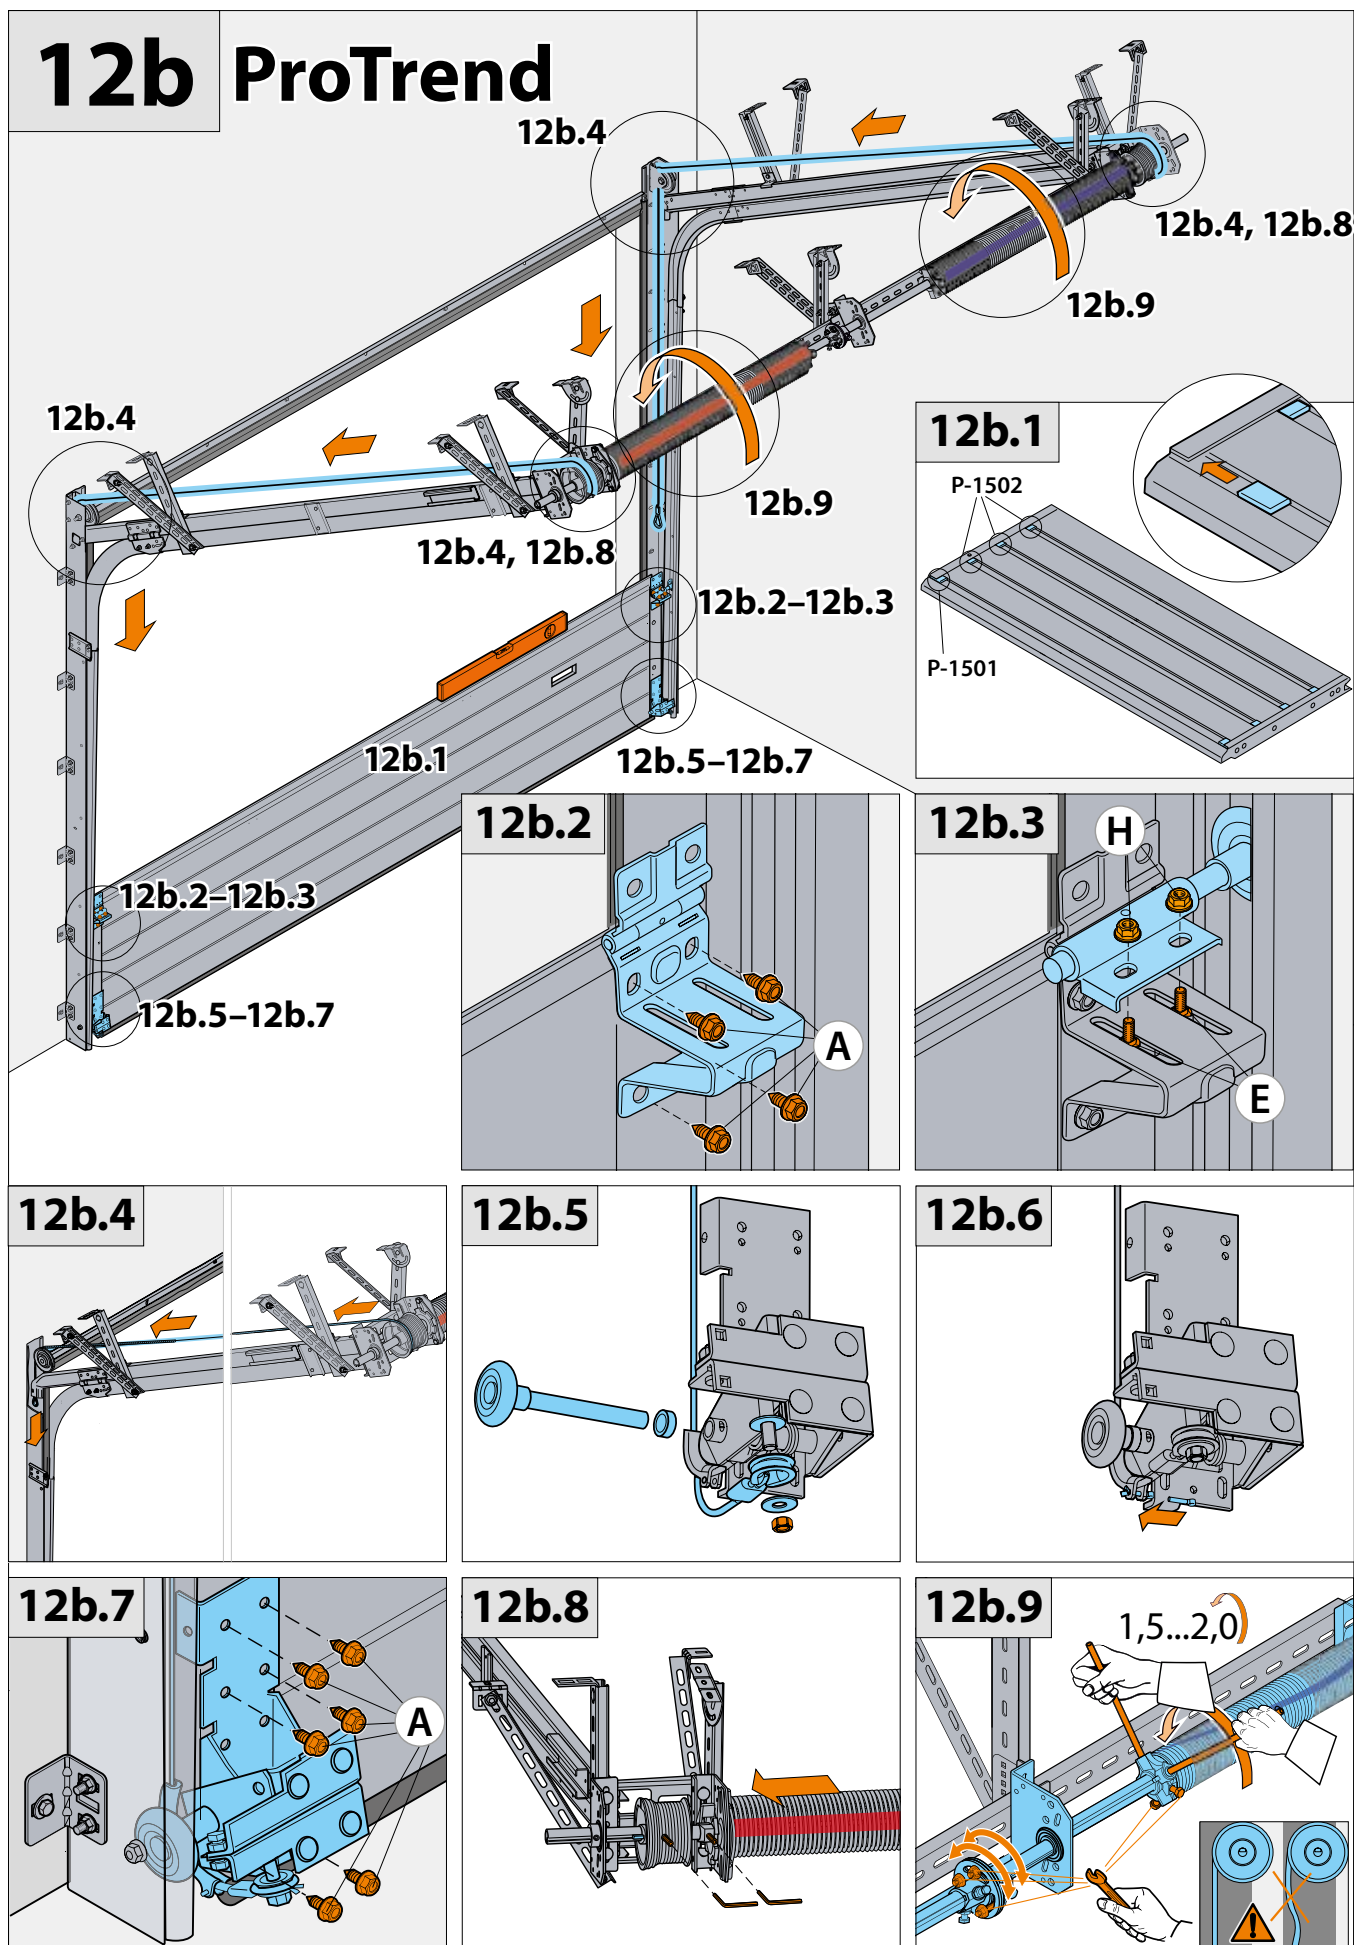


12c

ProTrend ProPlus


12c.1

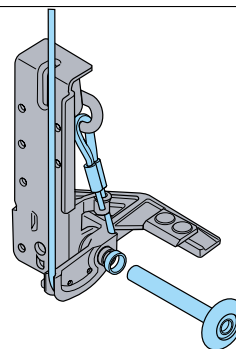

12c.2

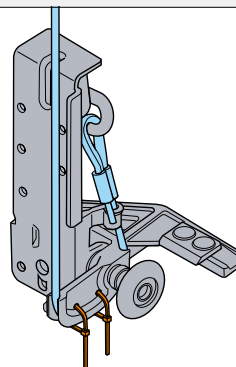


12c.3

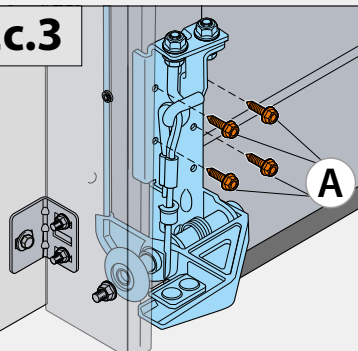


12c.1 – 12c.8

12c.1 – 12c.8


12c.4

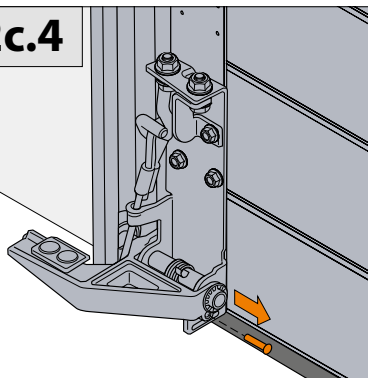


12c.5

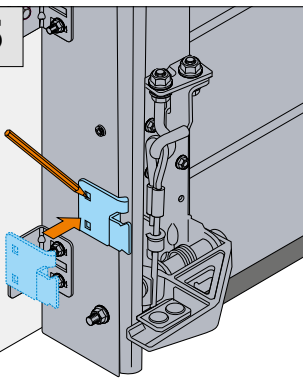



12c.6

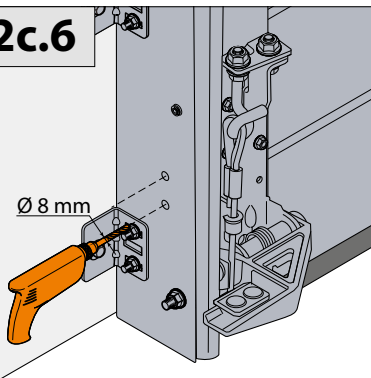

12c.7

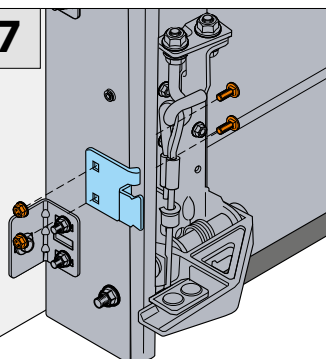


12c.8

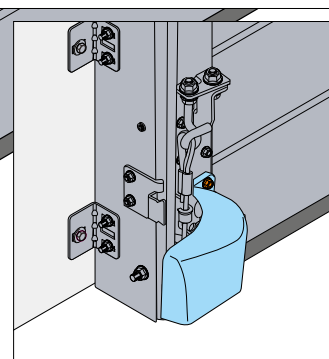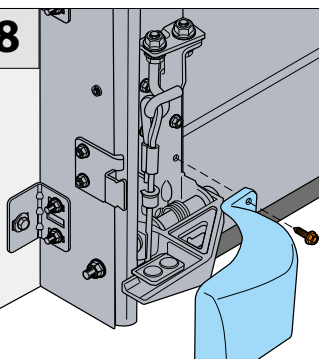


13a ProPlus


13a.4a/13a.4b

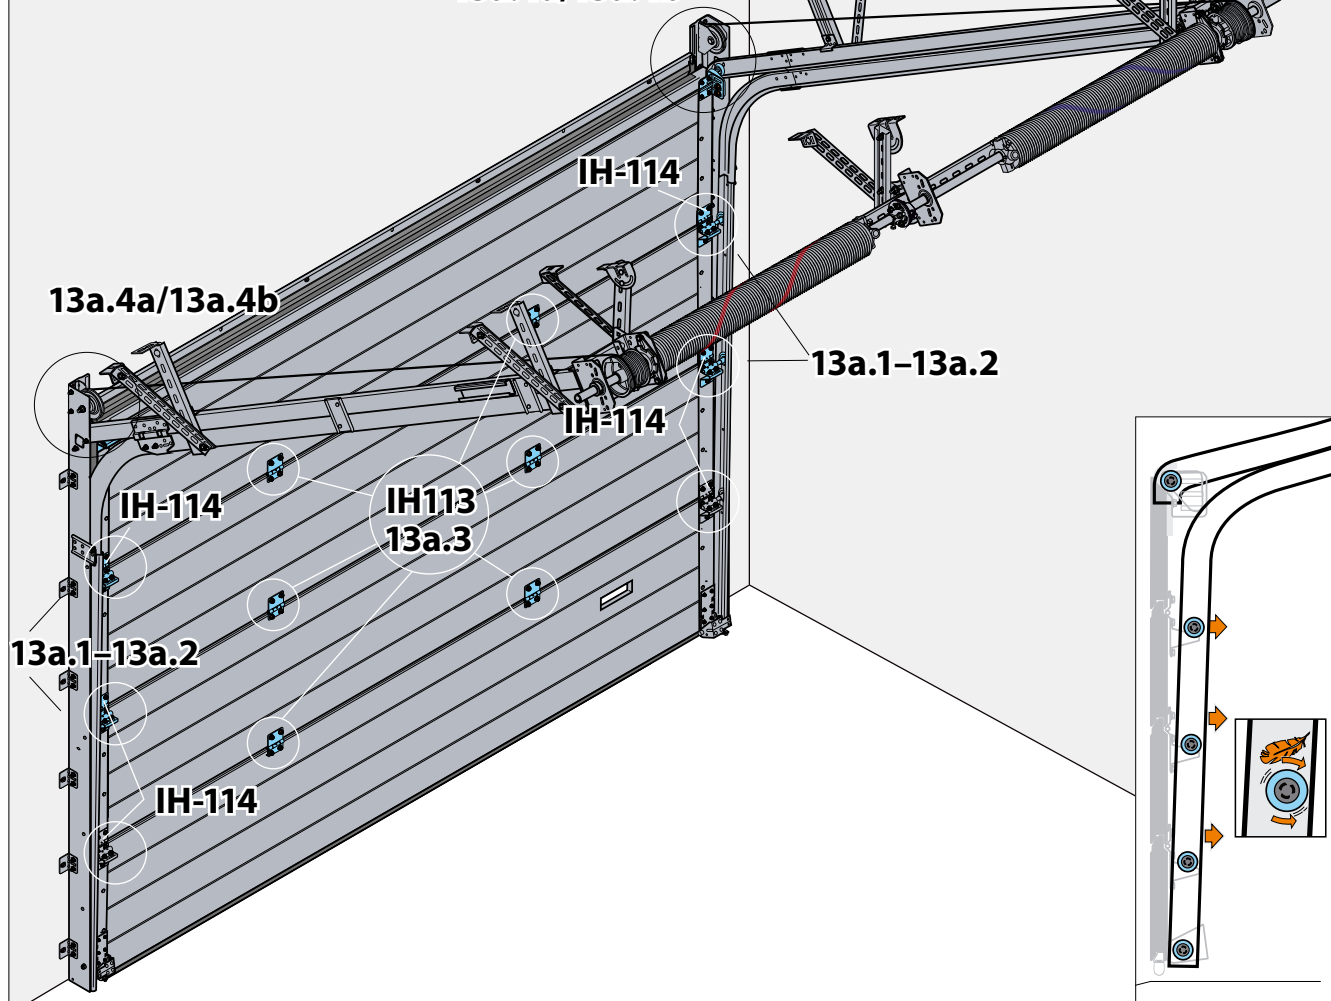


13a.1

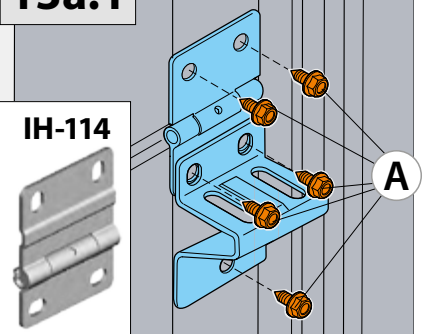


13a.2

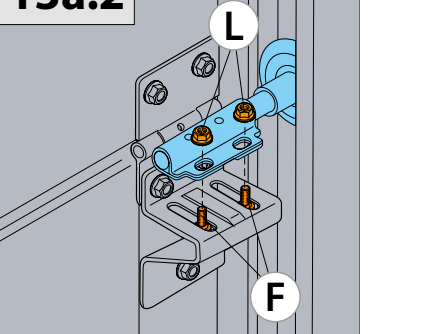


13a.3

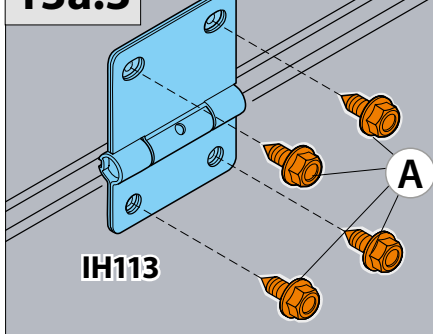

13a.4a

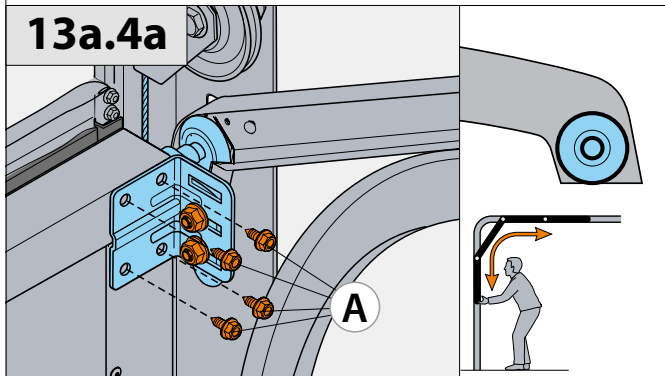


13a.4b

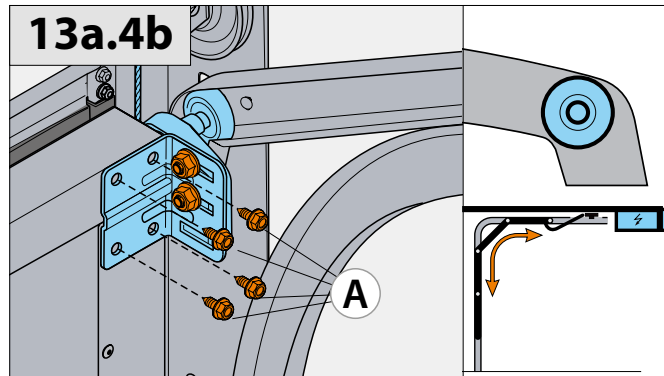


13b ProTrend


13b.4a/13b.4b

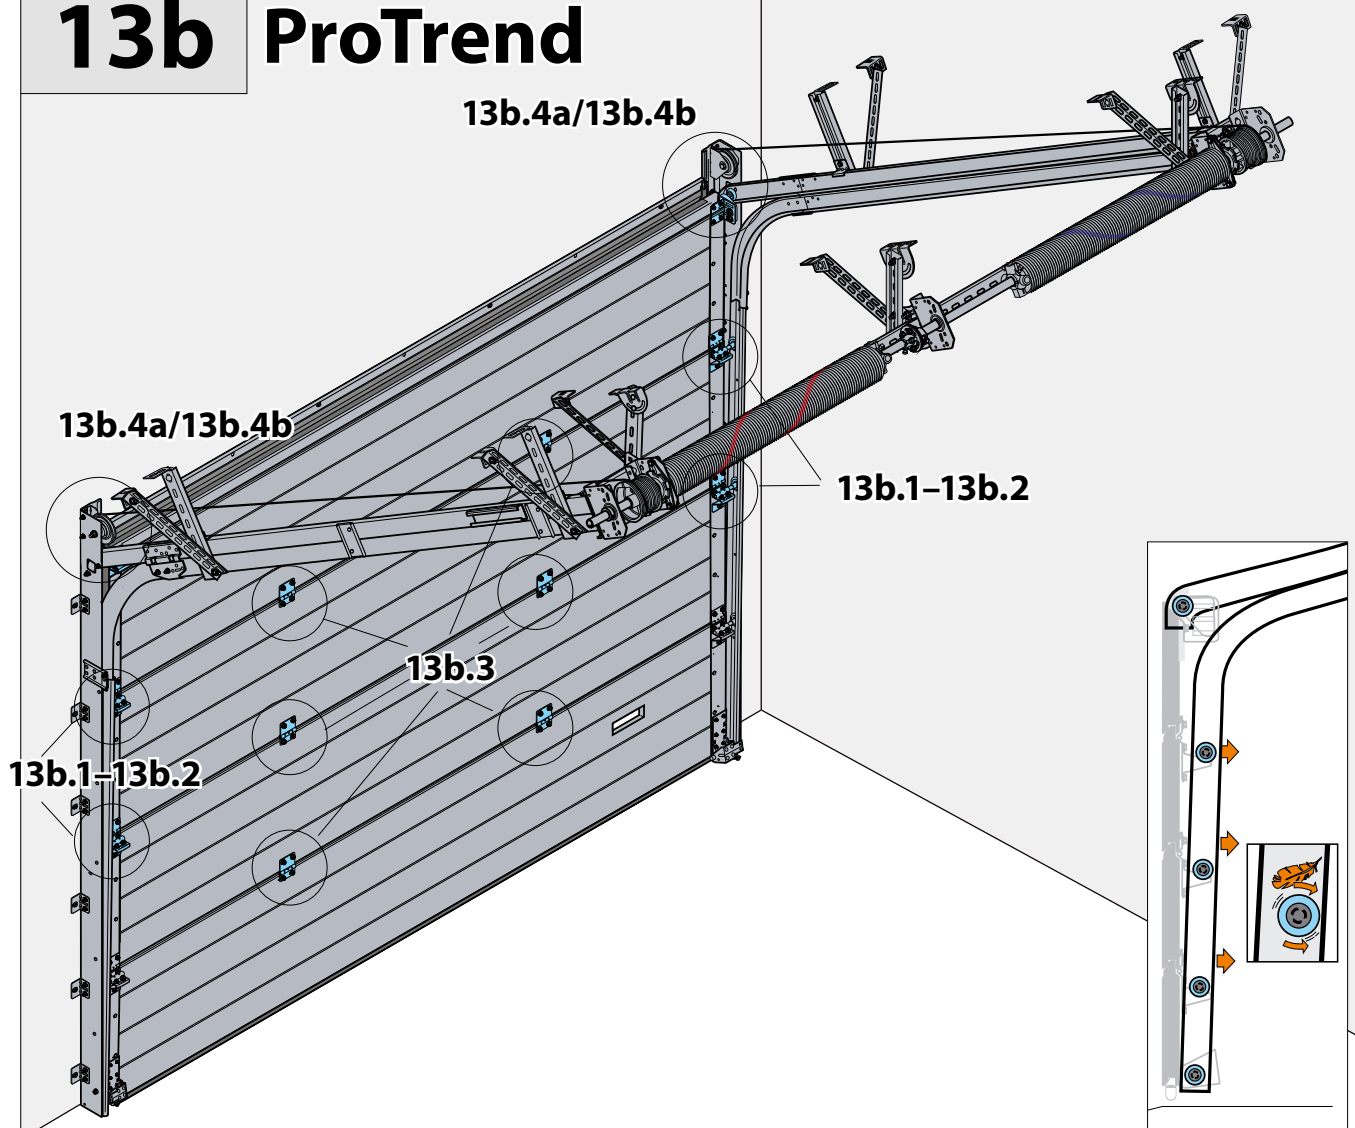


13b.1

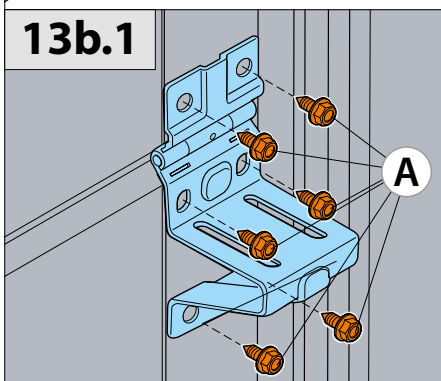


13b.2

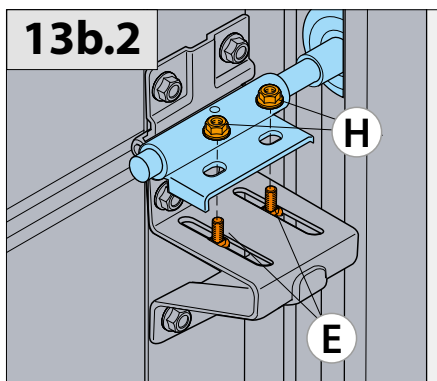


13b.3

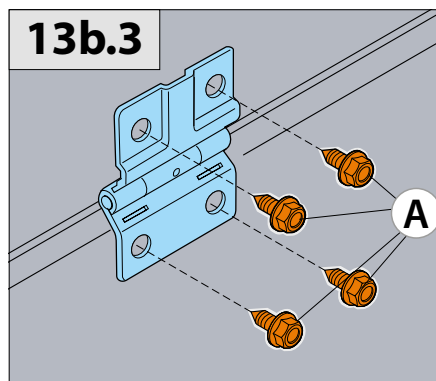


13b.4a

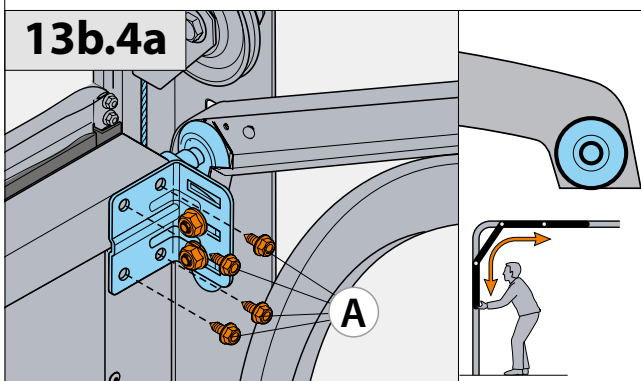







13b.4b

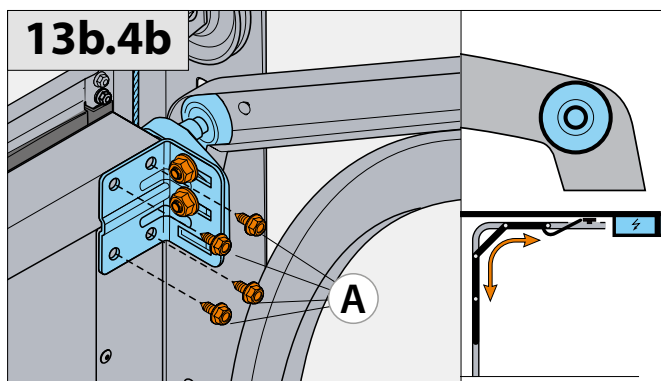


14

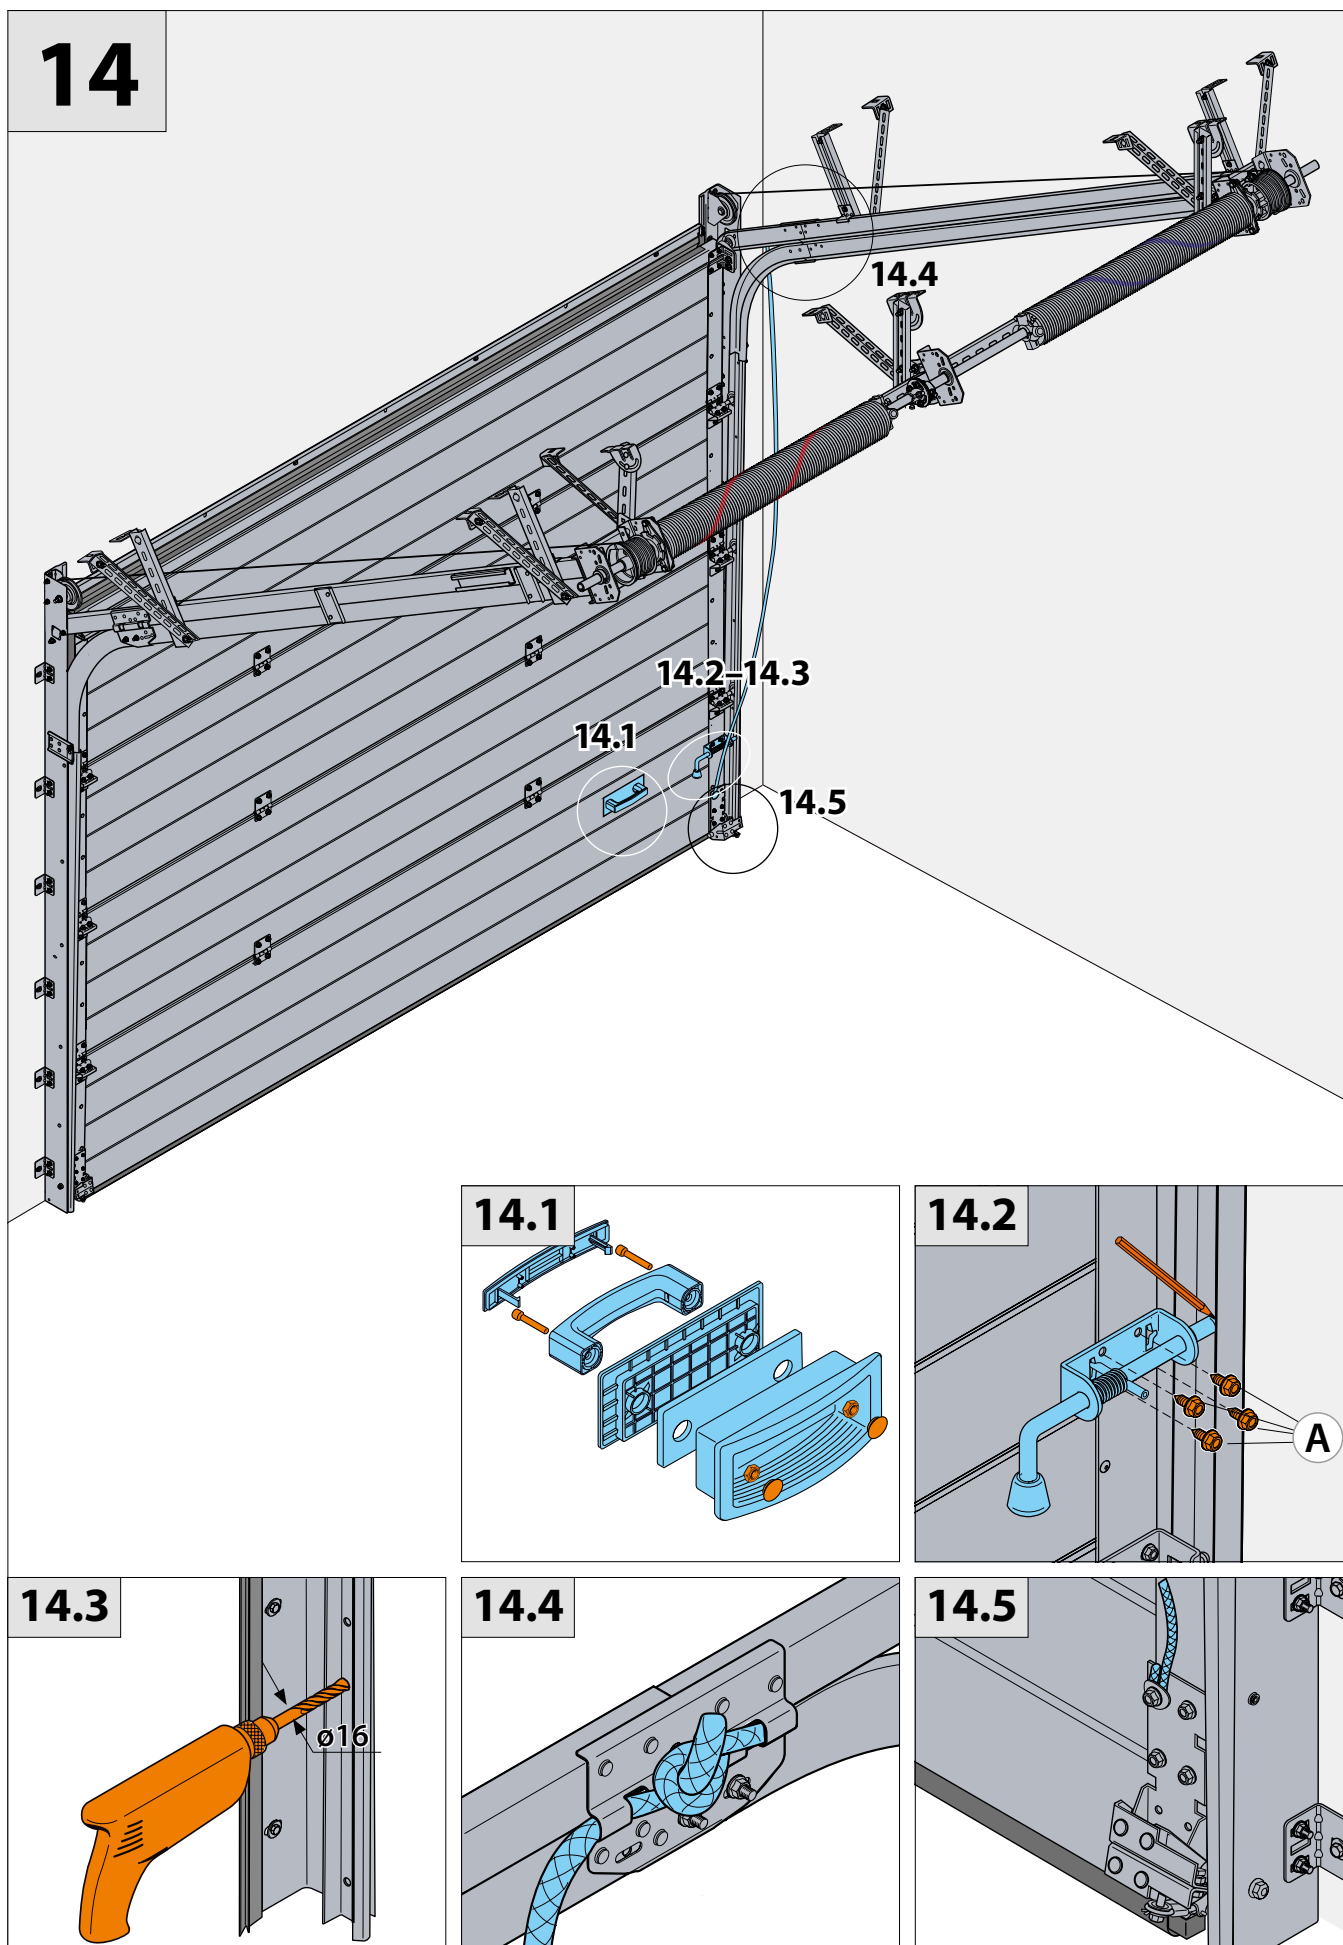


15

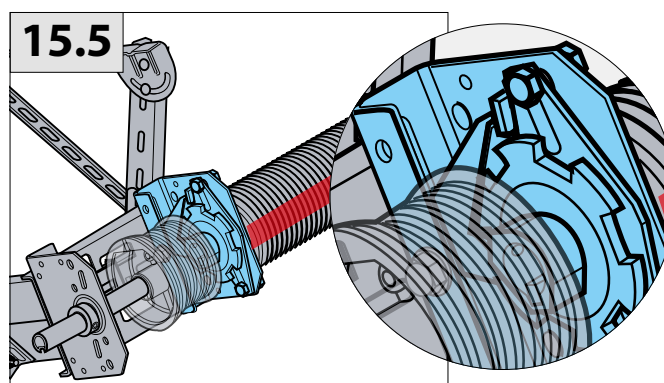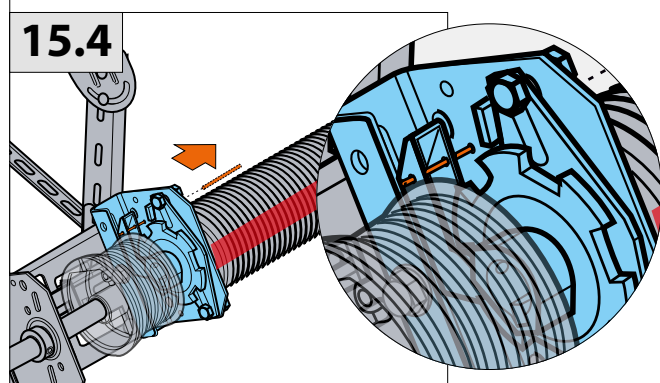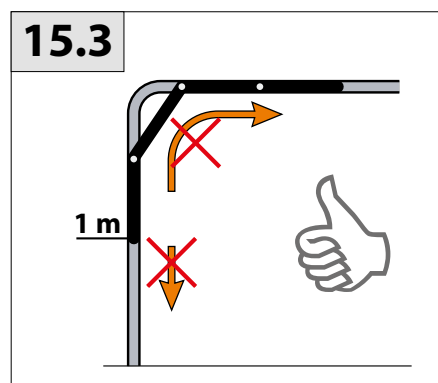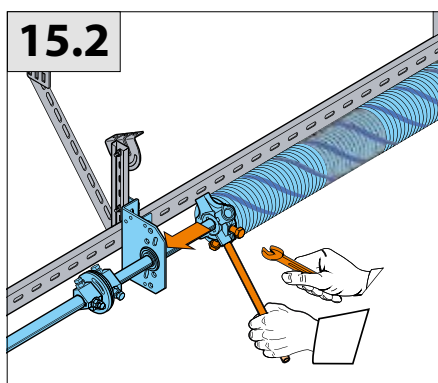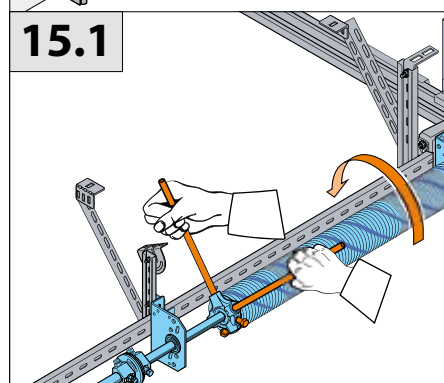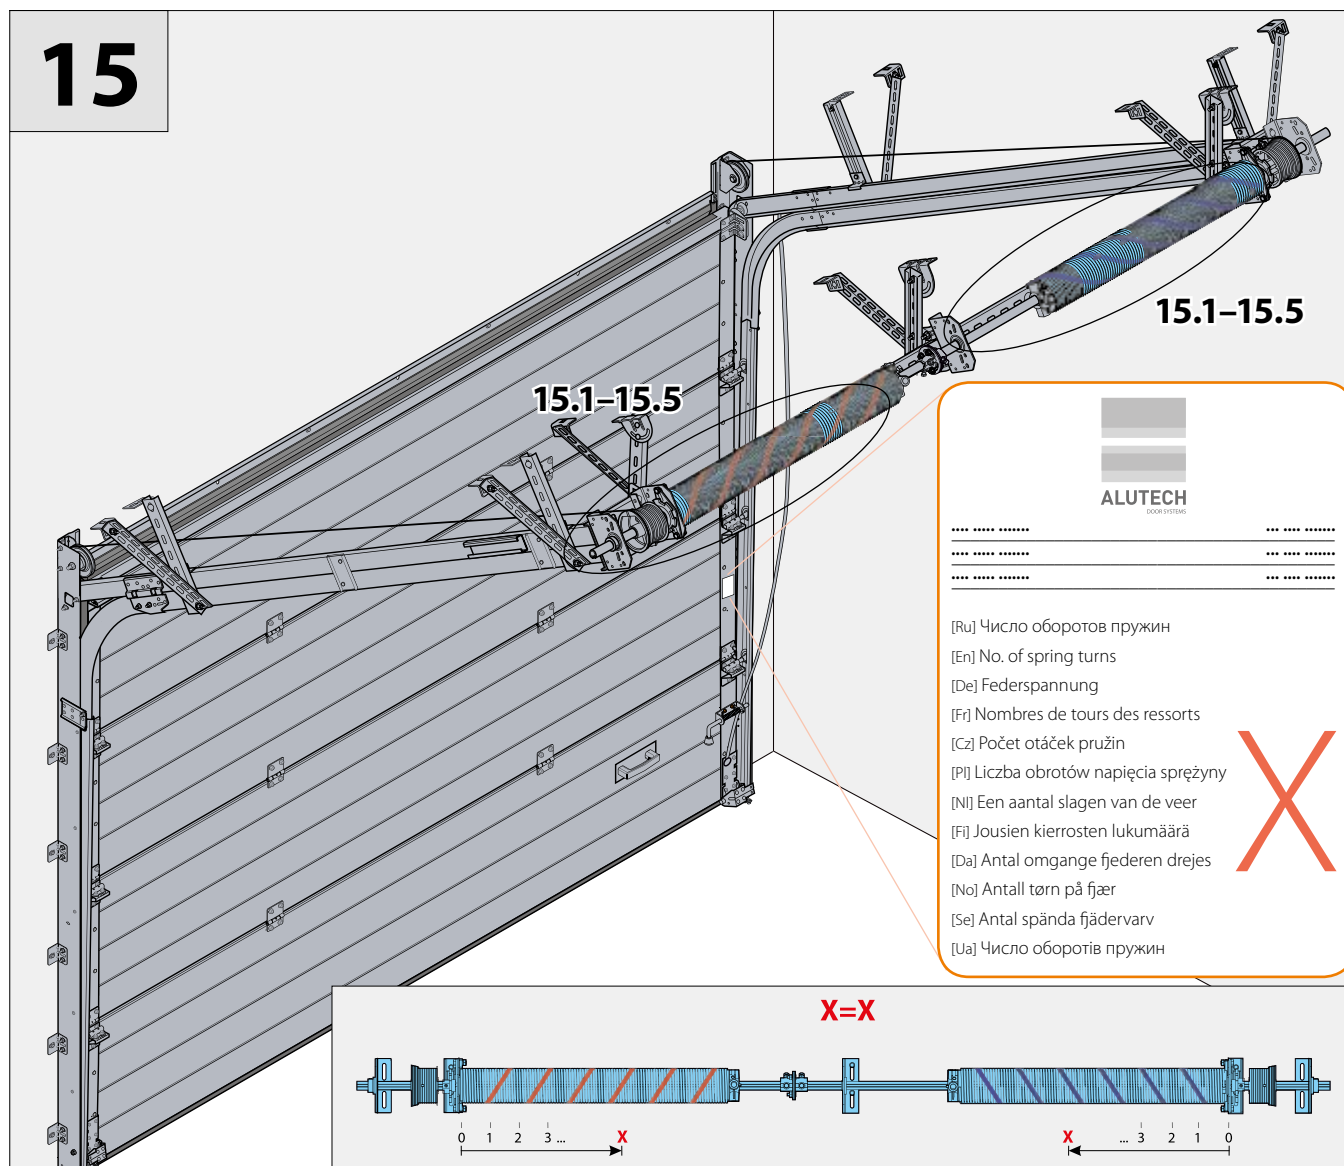

16

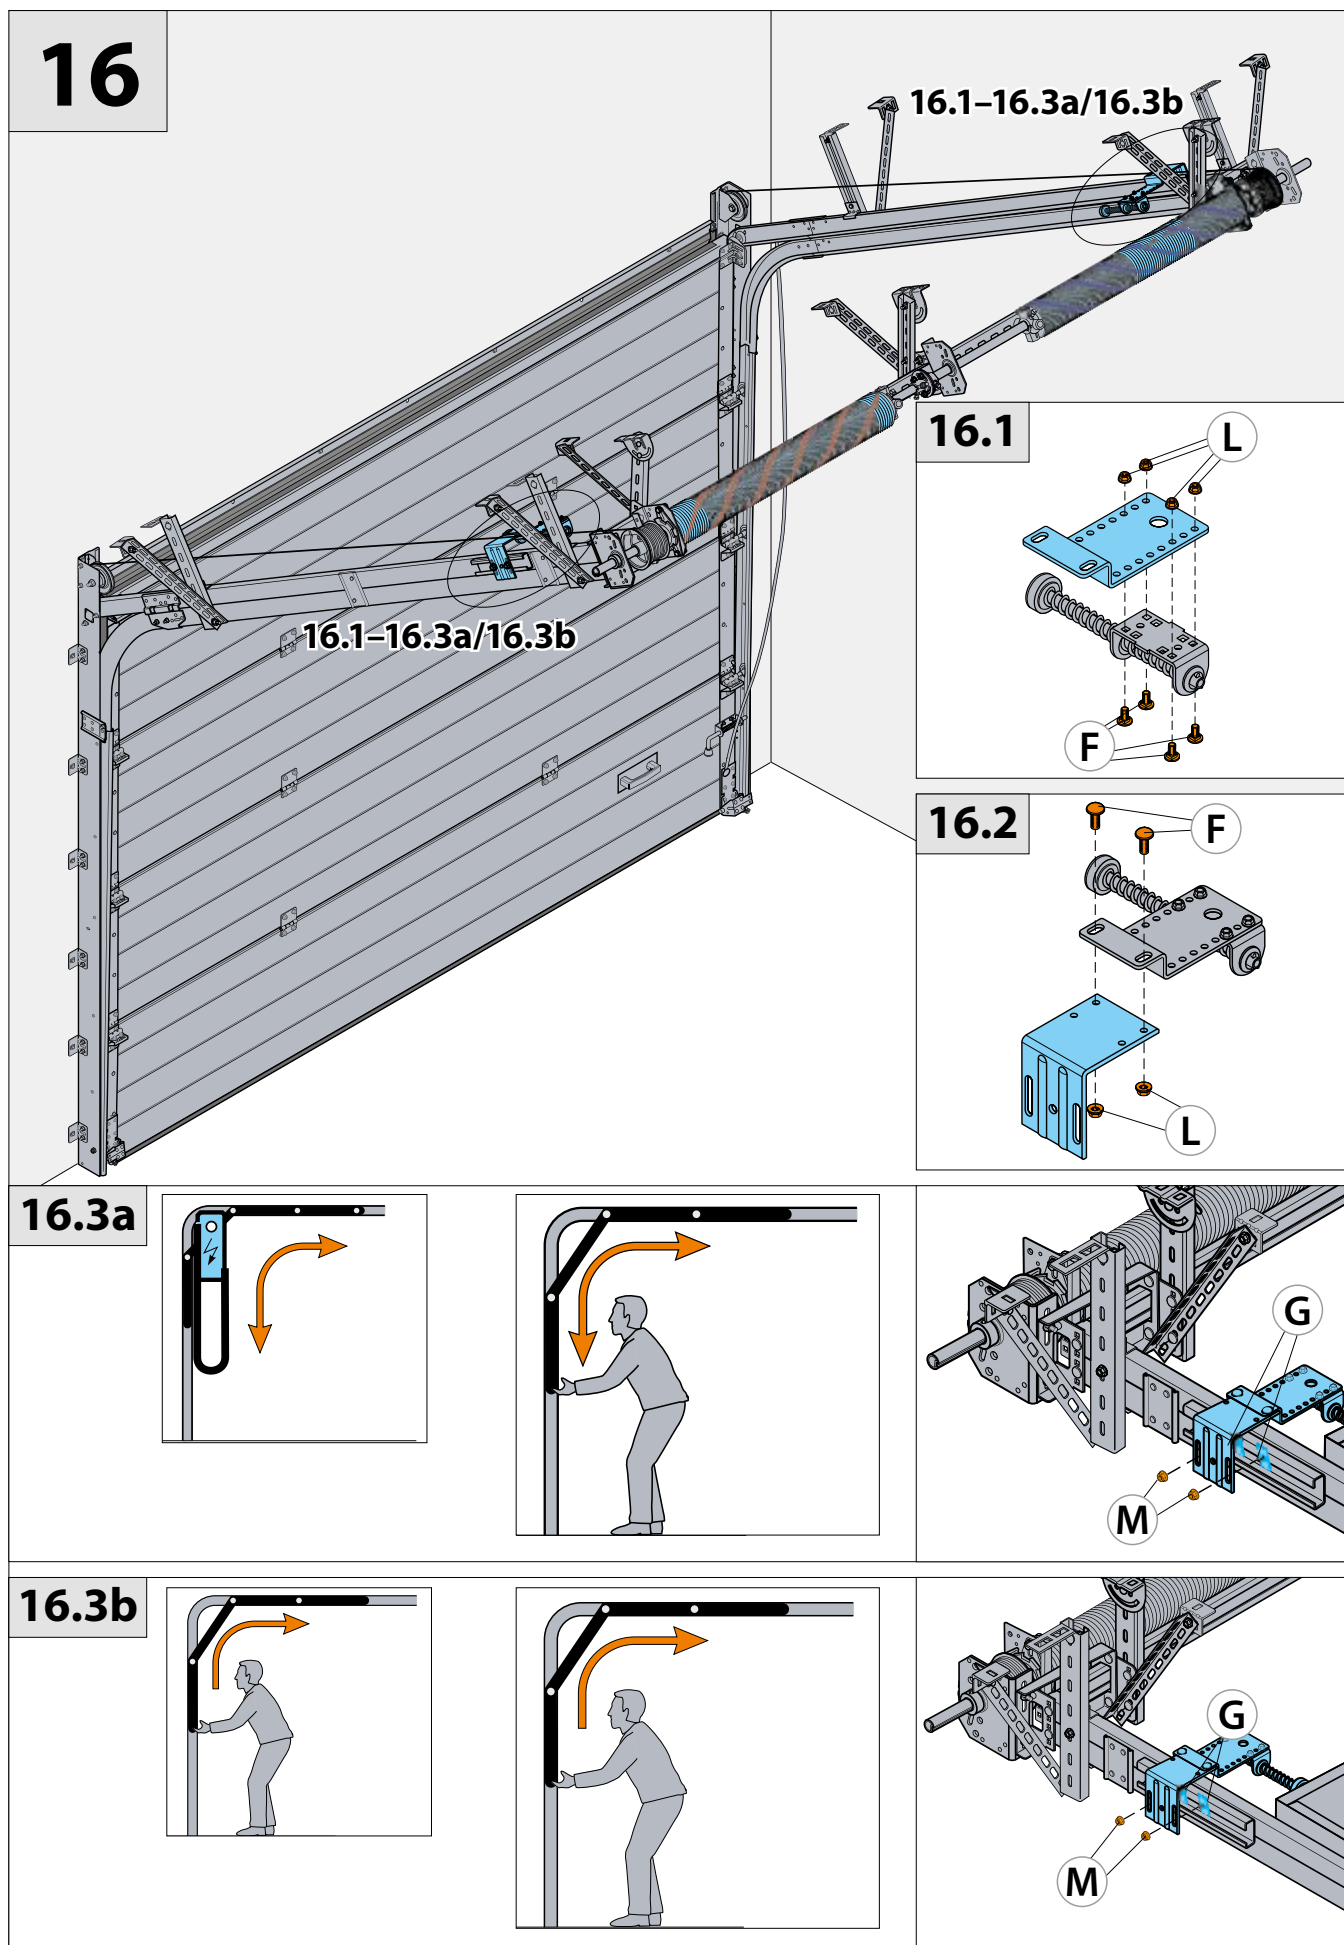

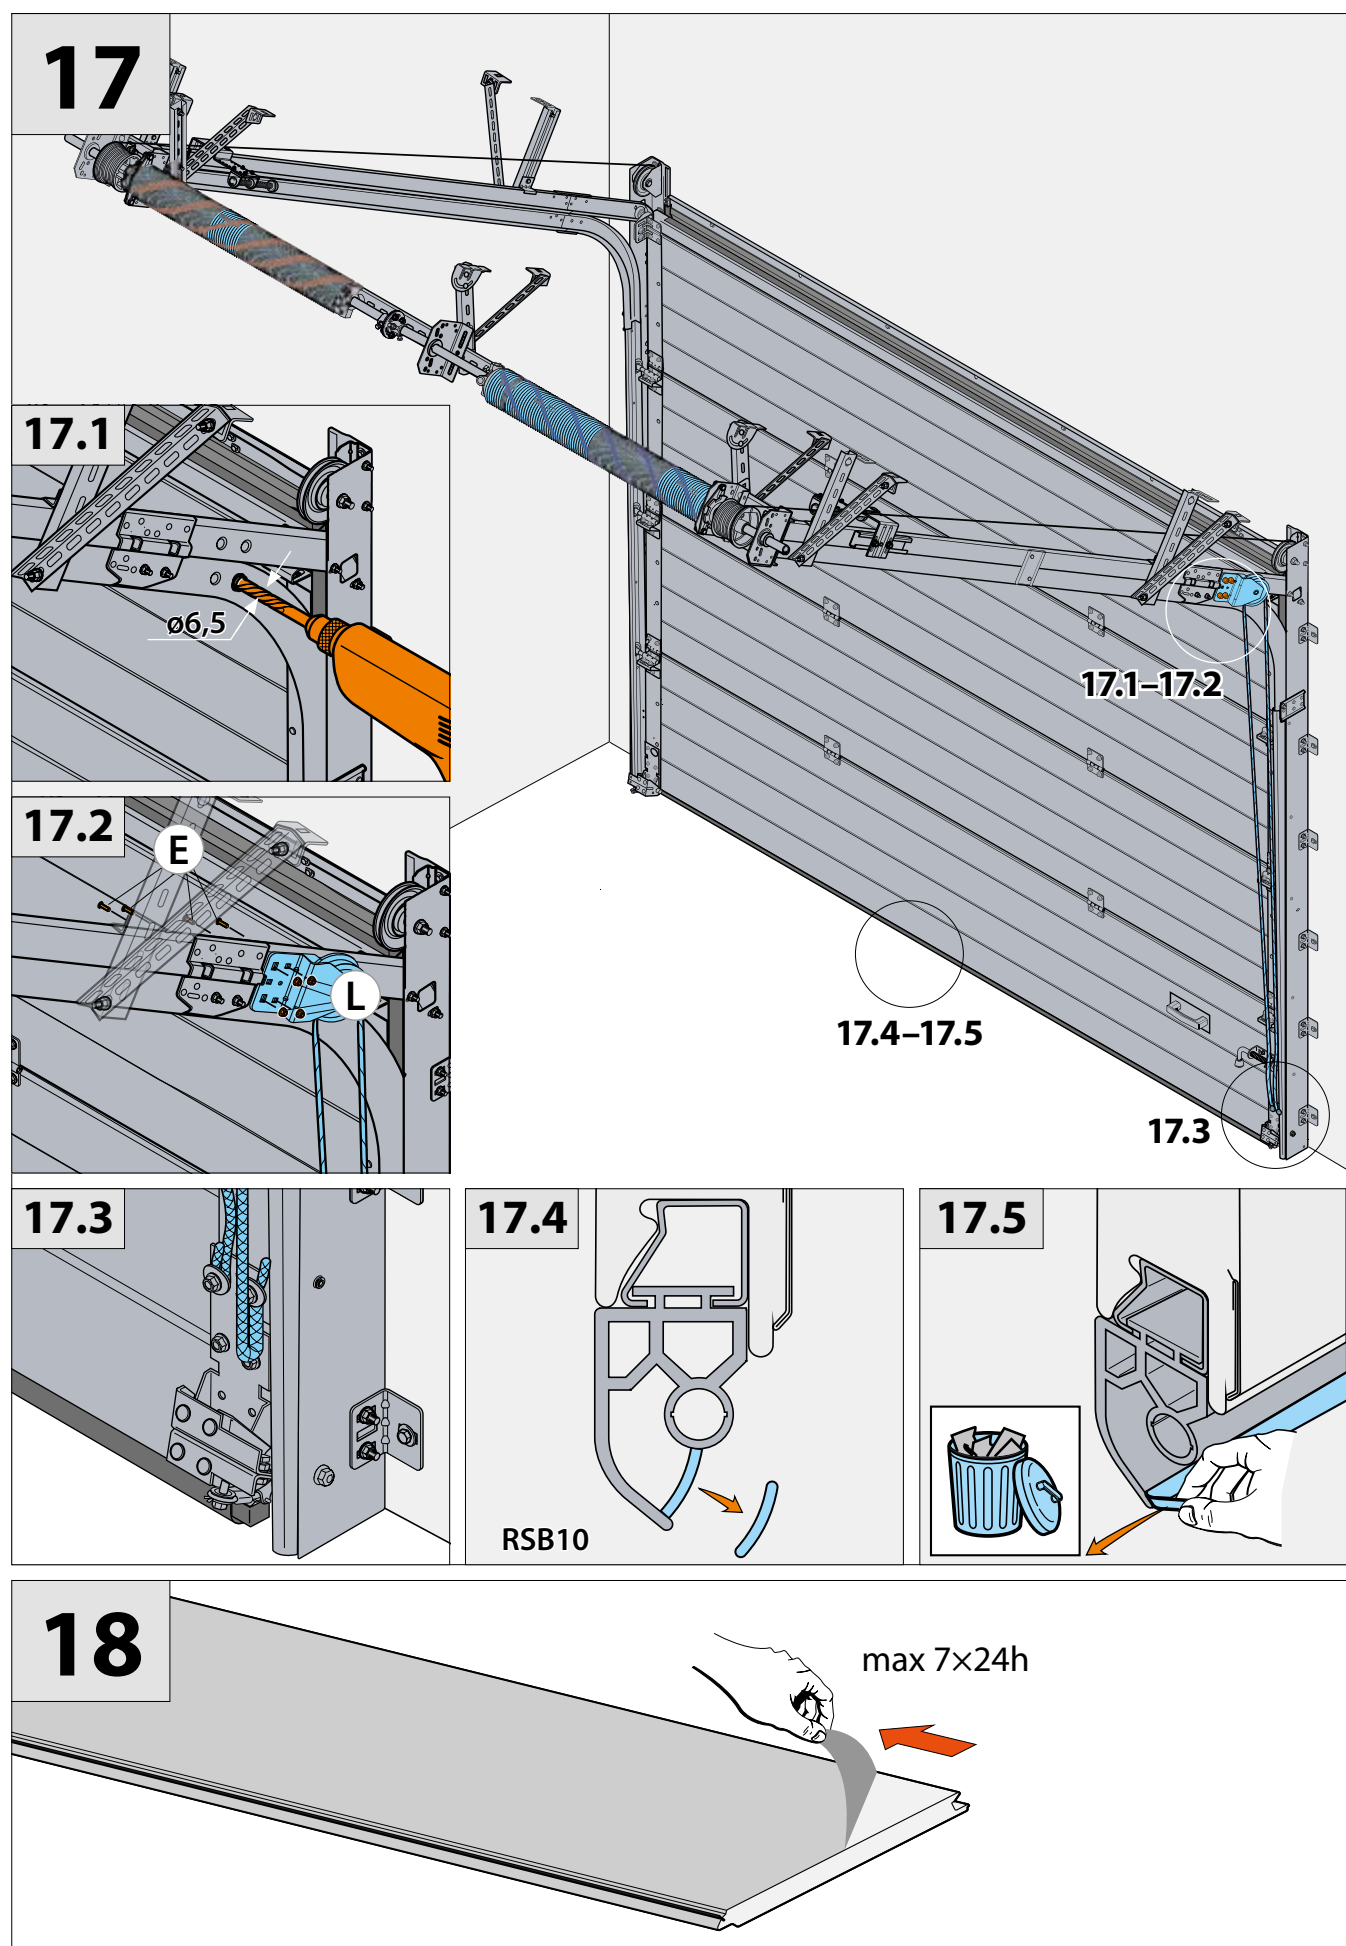

19

