



SPRINT NS / HS / VS

MONTAGEHANDLEIDING - ASSEMBLY MANUAL - MONTAGEANLEITUNG - MANUEL DE MONTAGE

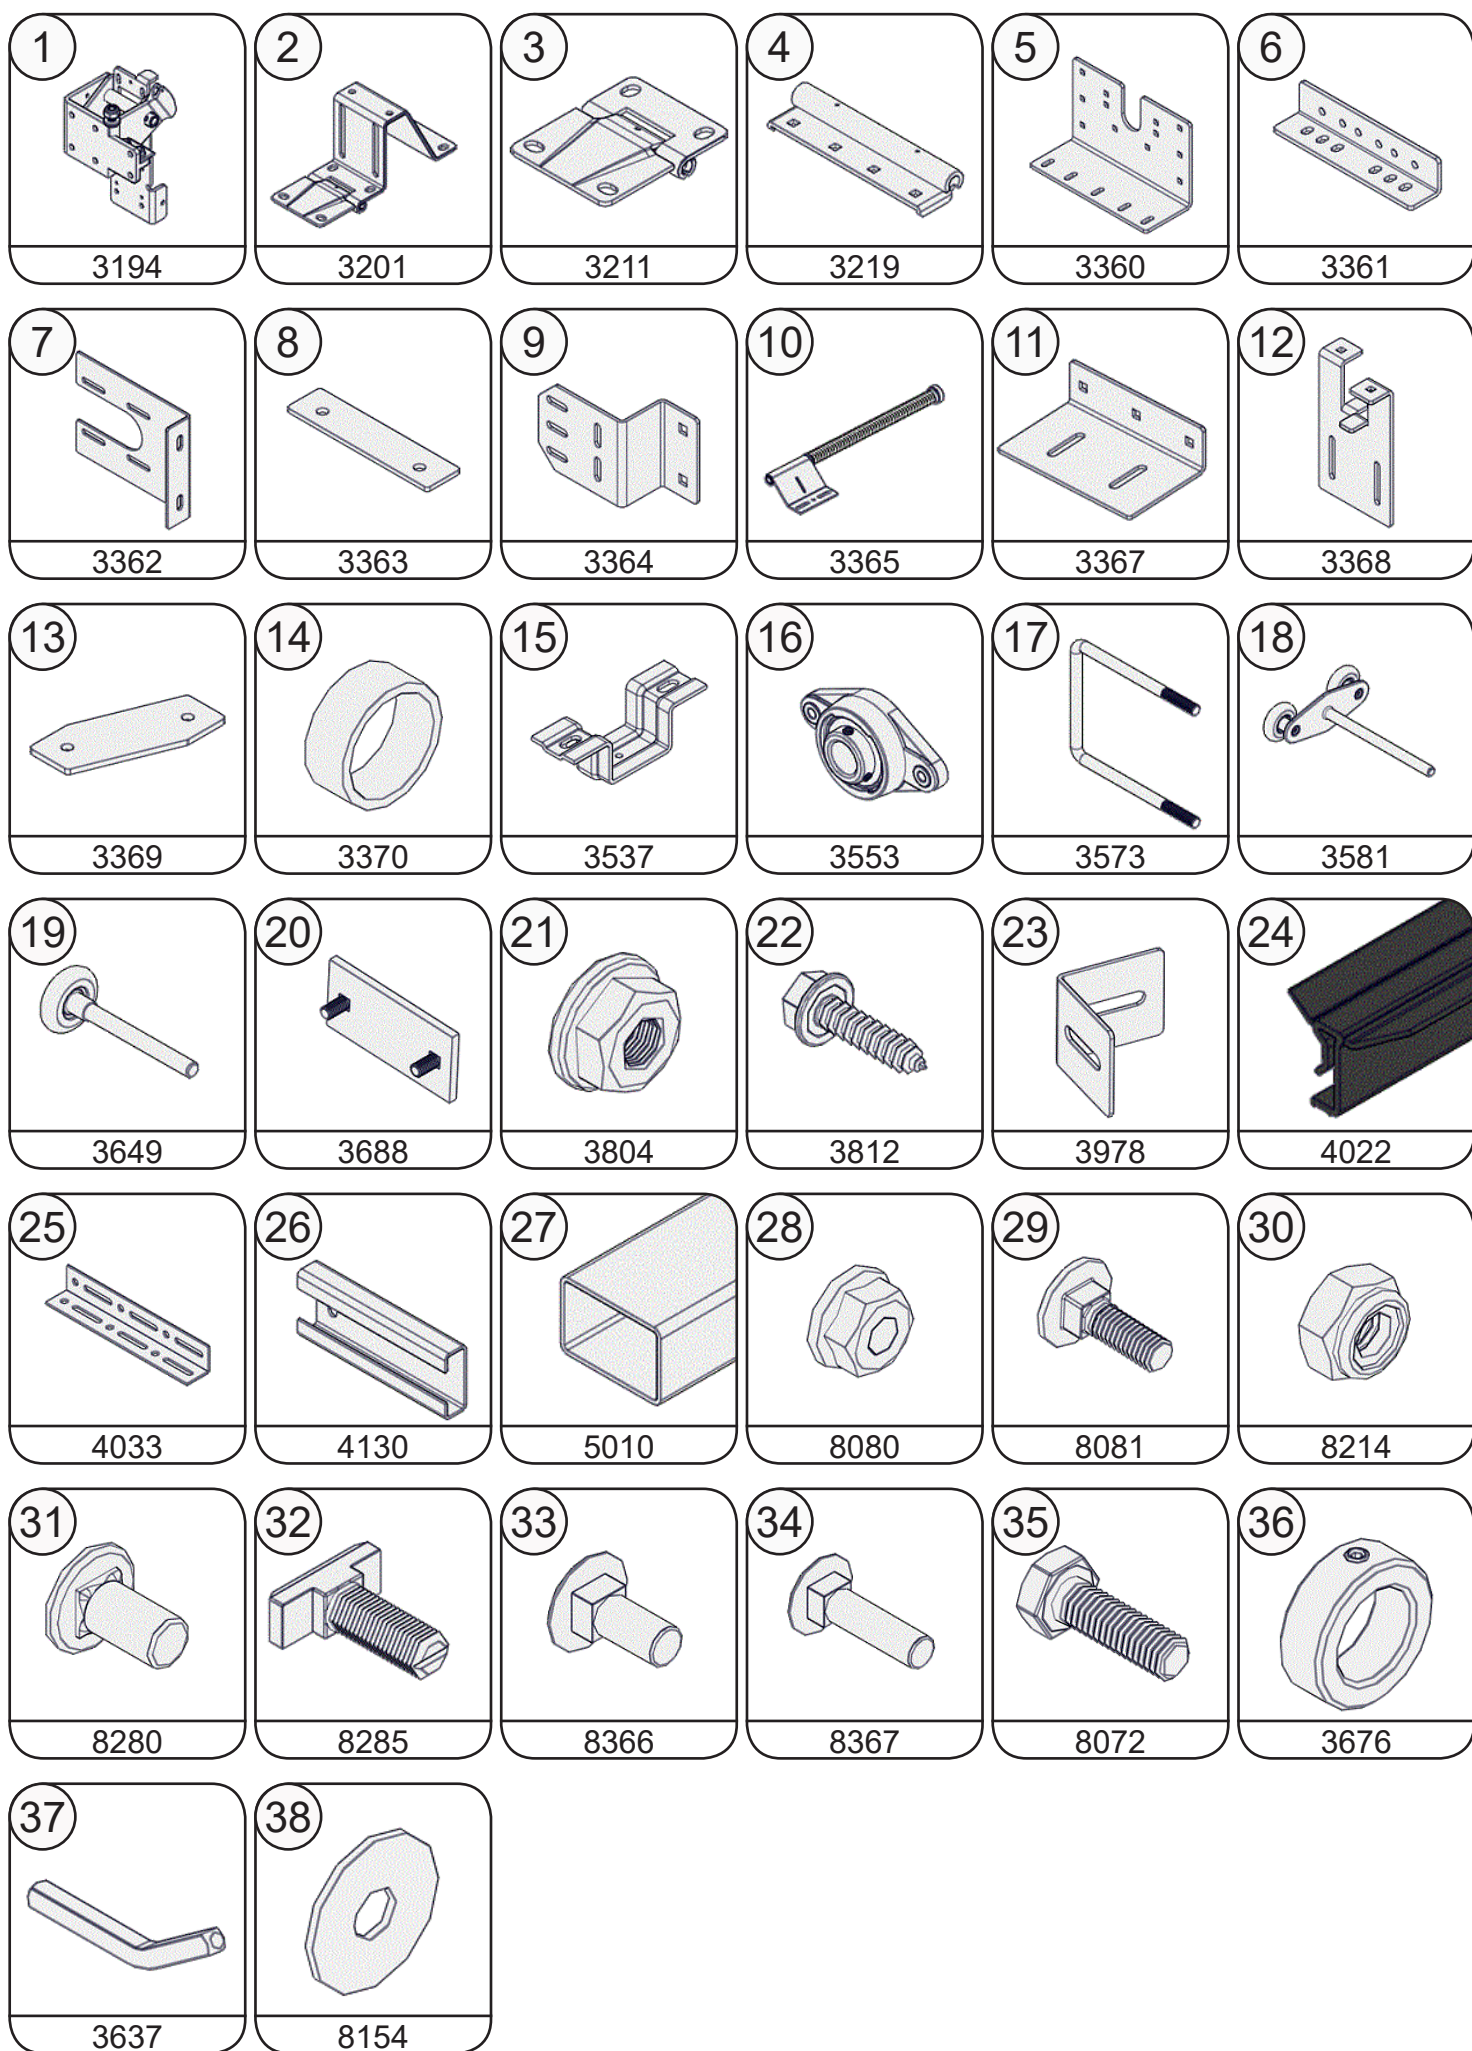

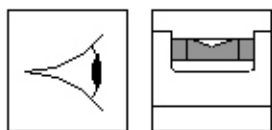






EN 12604

EN 12453

EN 13241

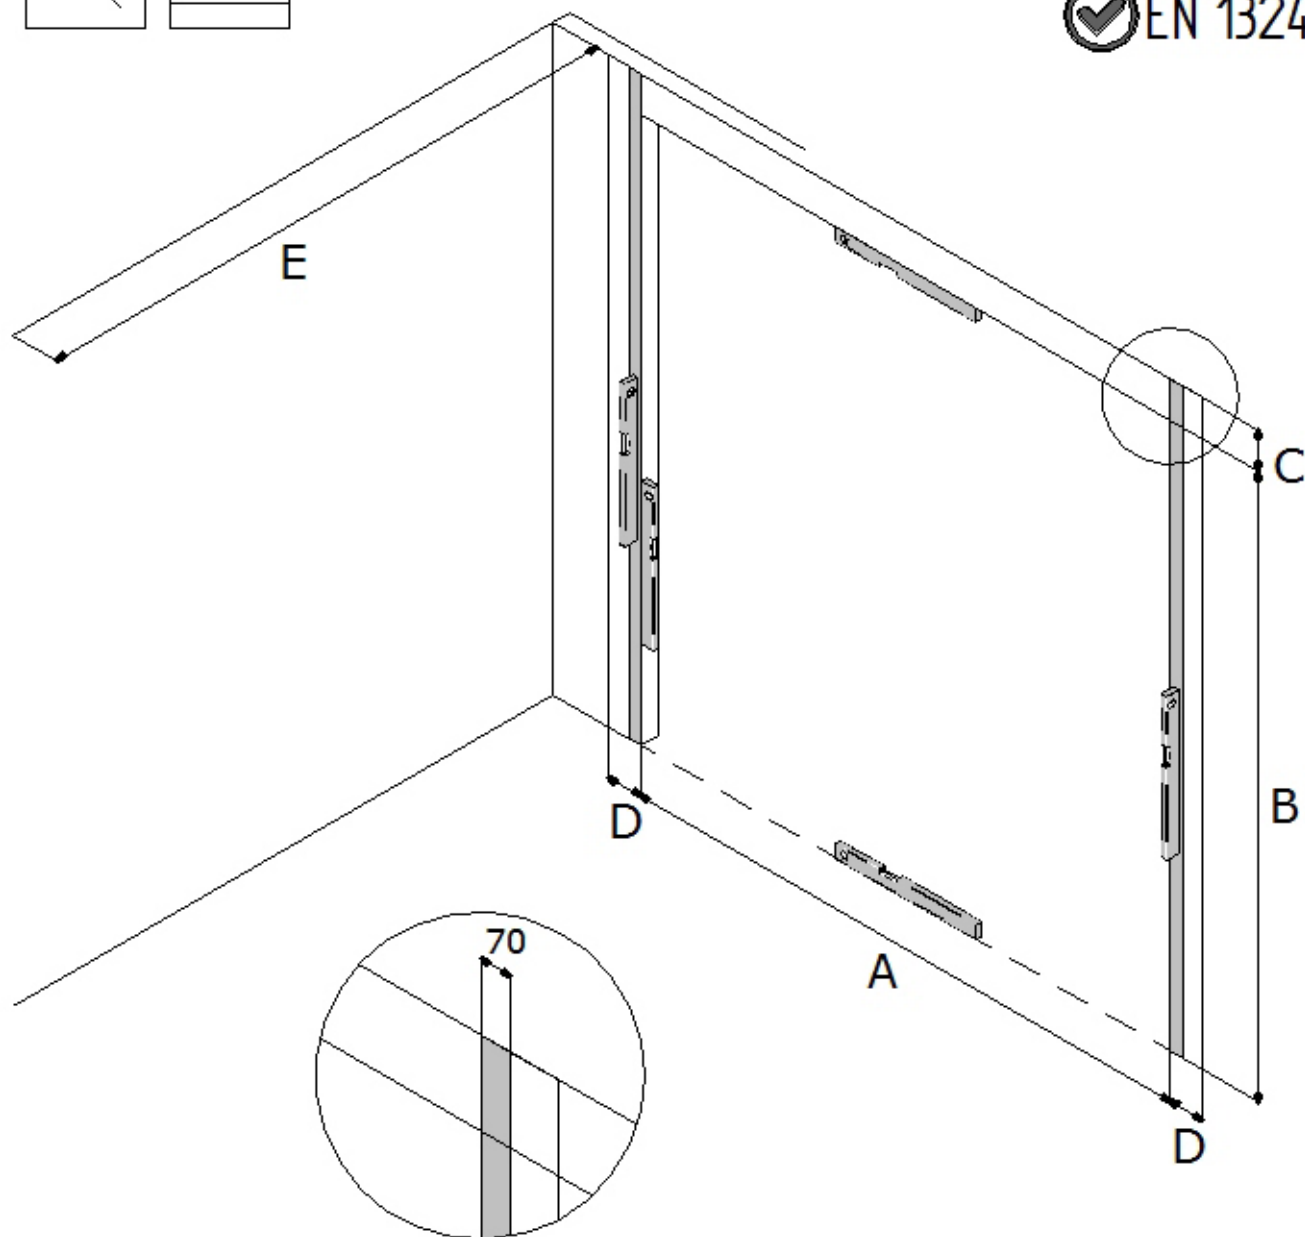

	A	B	C	D	E
	DLW	DLH	FHR	FSR	FMD
NL	Dagmaat breedte	Dagmaat hoogte	Vrije bovenruimte	Vrije zijruimte	Inbouwdiepte
EN	Day Light Width	Day Light Height	Free Head Room	Free Side Room	Free Mounting Depth
DE	Tageslichtbreite	Tageslichthöhe	Sturzfreiraum	Freie Seitenraum	Freie Einbautiefe
FR	Largeur de baie	Hauteur de baie	Linteau disponible	Ecoinçons Requis	Recul
RO	Lățime Gol	Înălțime Gol	Buiandrug Liber	Spațiul Liber Lateral	Spațiul Liber în Adâncime
HU	Szélesség	Magasság	Szabad szemöldök magasság	Szabad hely oldalt	Szabad beépítési mélység
SE	Dager bredd	Dager höjd	Minsta erforderligt höjdutrymme	Fritt sidoutrymme	Fritt monterings utrymme

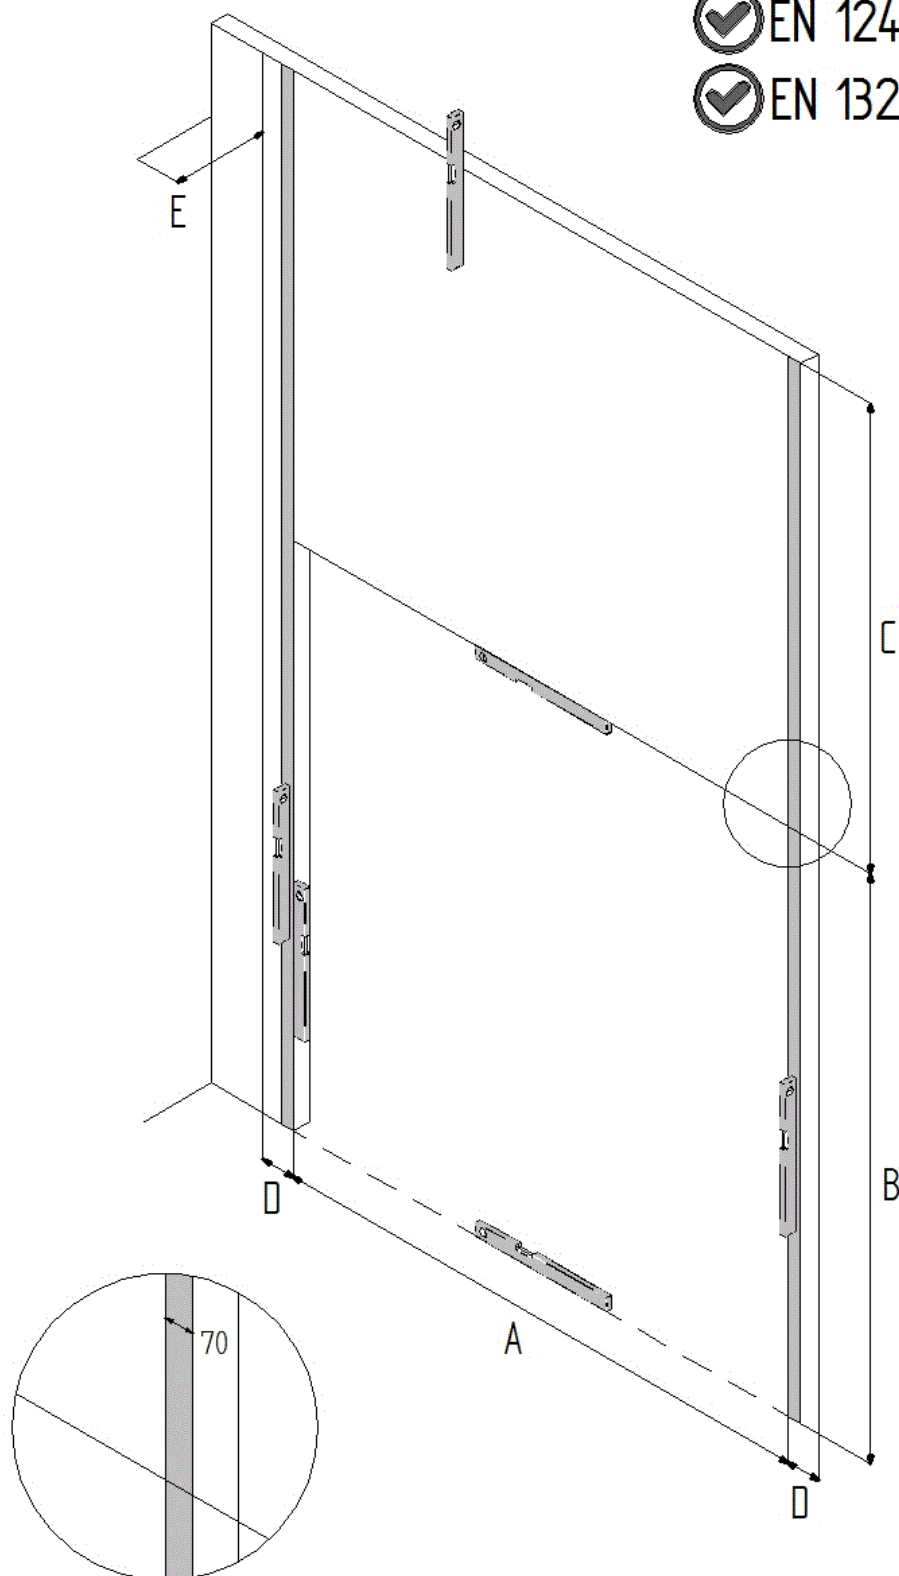

	A	B	C	D	E
	DLW	DLH	FHR	FSR	FMD
NL	Dagmaat breedte	Dagmaat hoogte	Vrije bovenruimte	Vrije zijruimte	Inbouwdiepte
EN	Day Light Width	Day Light Height	Free Head Room	Free Side Room	Free Mounting Depth
DE	Tageslichtbreite	Tageslichthöhe	Sturzfreiraum	Freie Seitenraum	Freie Einbautiefe
FR	Largeur de baie	Hauteur de baie	Linteau disponible	Ecoinçons Requis	Recul
RO	Lățime Gol	Înălțime Gol	Buiandrug Liber	Spațiul Liber Lateral	Spațiul Liber în Adâncime
HU	Szélesség	Magasság	Szabad szemöldök magasság	Szabad hely oldalt	Szabad beépítési mélység
SE	Dager bredd	Dager höjd	Minsta erforderligt höjdutrymme	Fritt sidoutrymme	Fritt monterings utrymme

NS + HS

L + R

1x 24

L + R

L + R

3x 30

1x 6

3x 33

1x 5

L + R

2x 28

1x 10

1x 11

2x 29


17

L (red)

R (black)

RHW (red)

LHW (black)

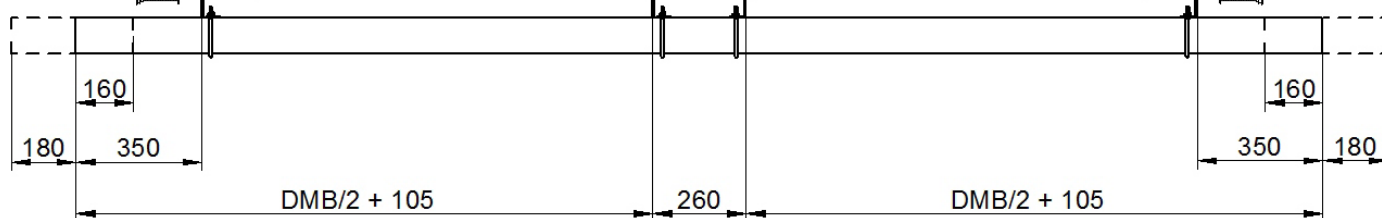


VS

L + R

1x 24



L + R

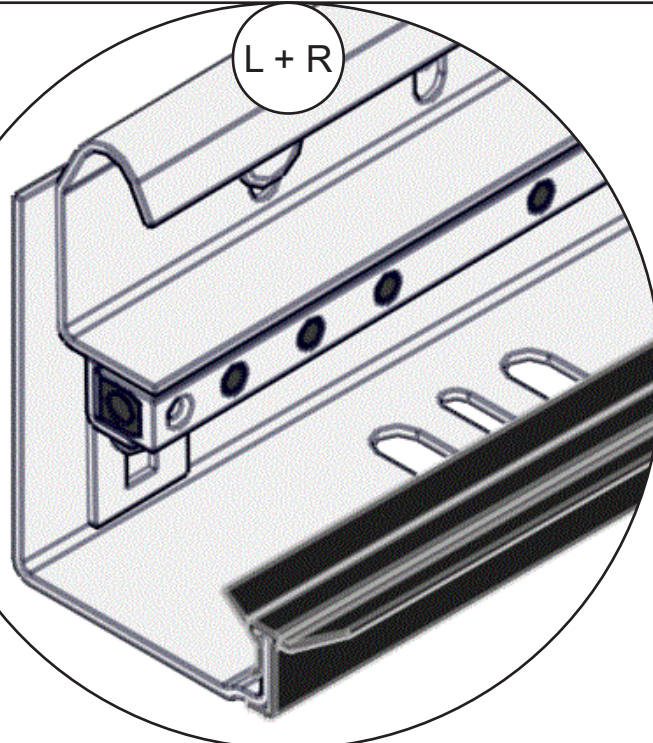


L + R

3x 30


1x 6

3x 33

1x 5

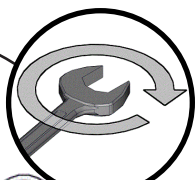

17

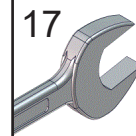


L (red)










R (black)

RHW (red)









LHW (black)


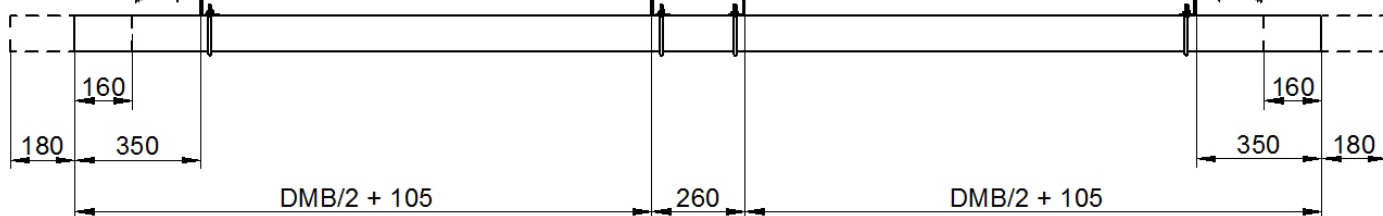




NS

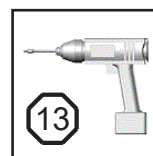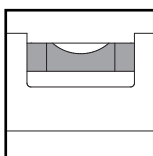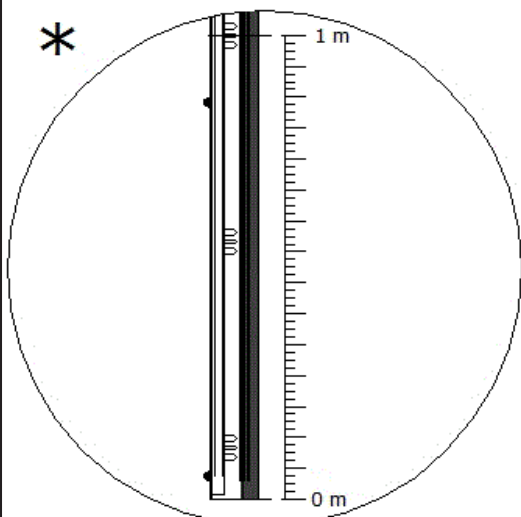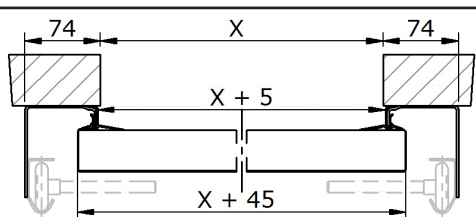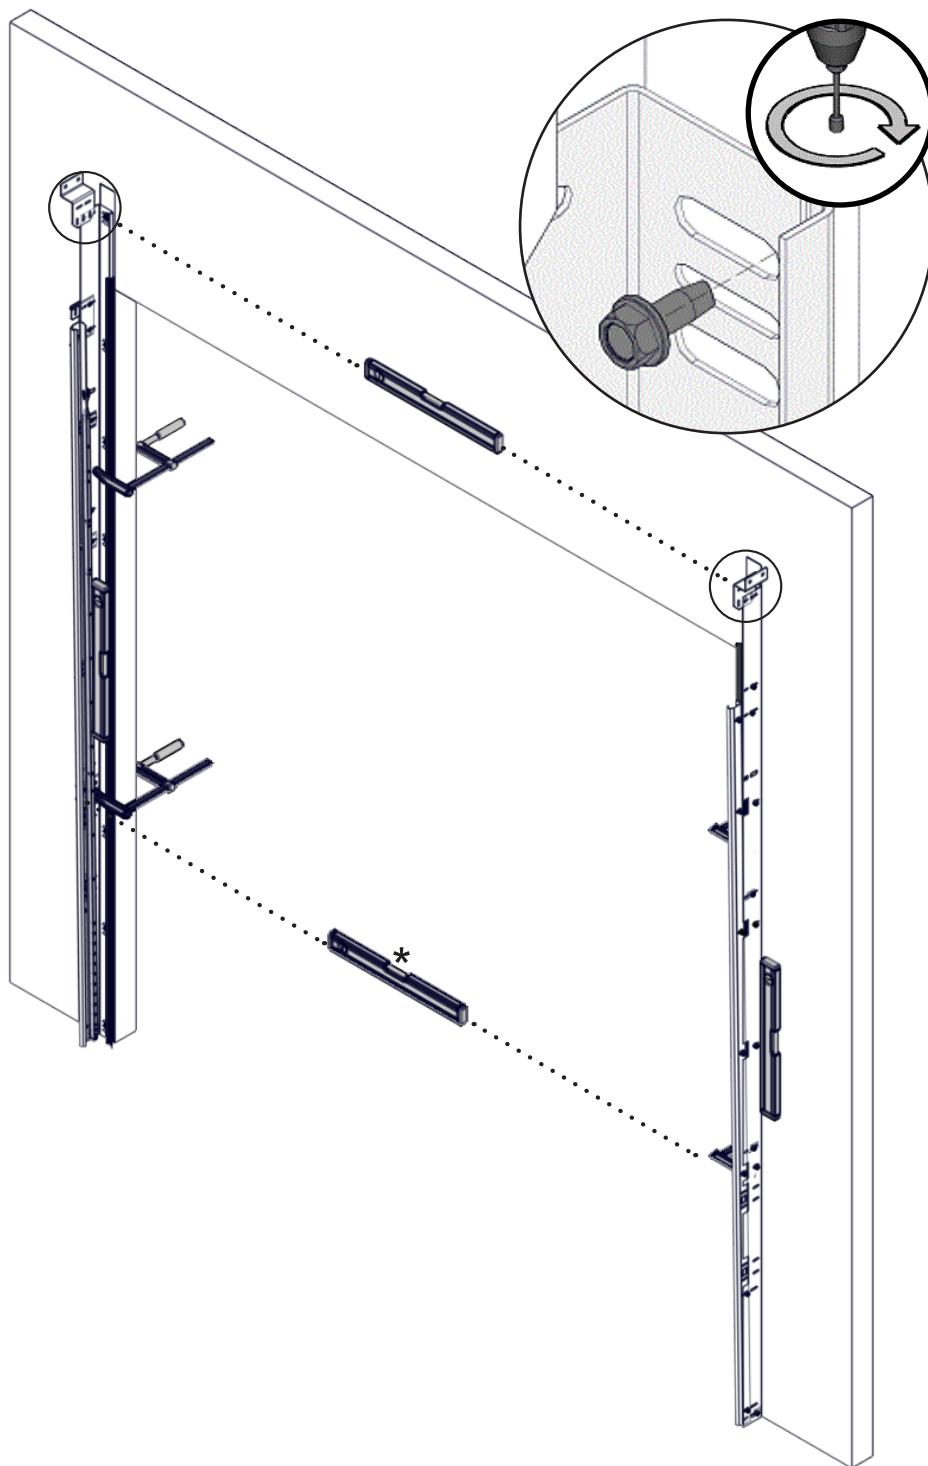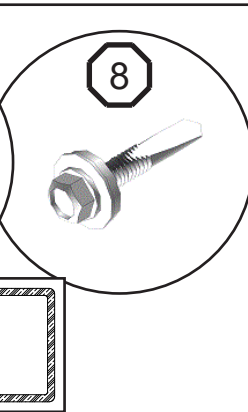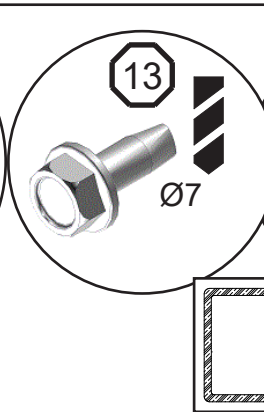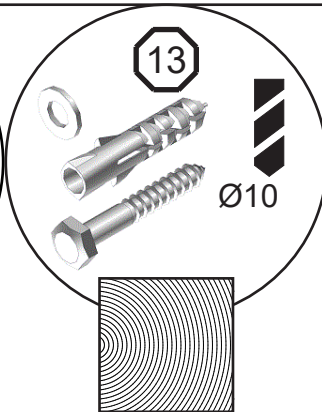
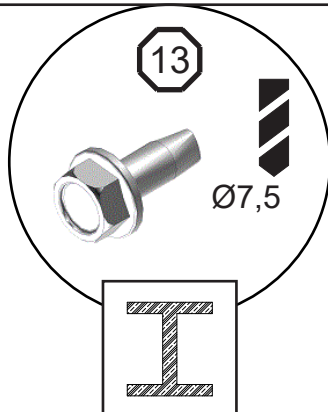


VS

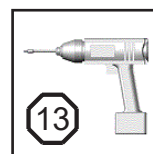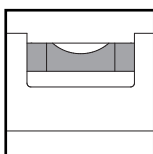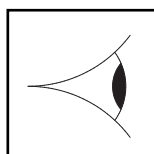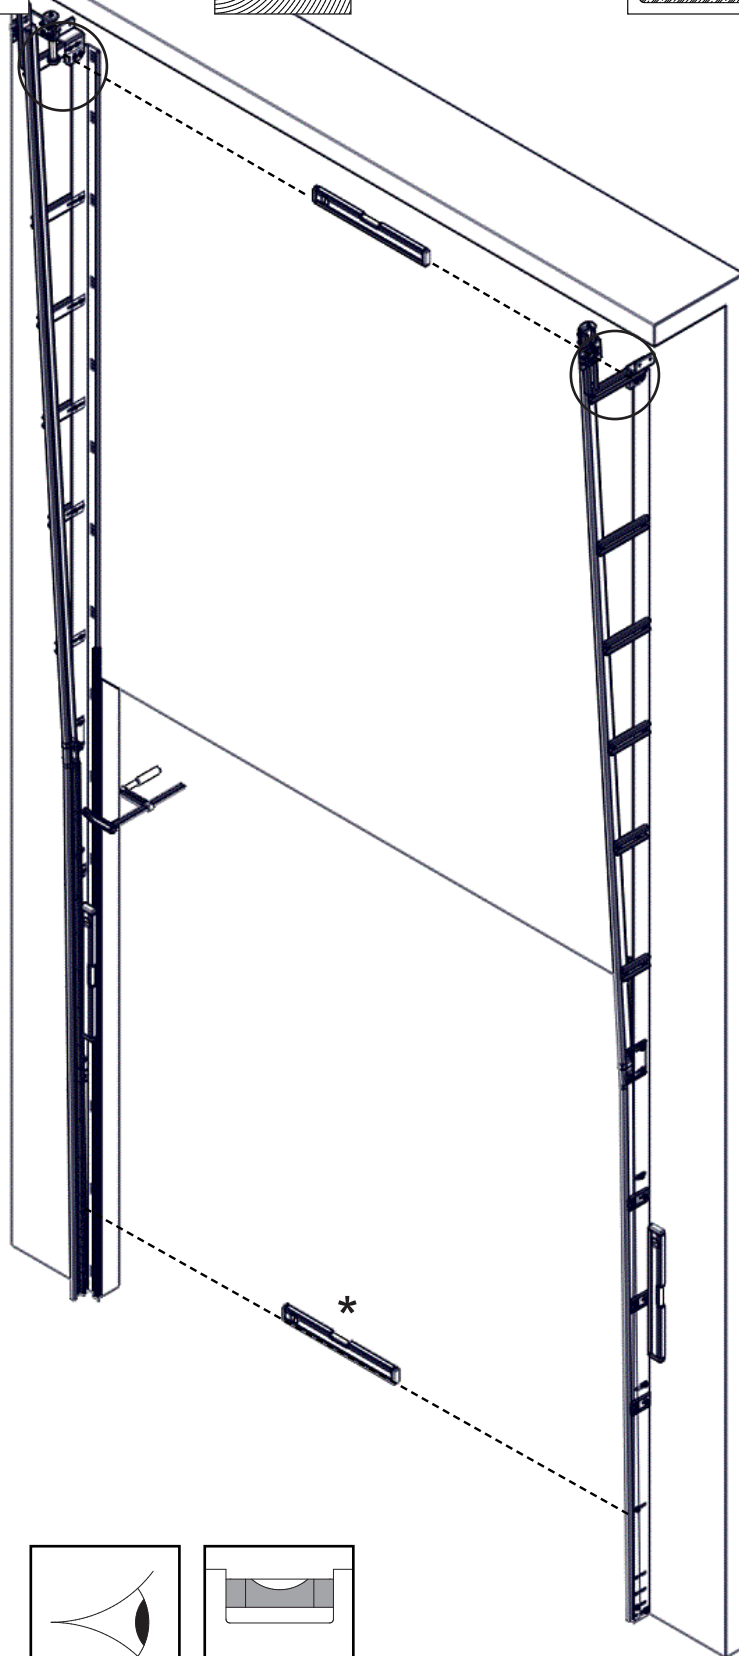
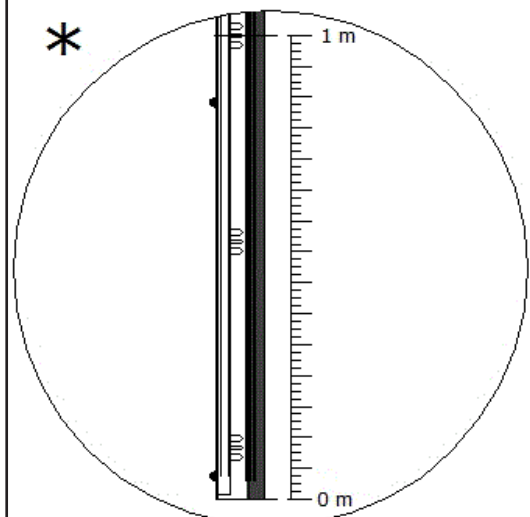
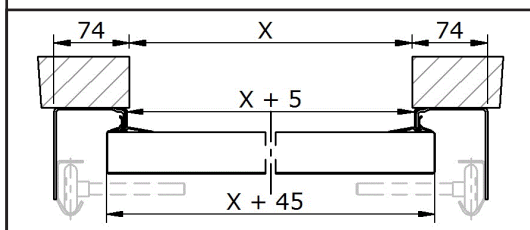
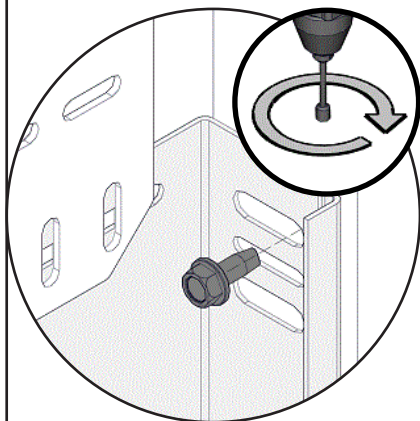
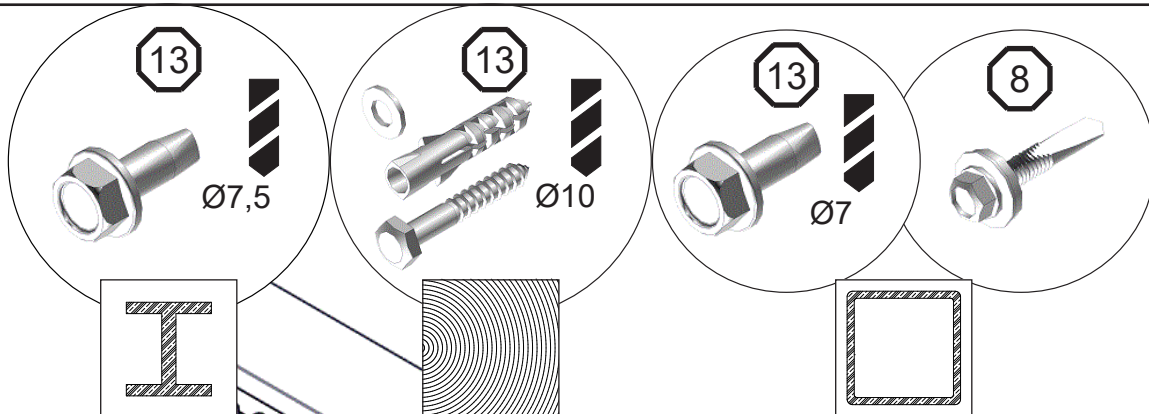


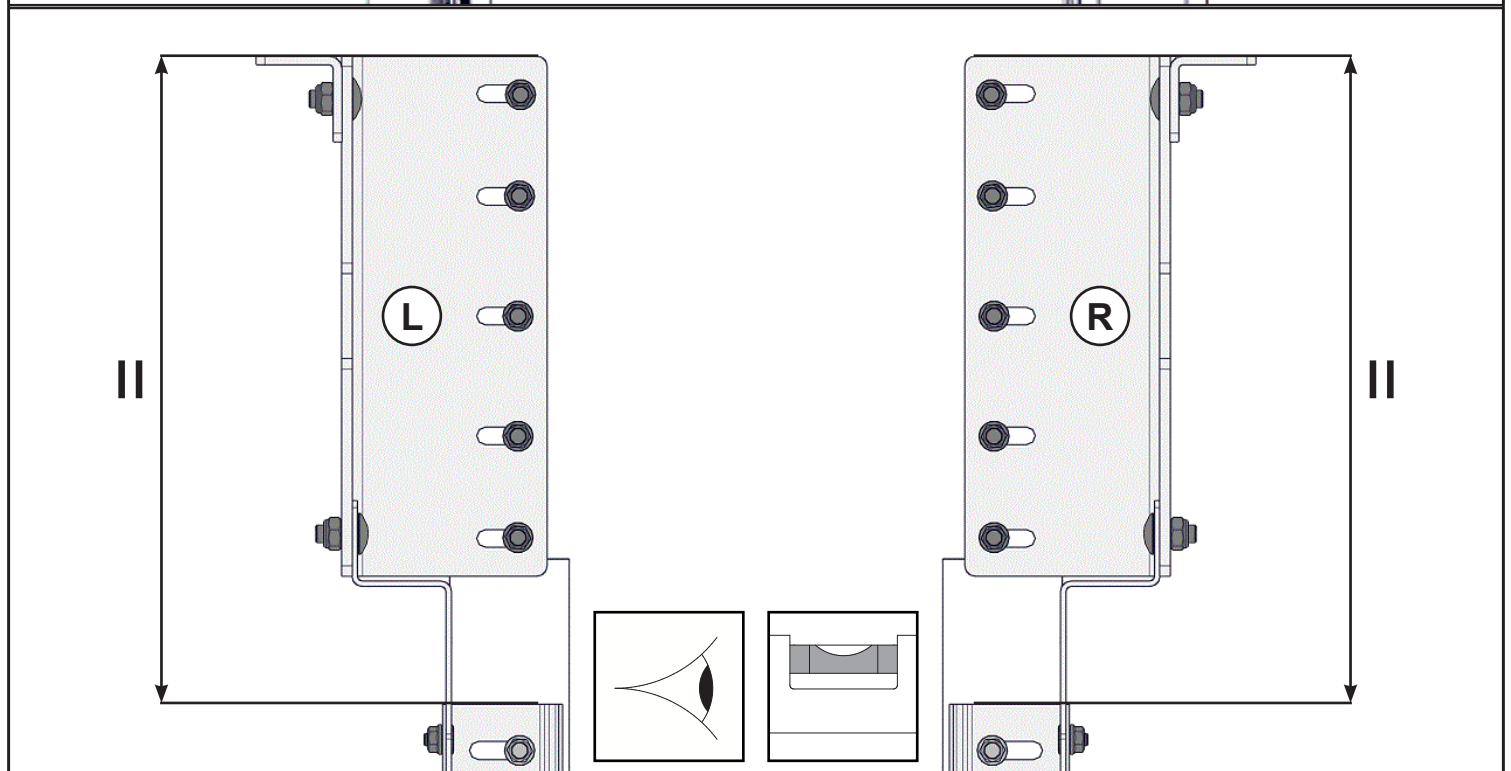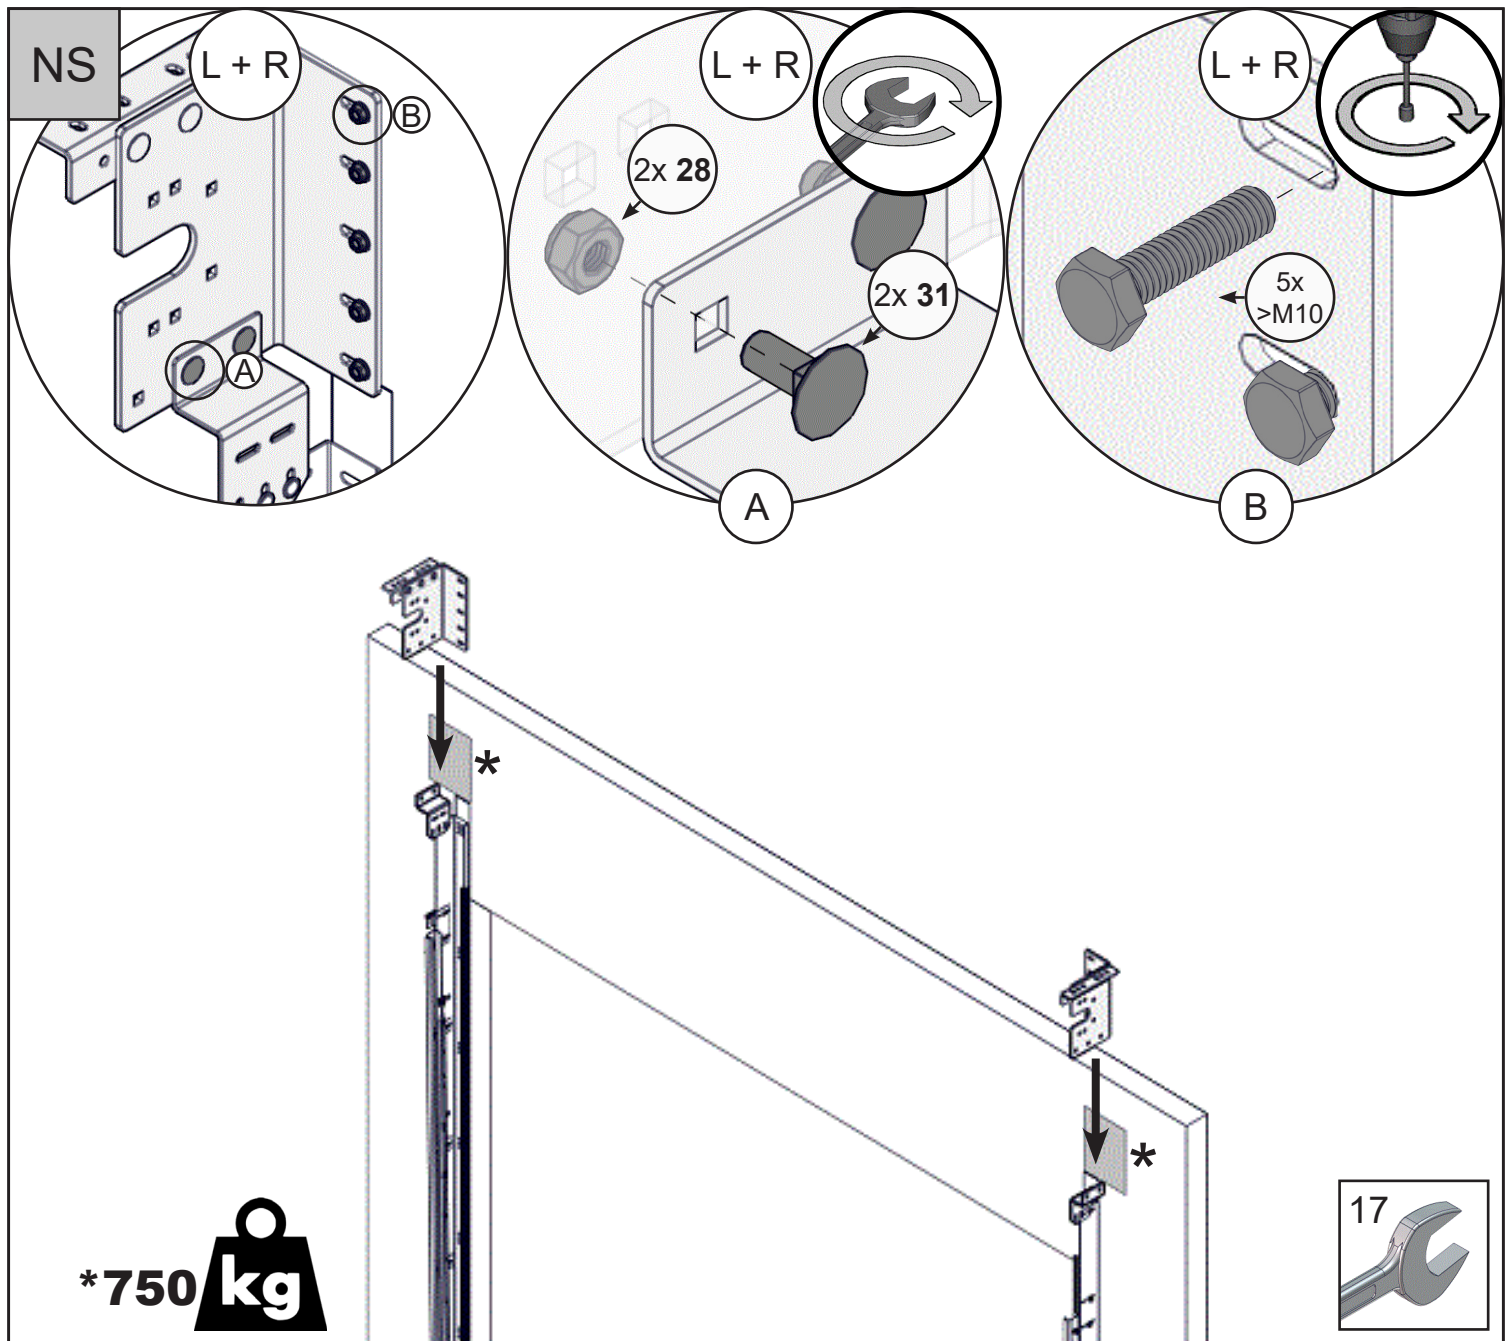





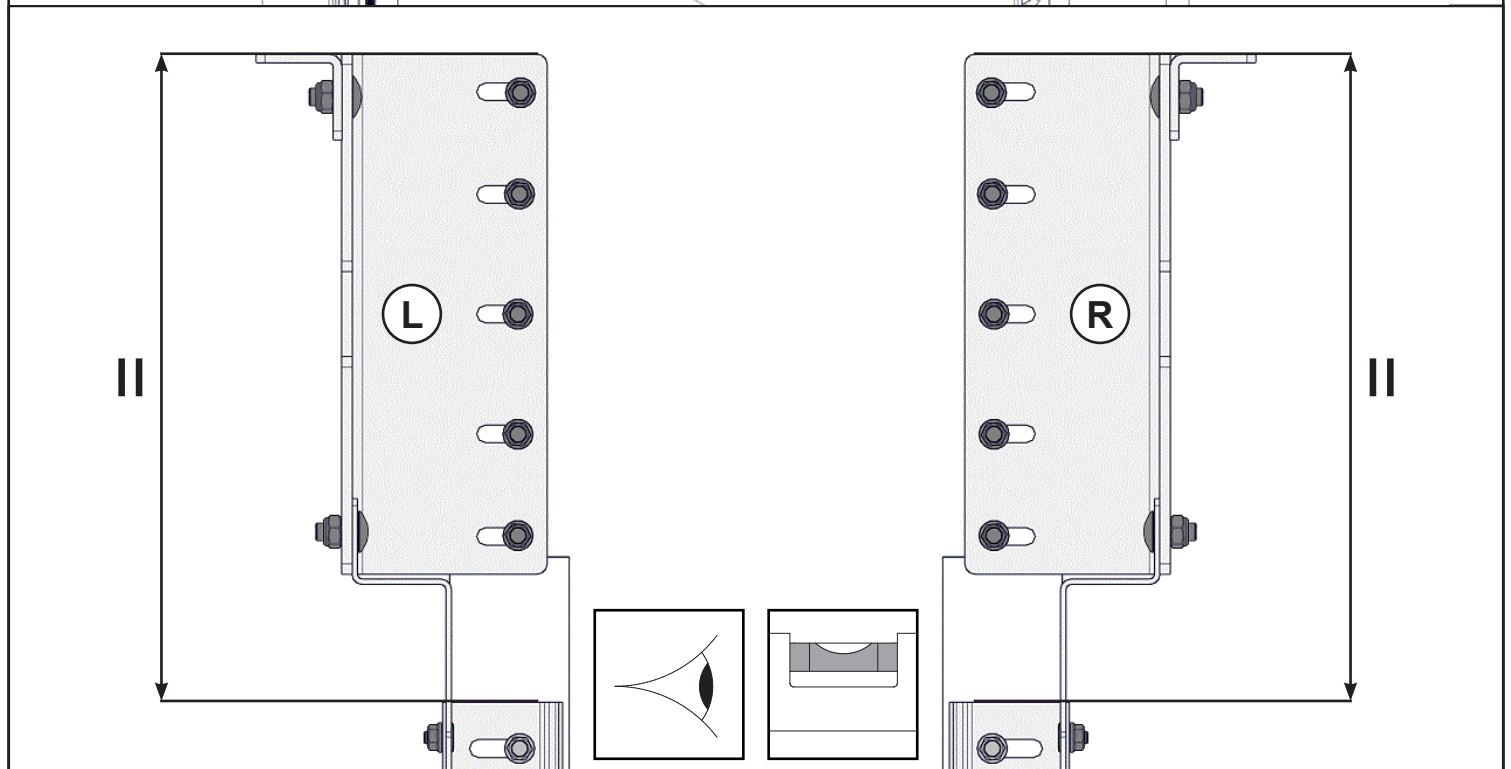
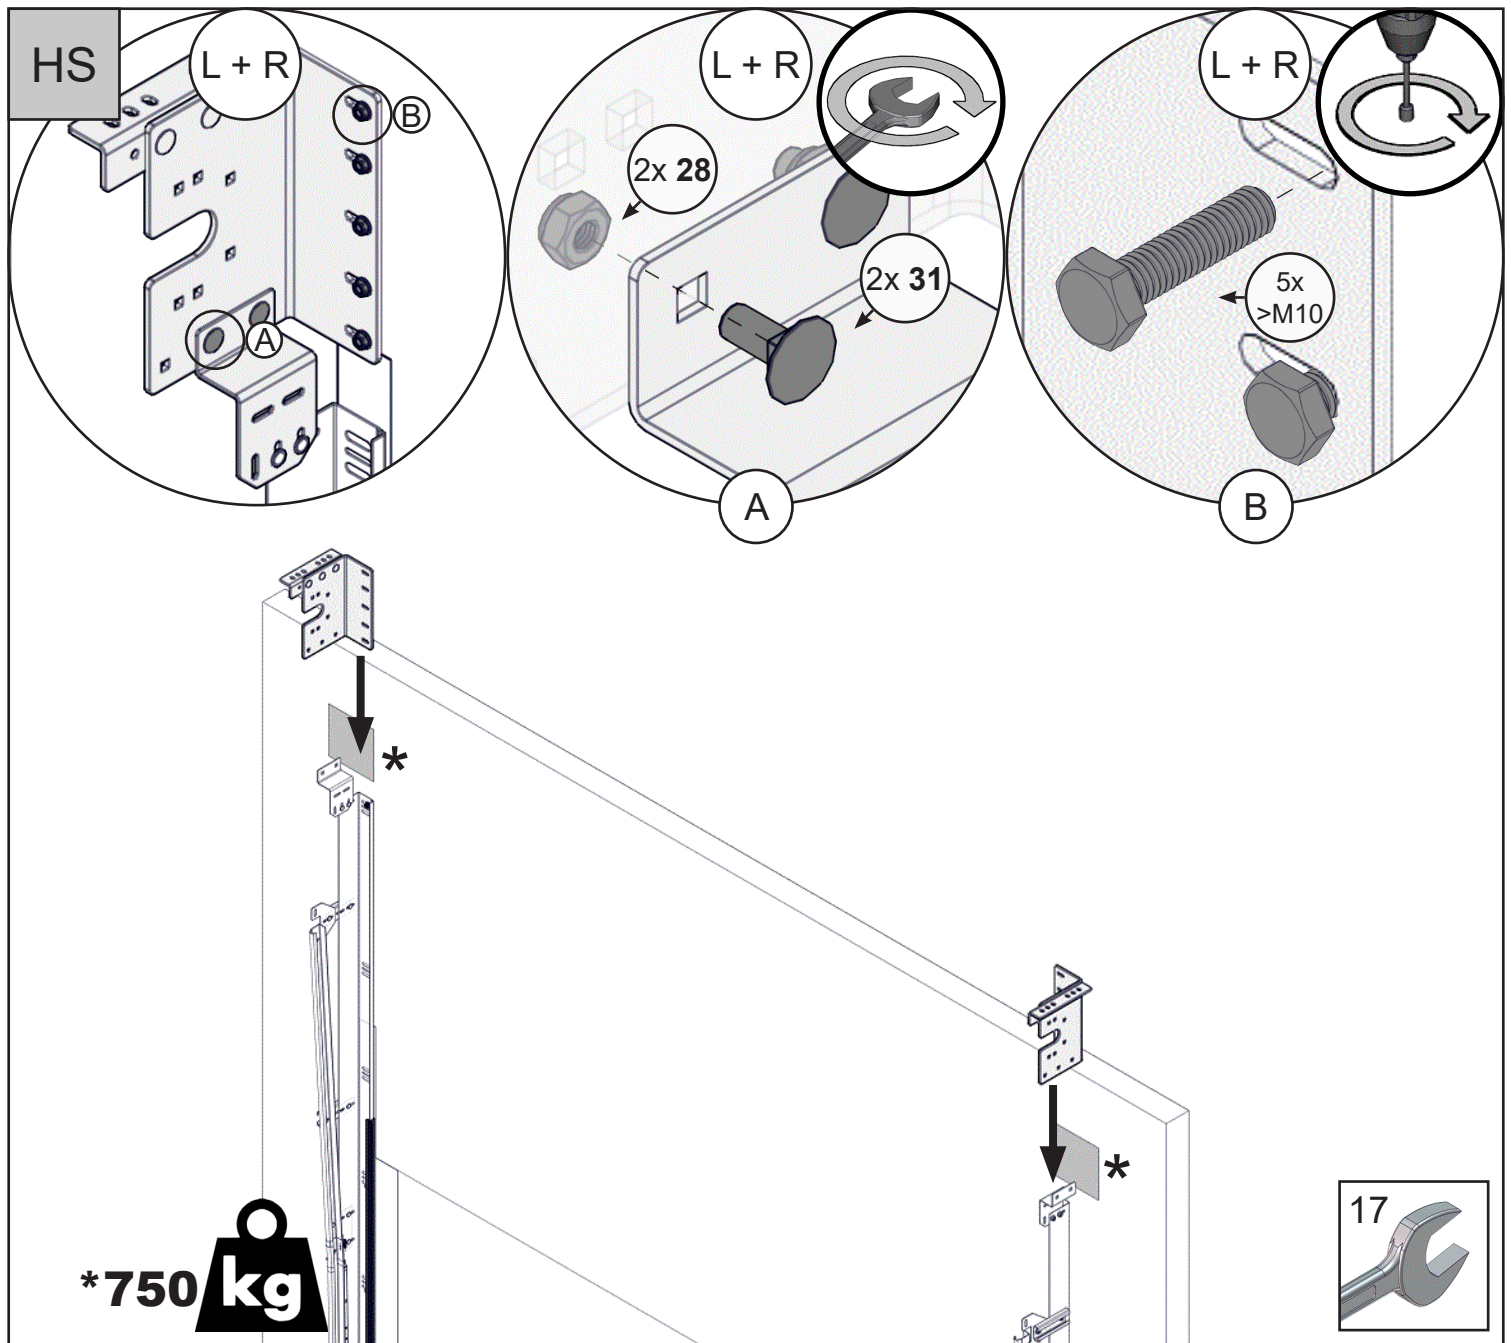


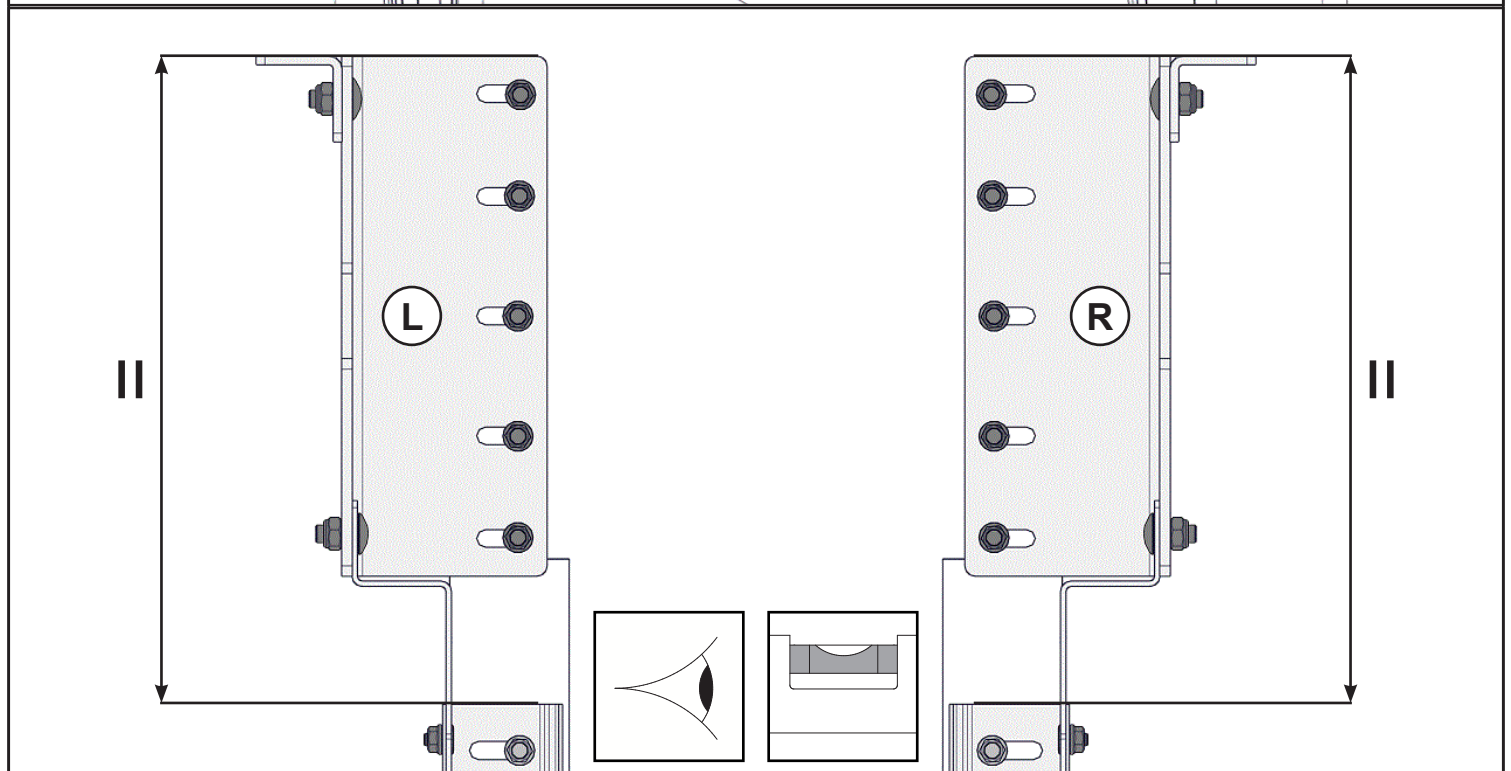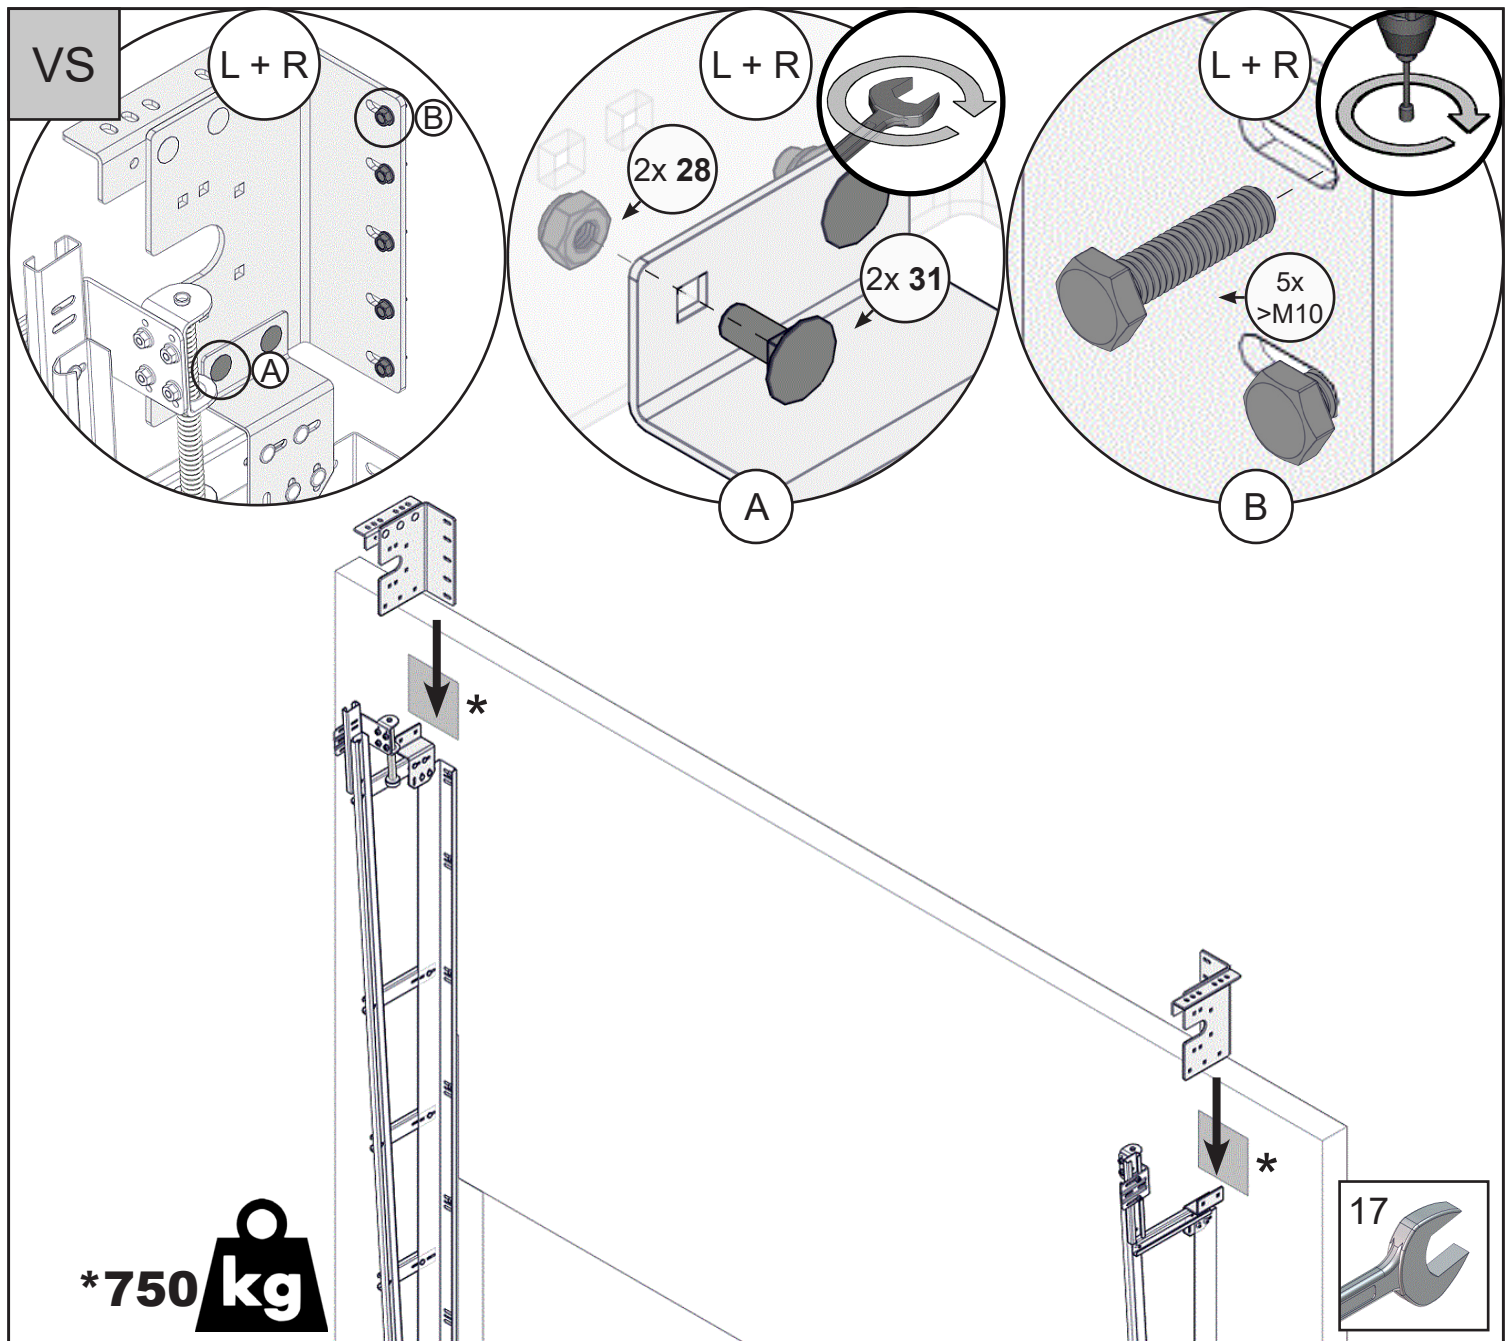




NS + HS

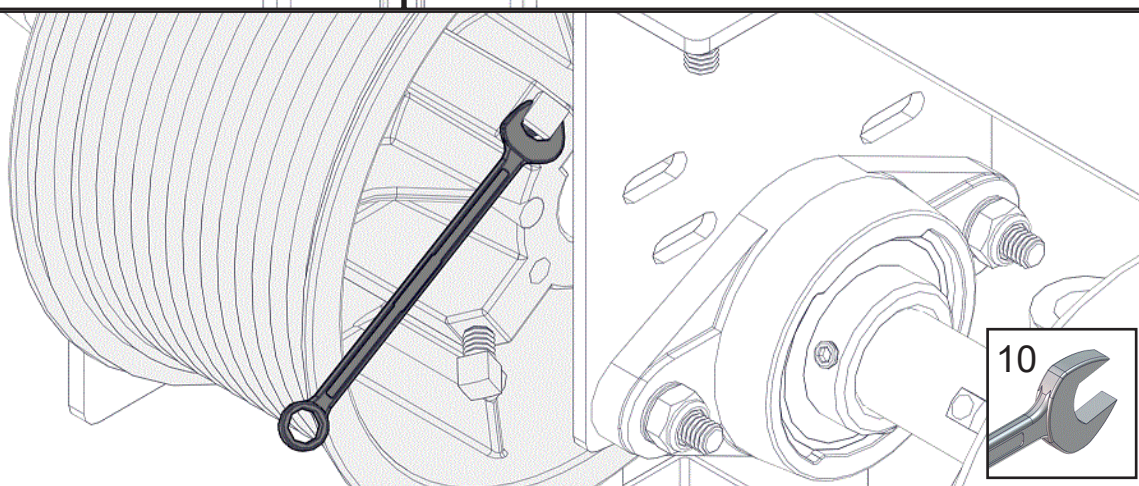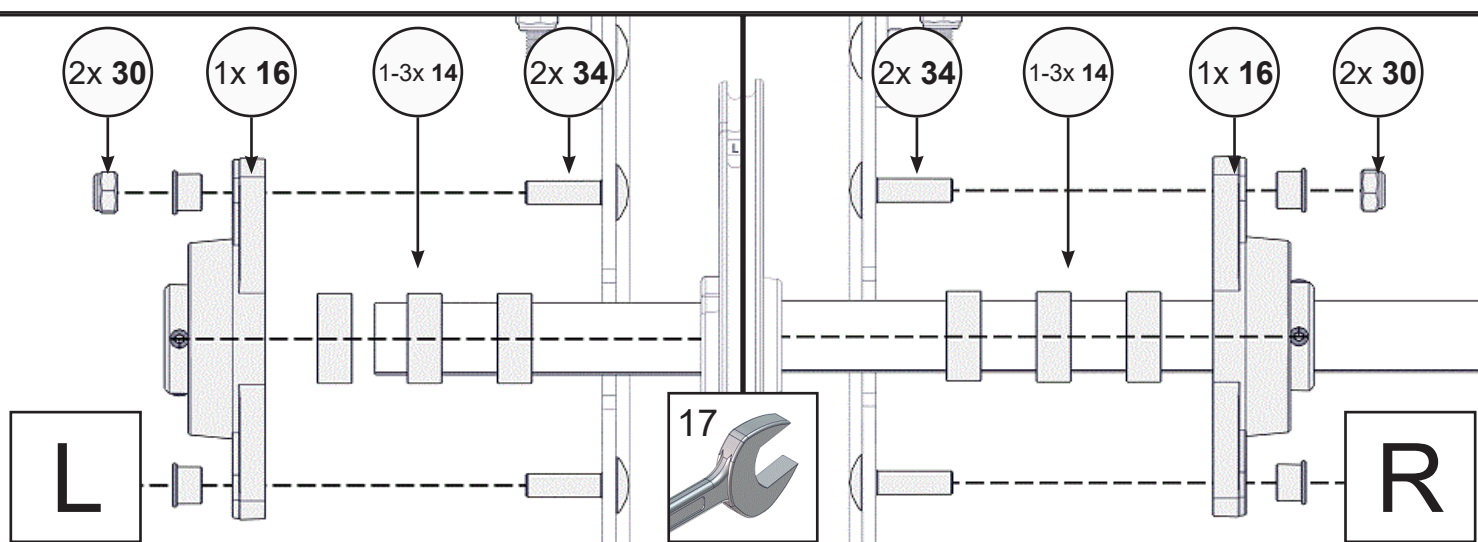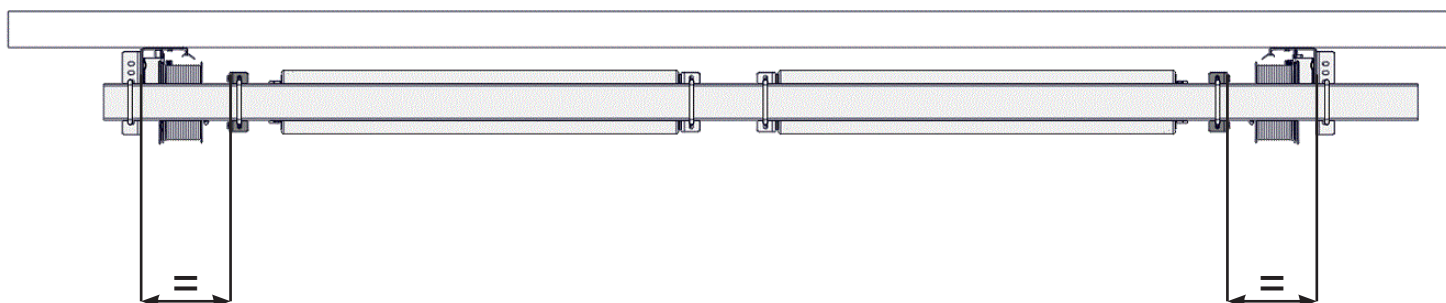
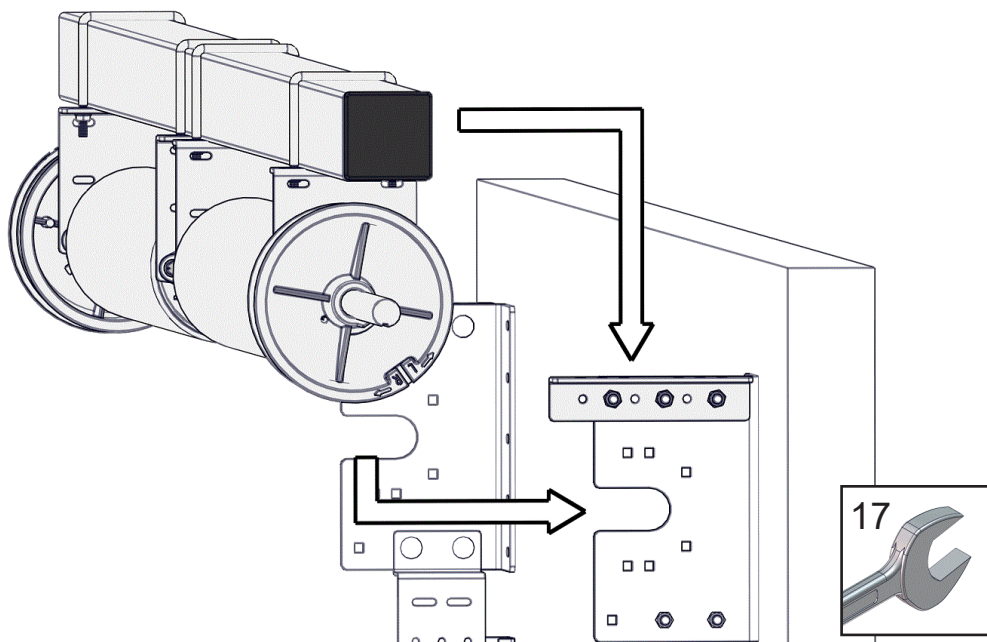
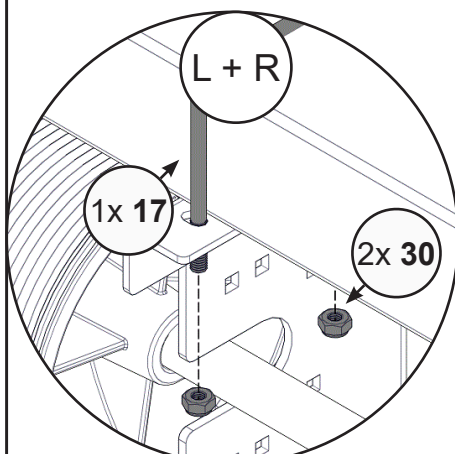


VS

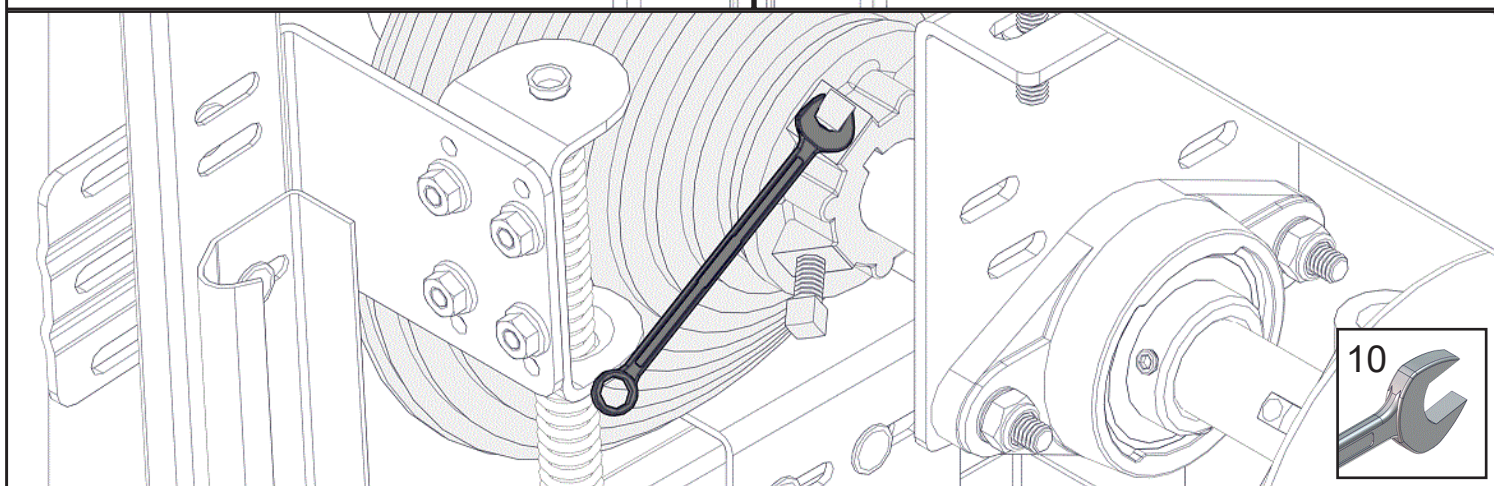
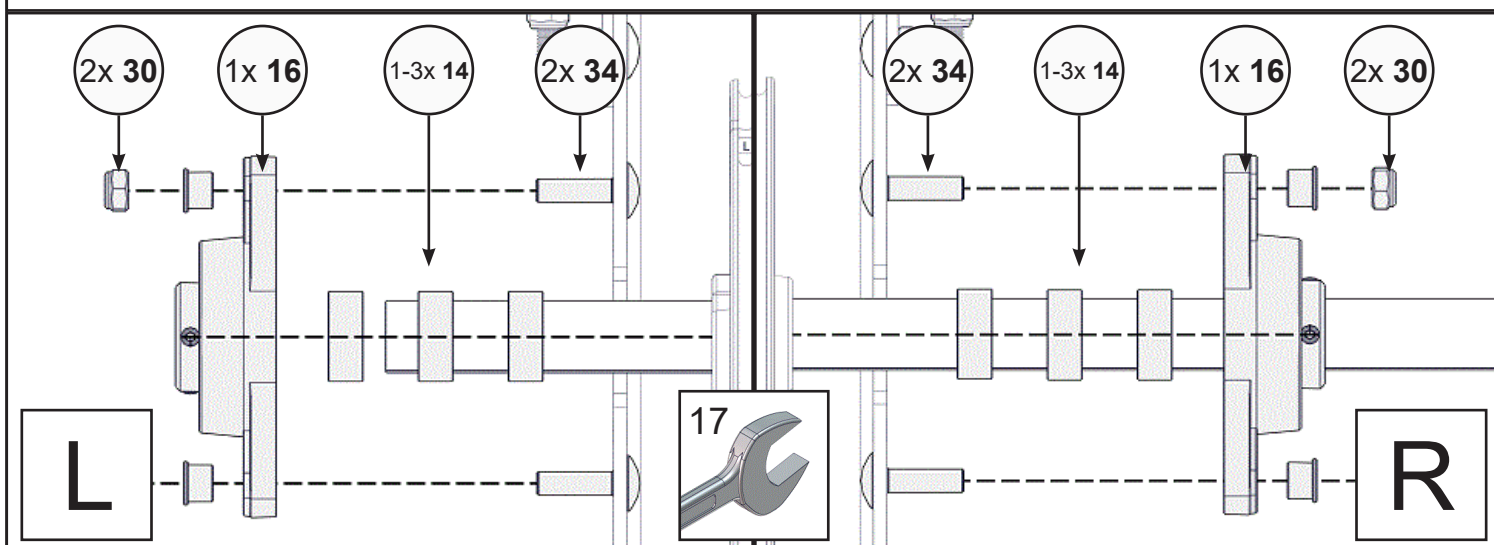
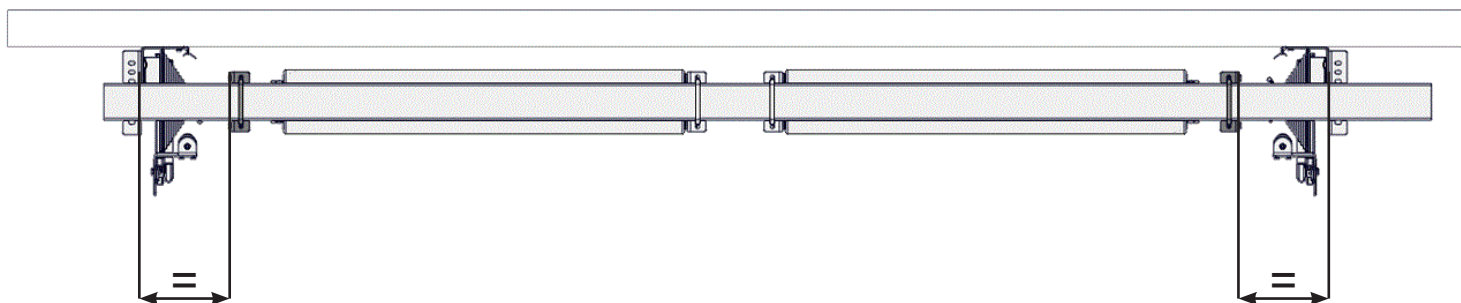
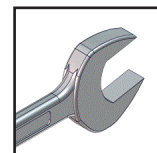
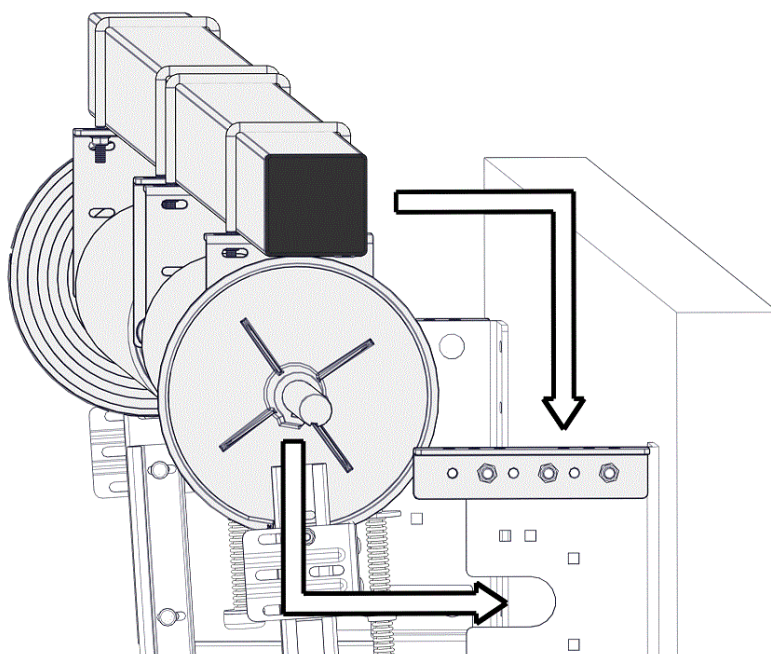
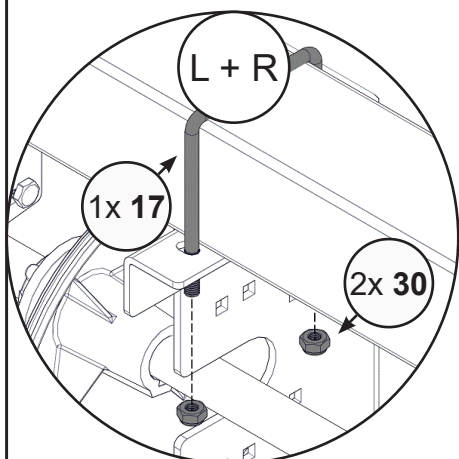



NS

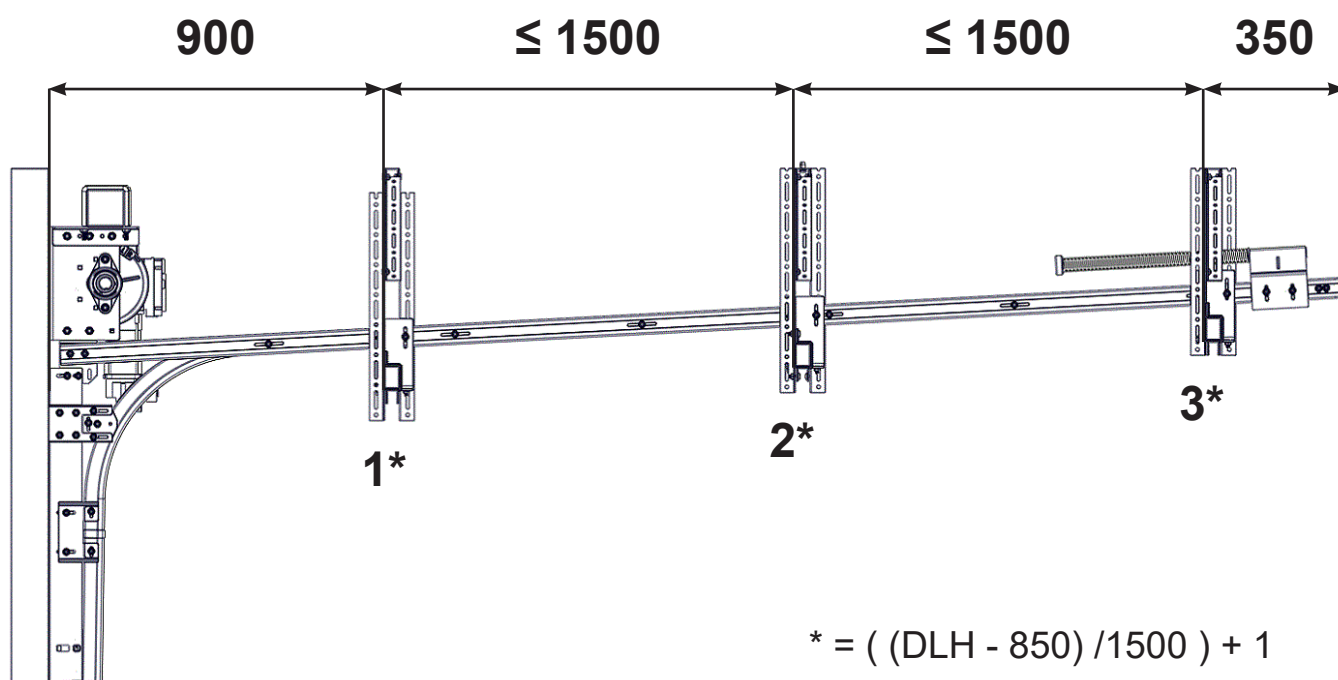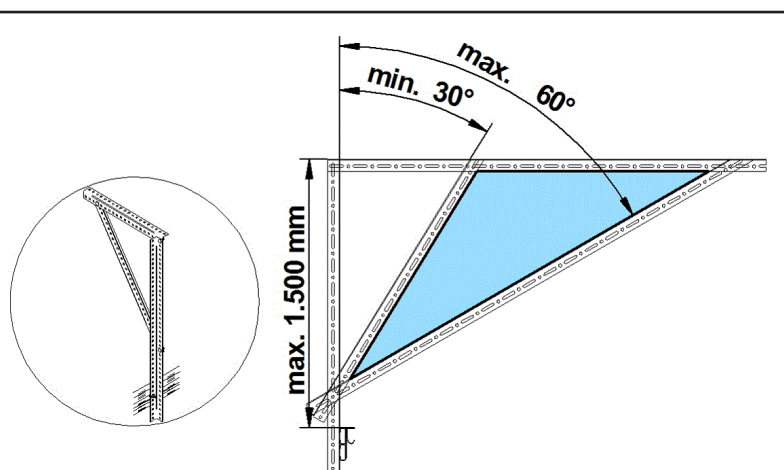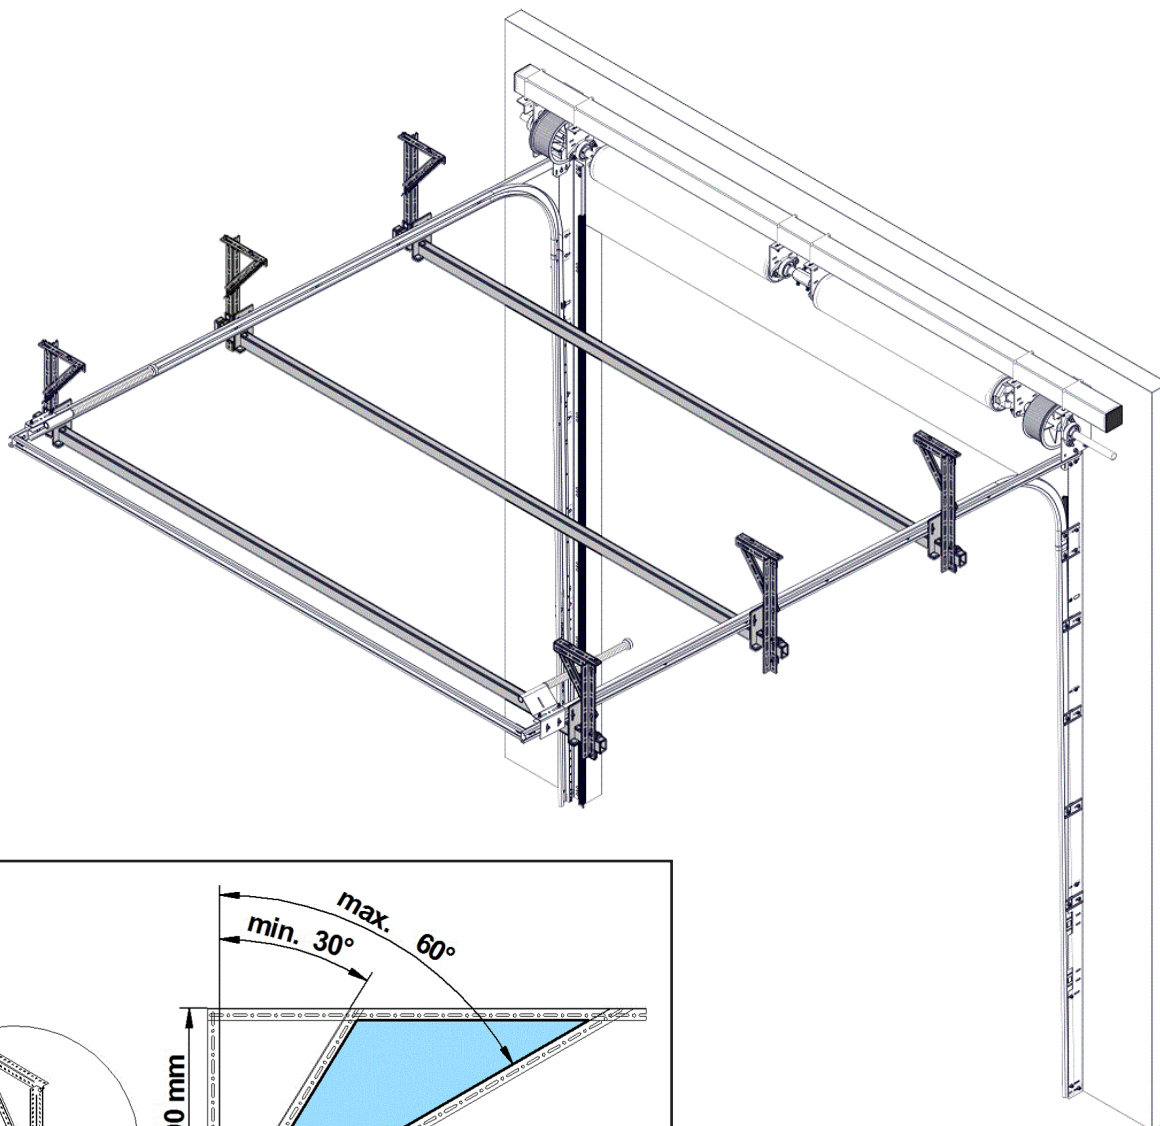

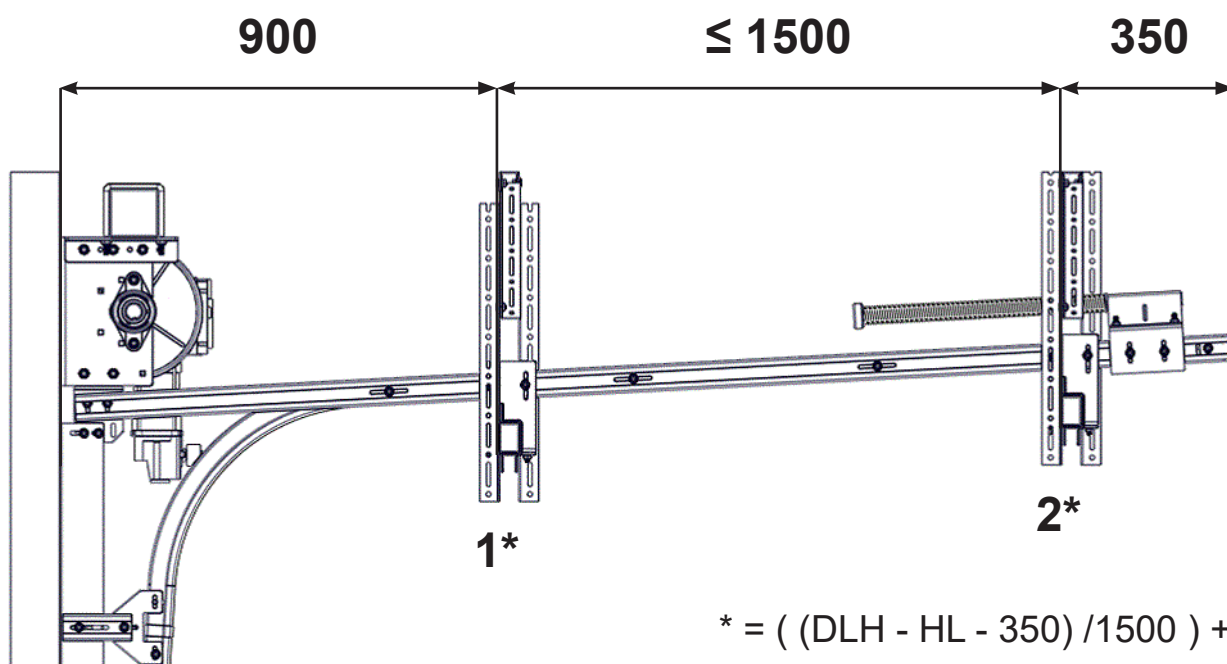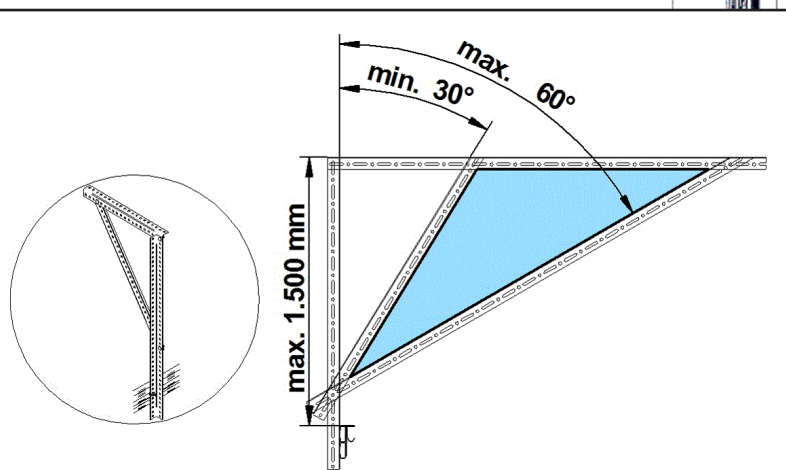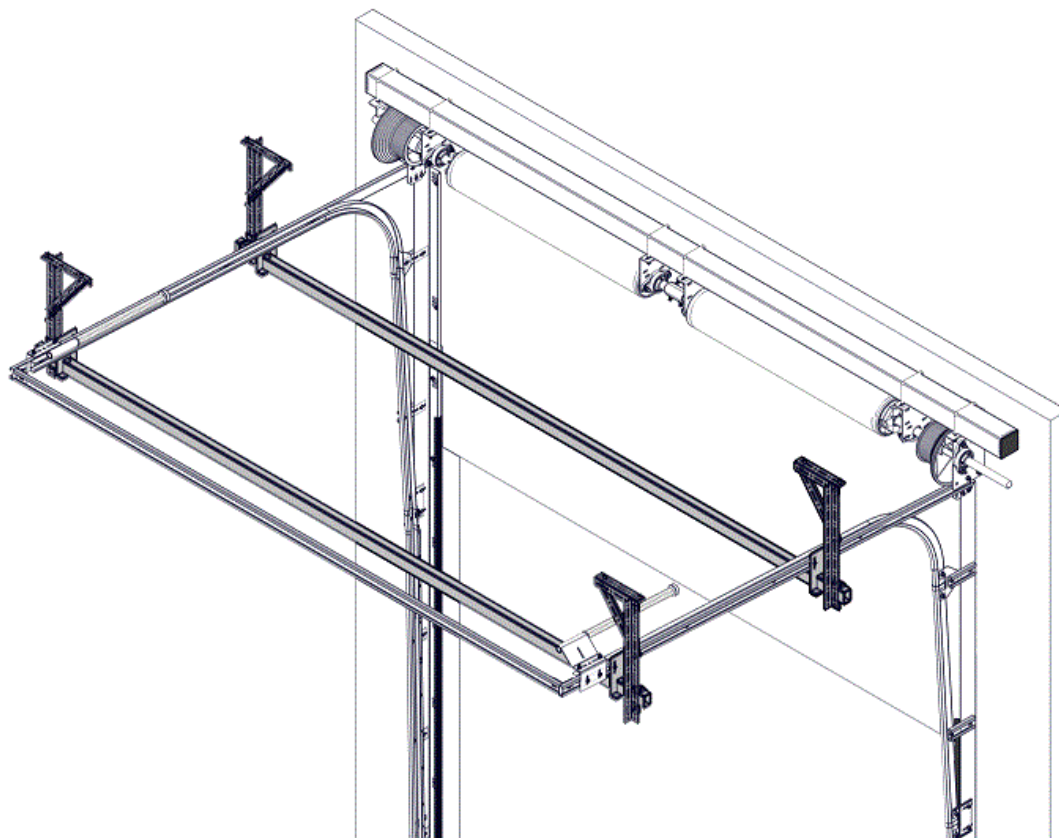


NS

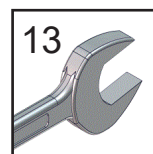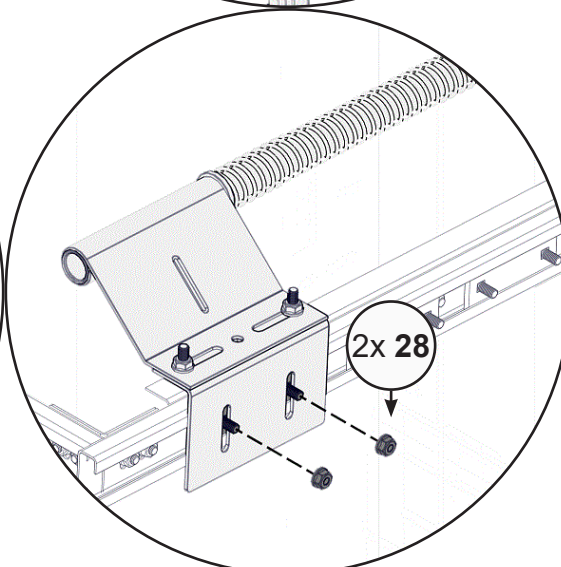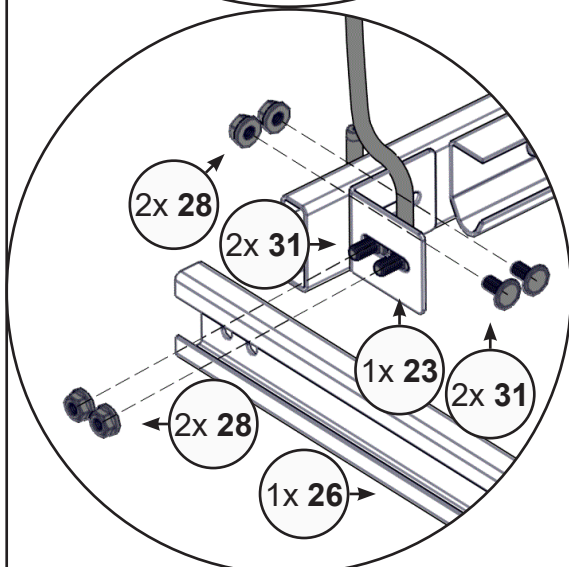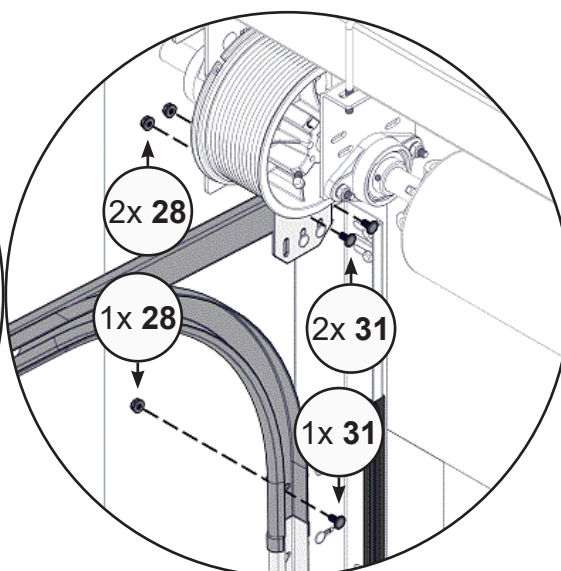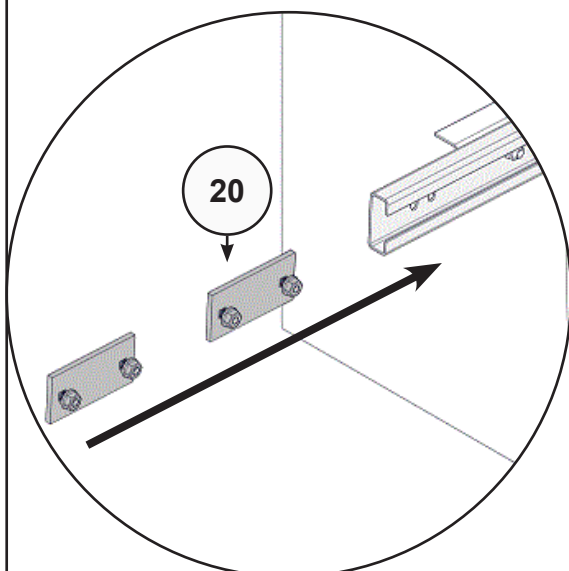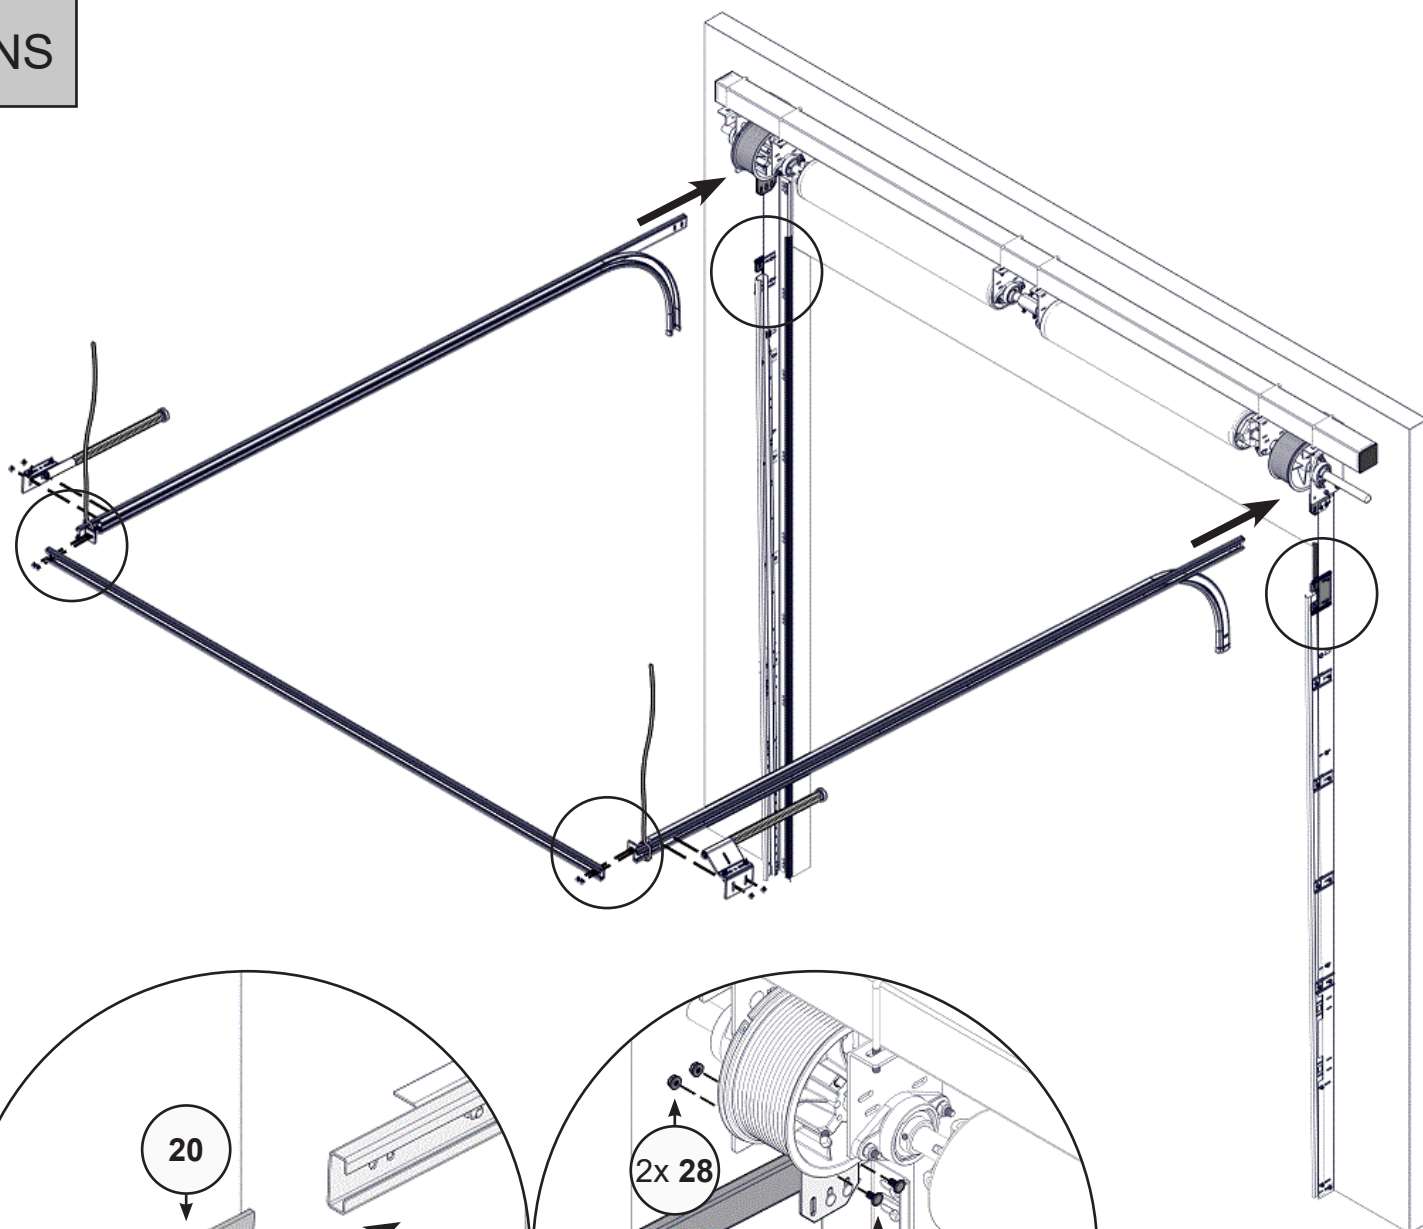


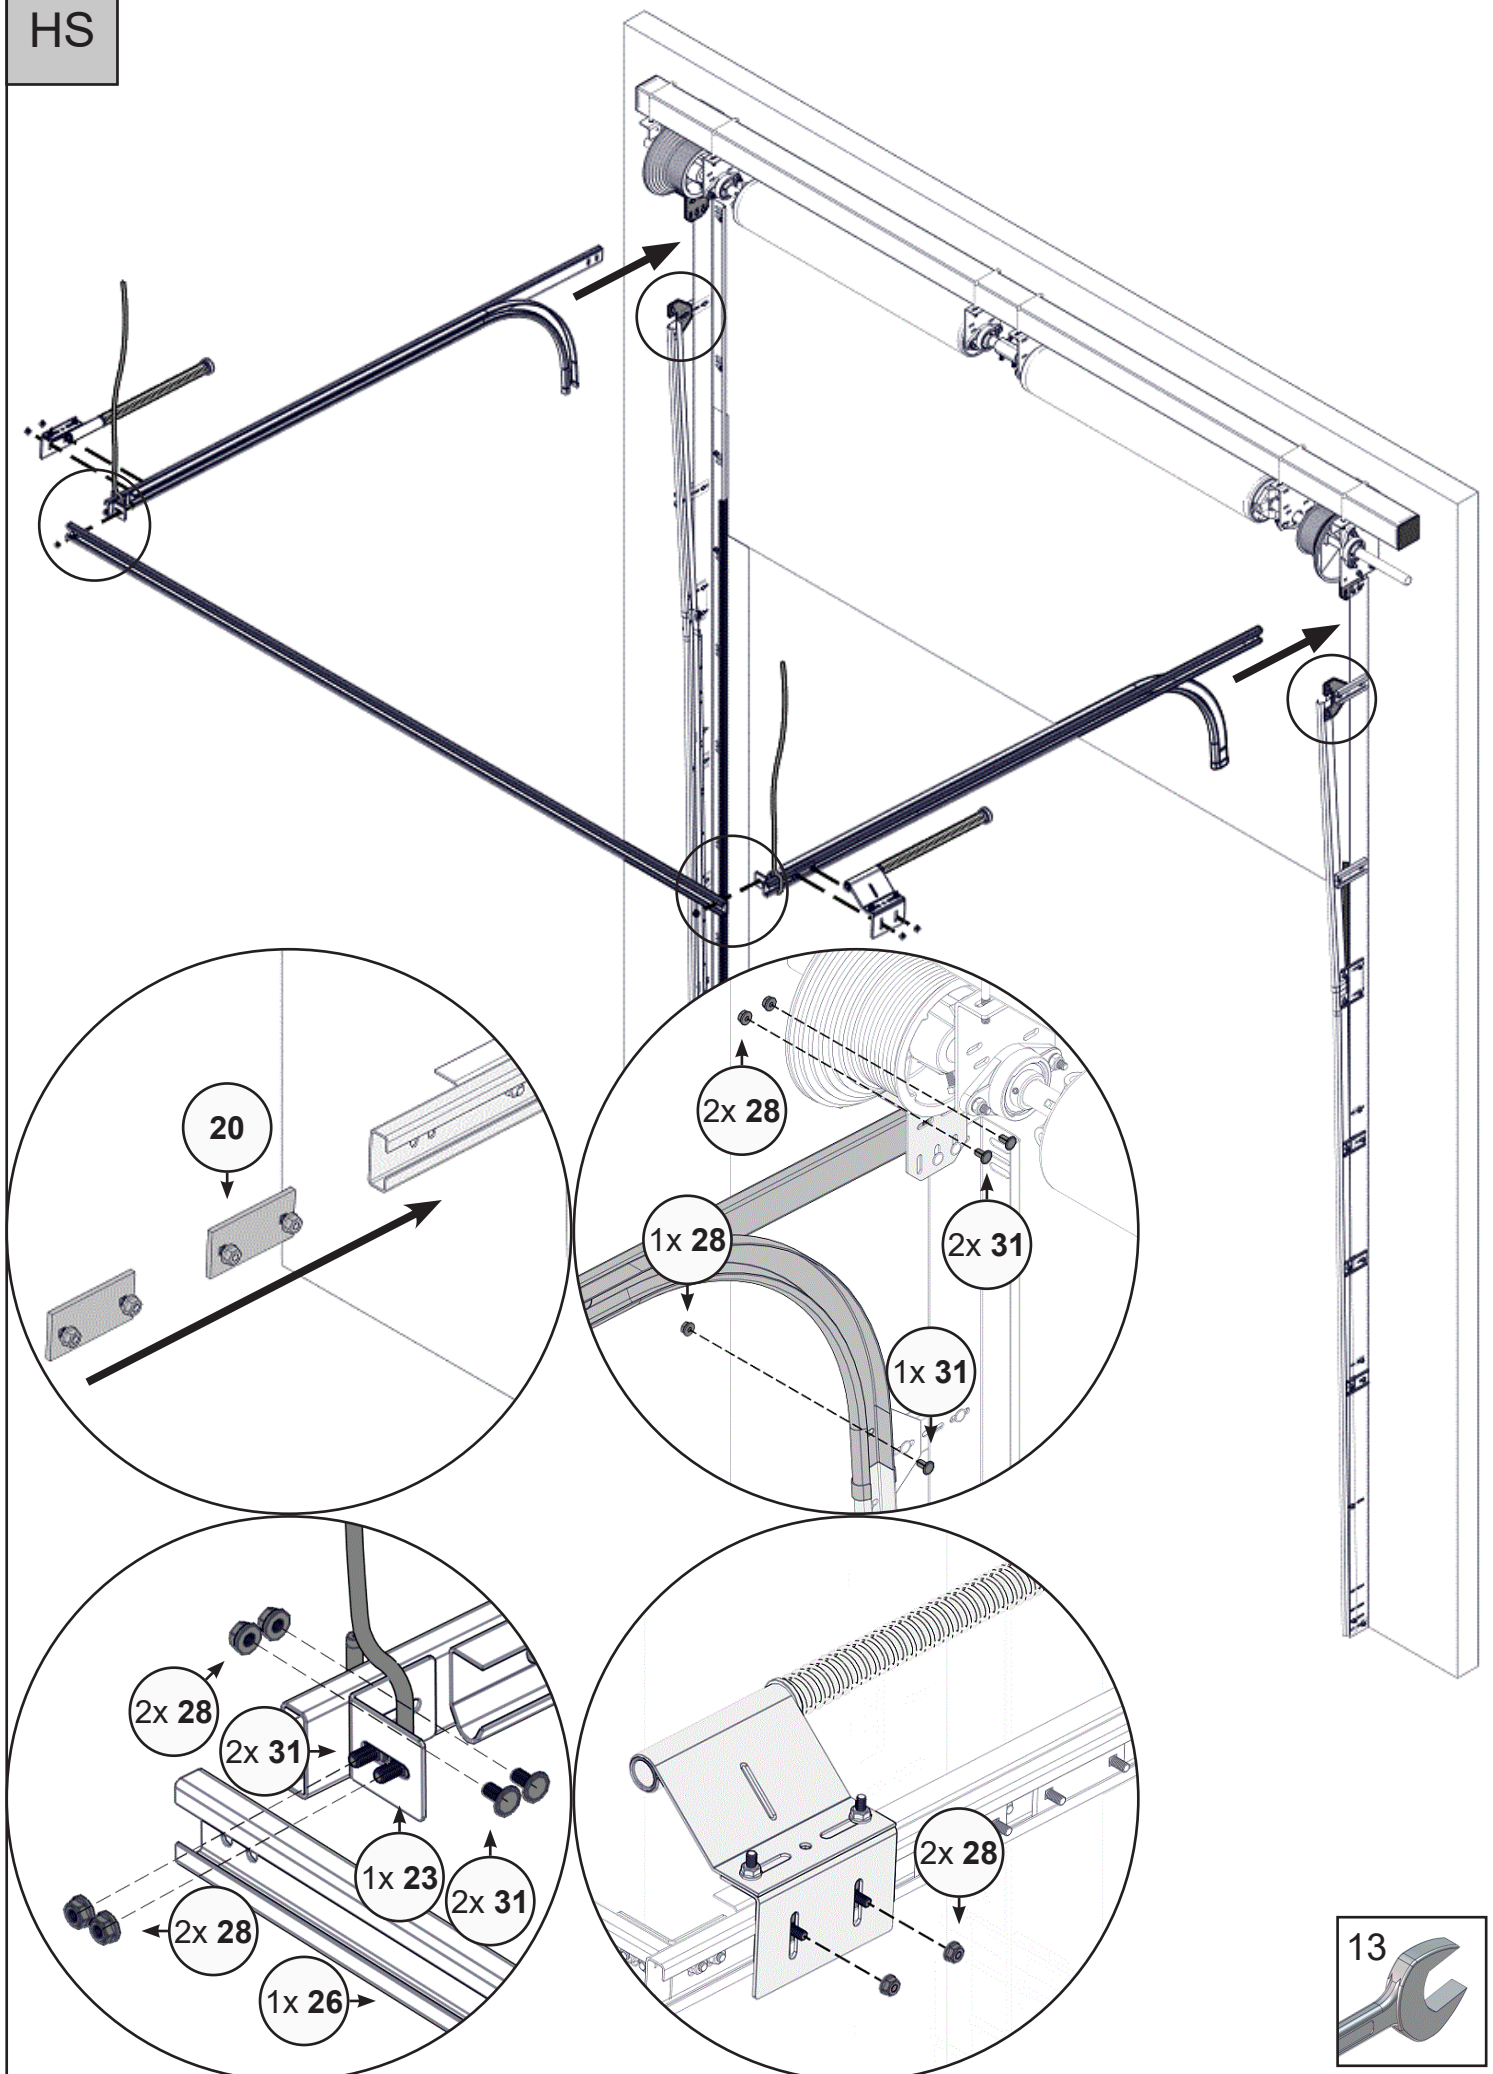


NS + HS

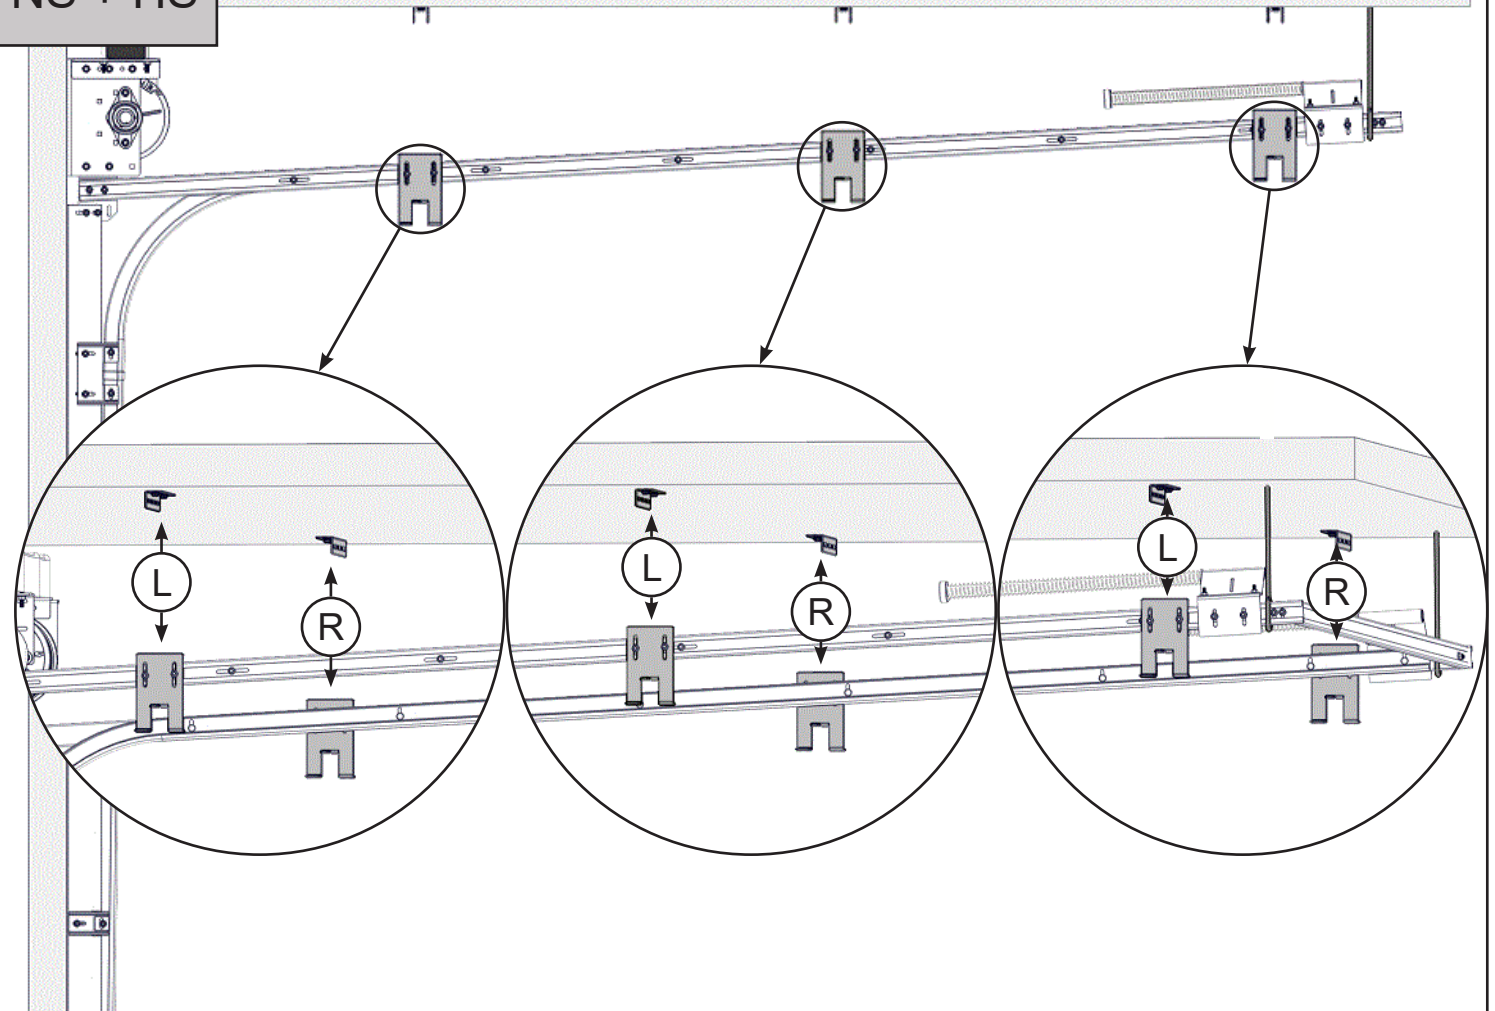





L

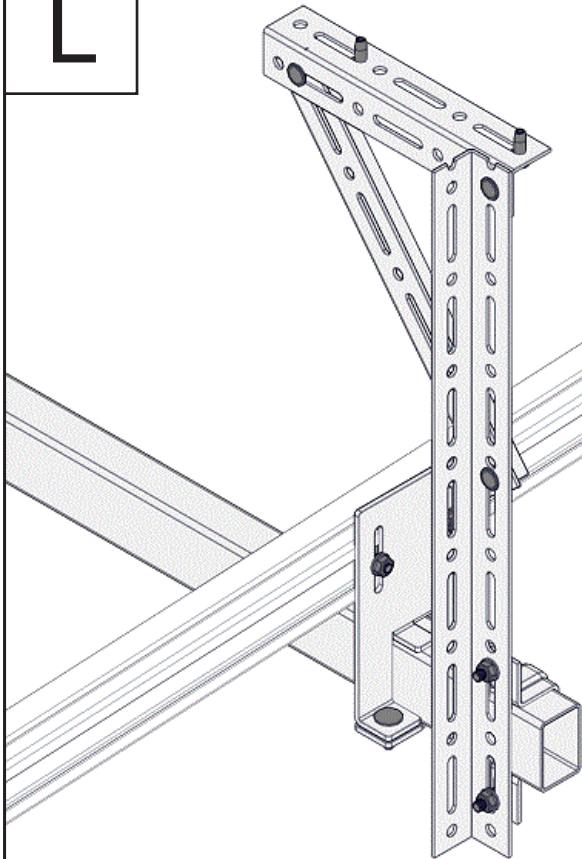








R



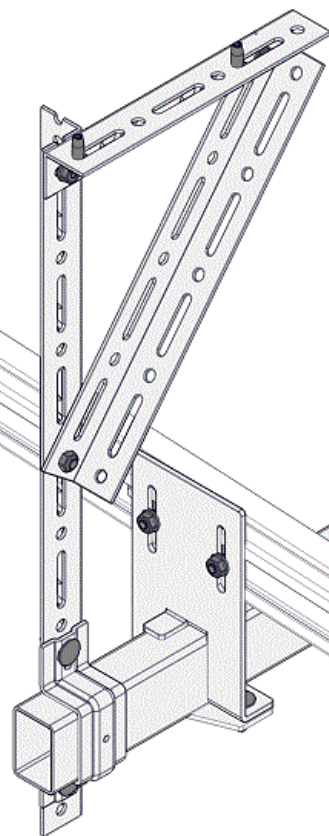



NS + HS

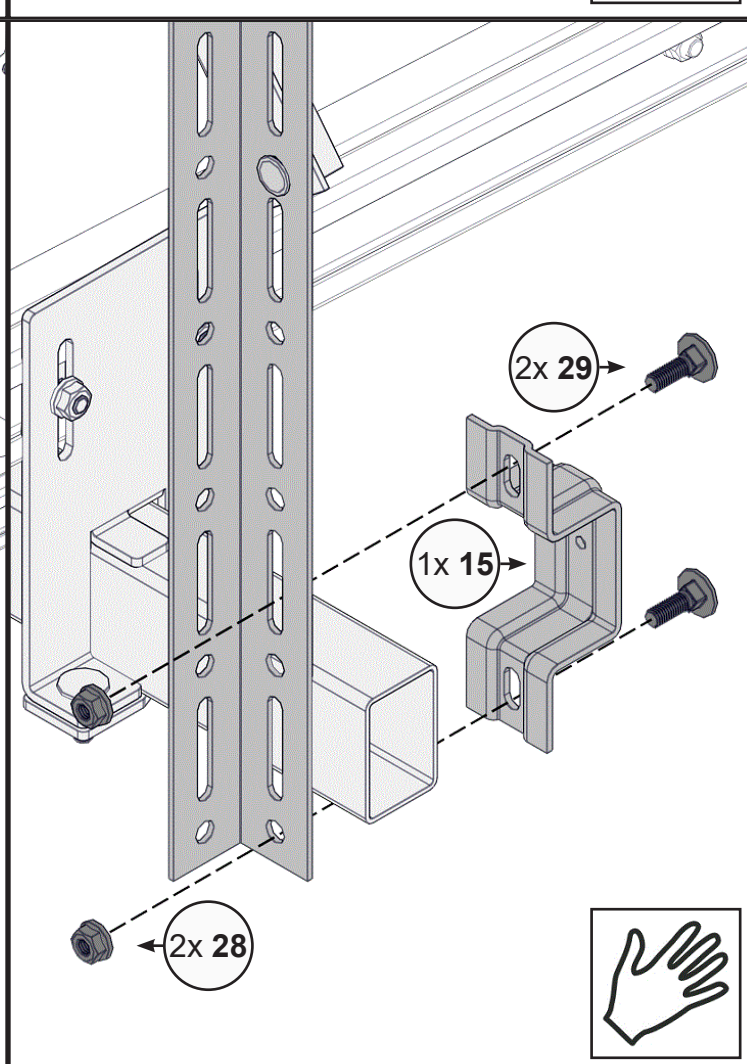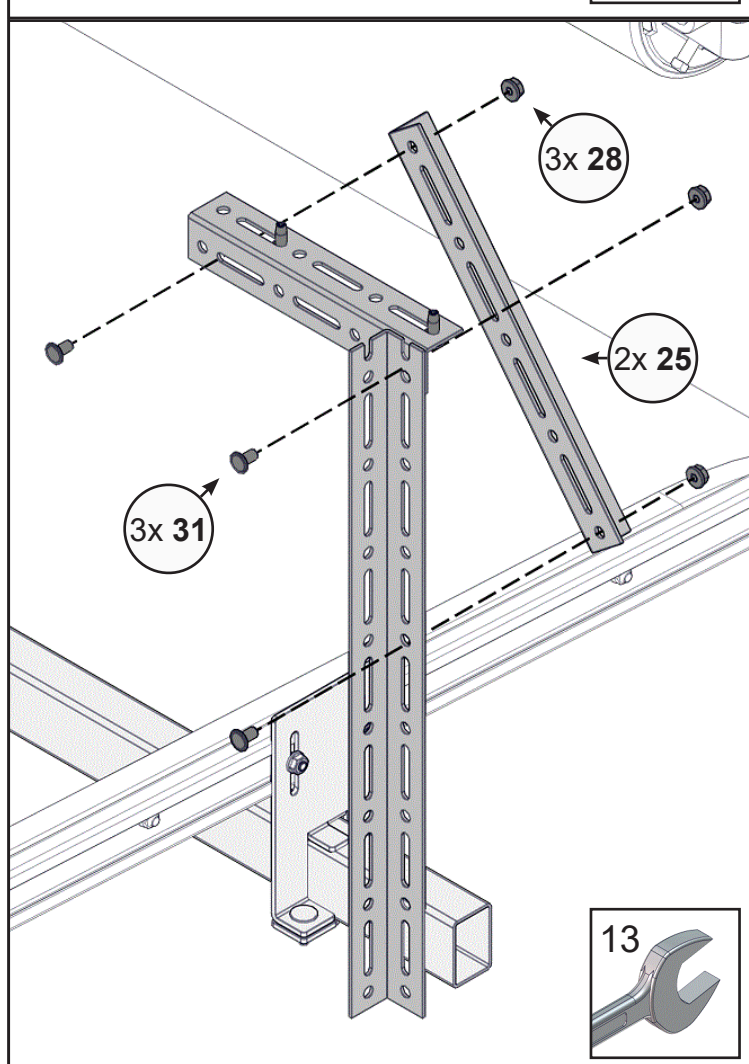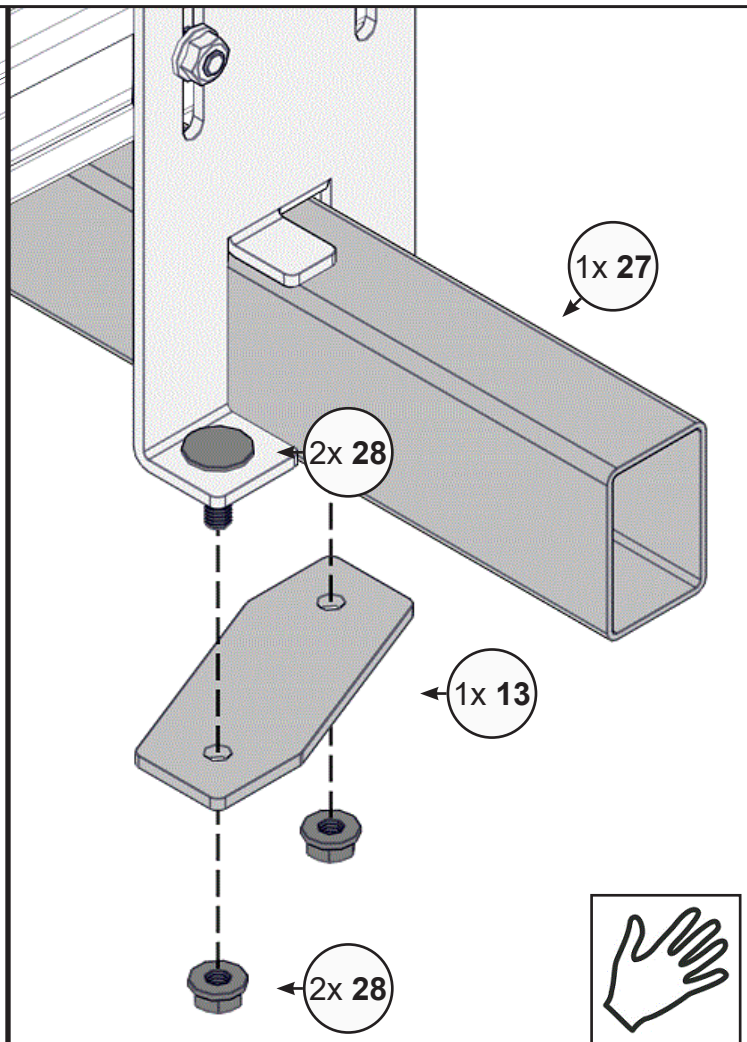
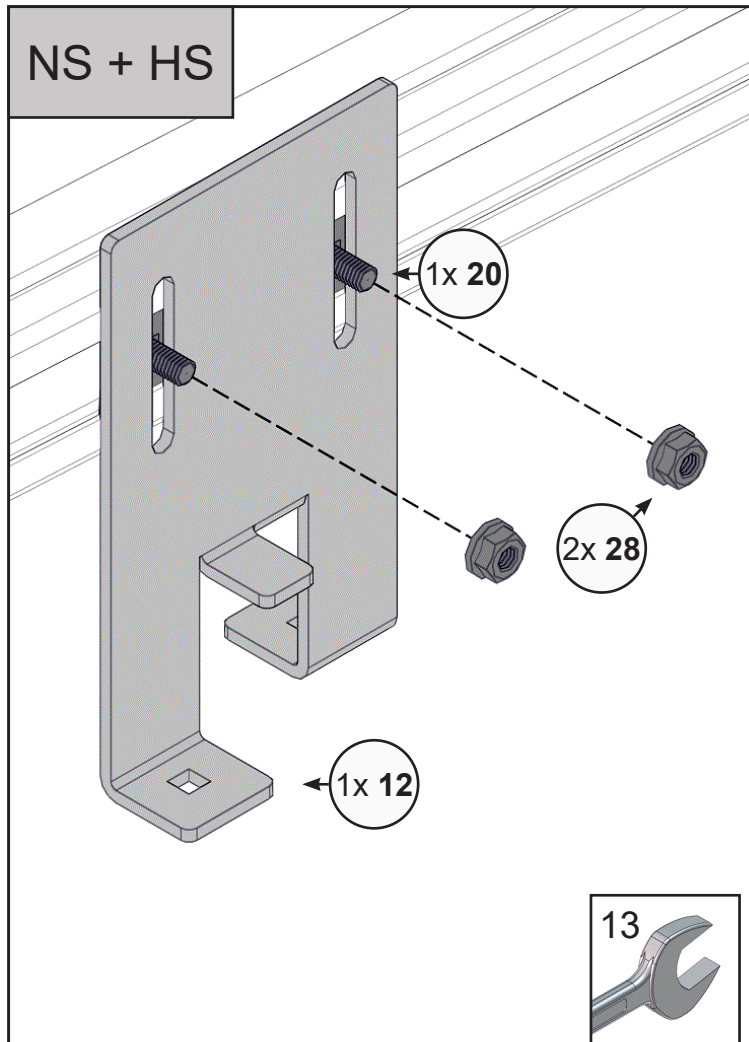



NS

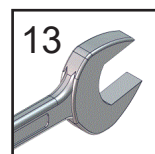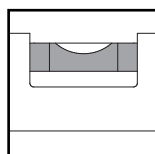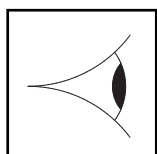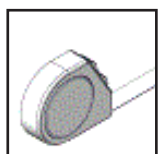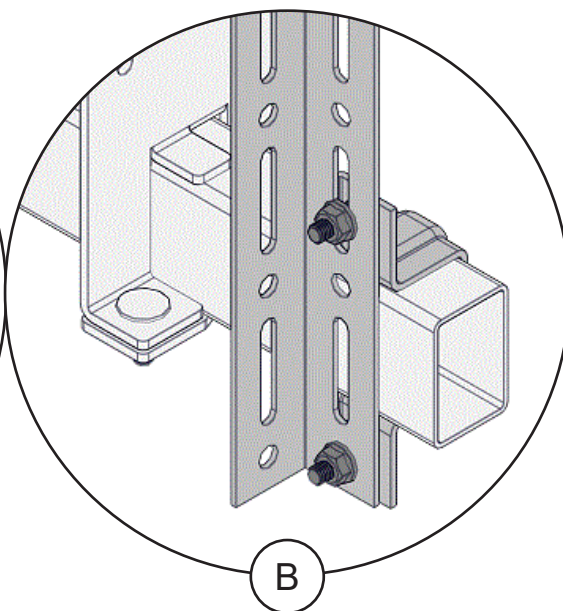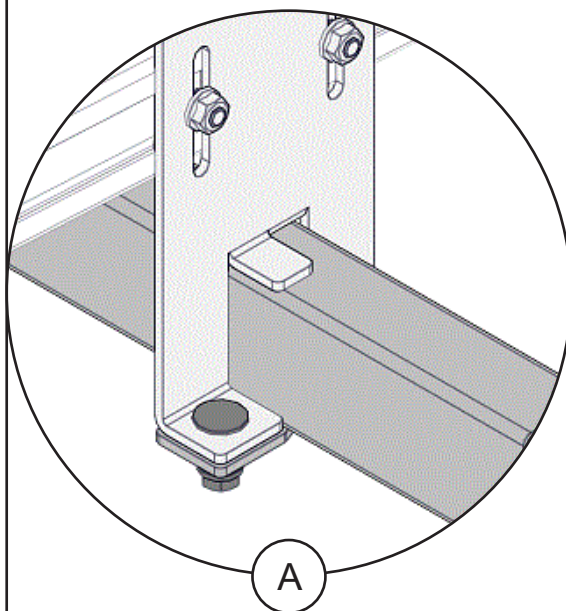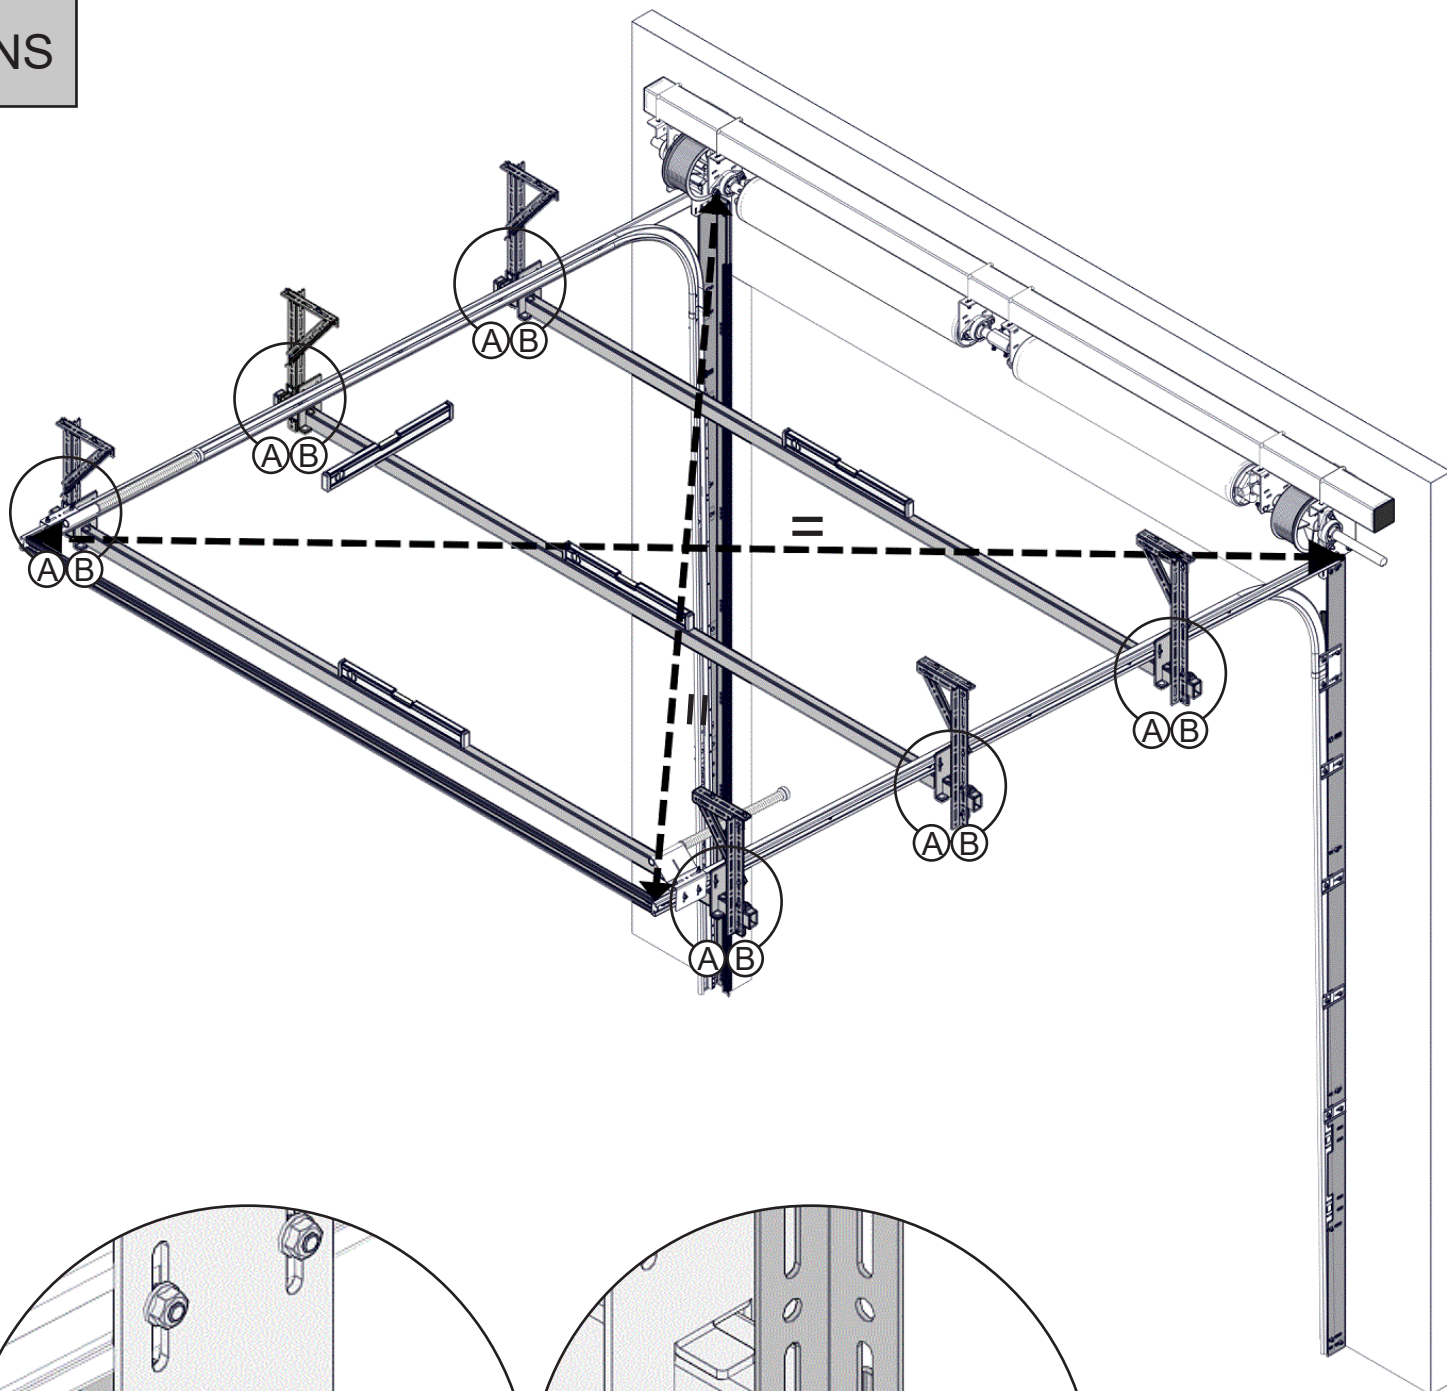

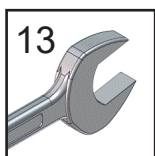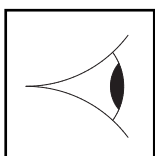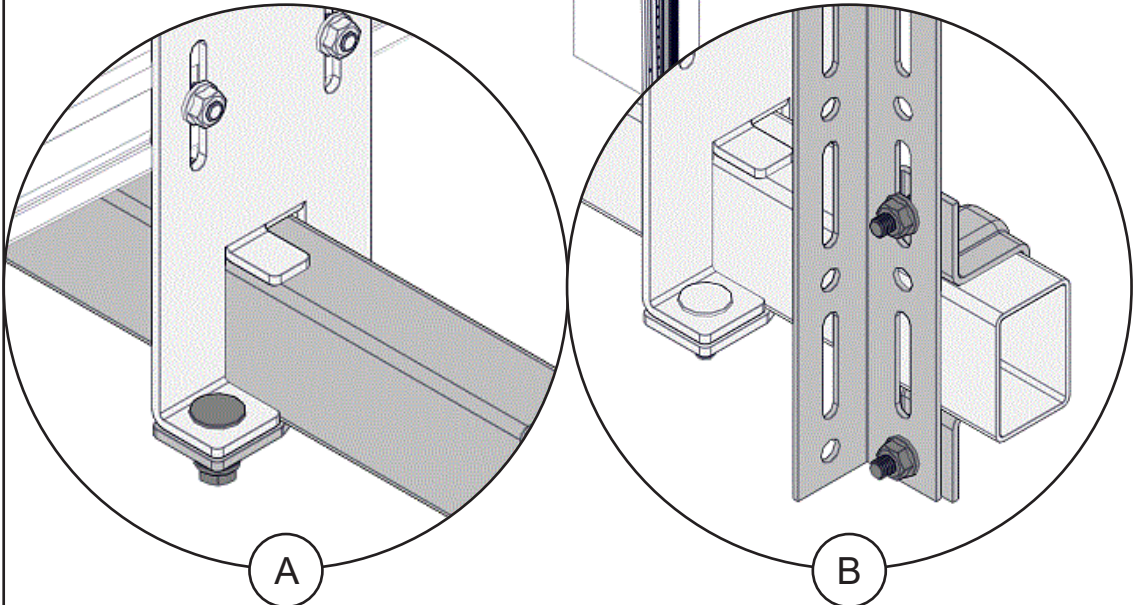



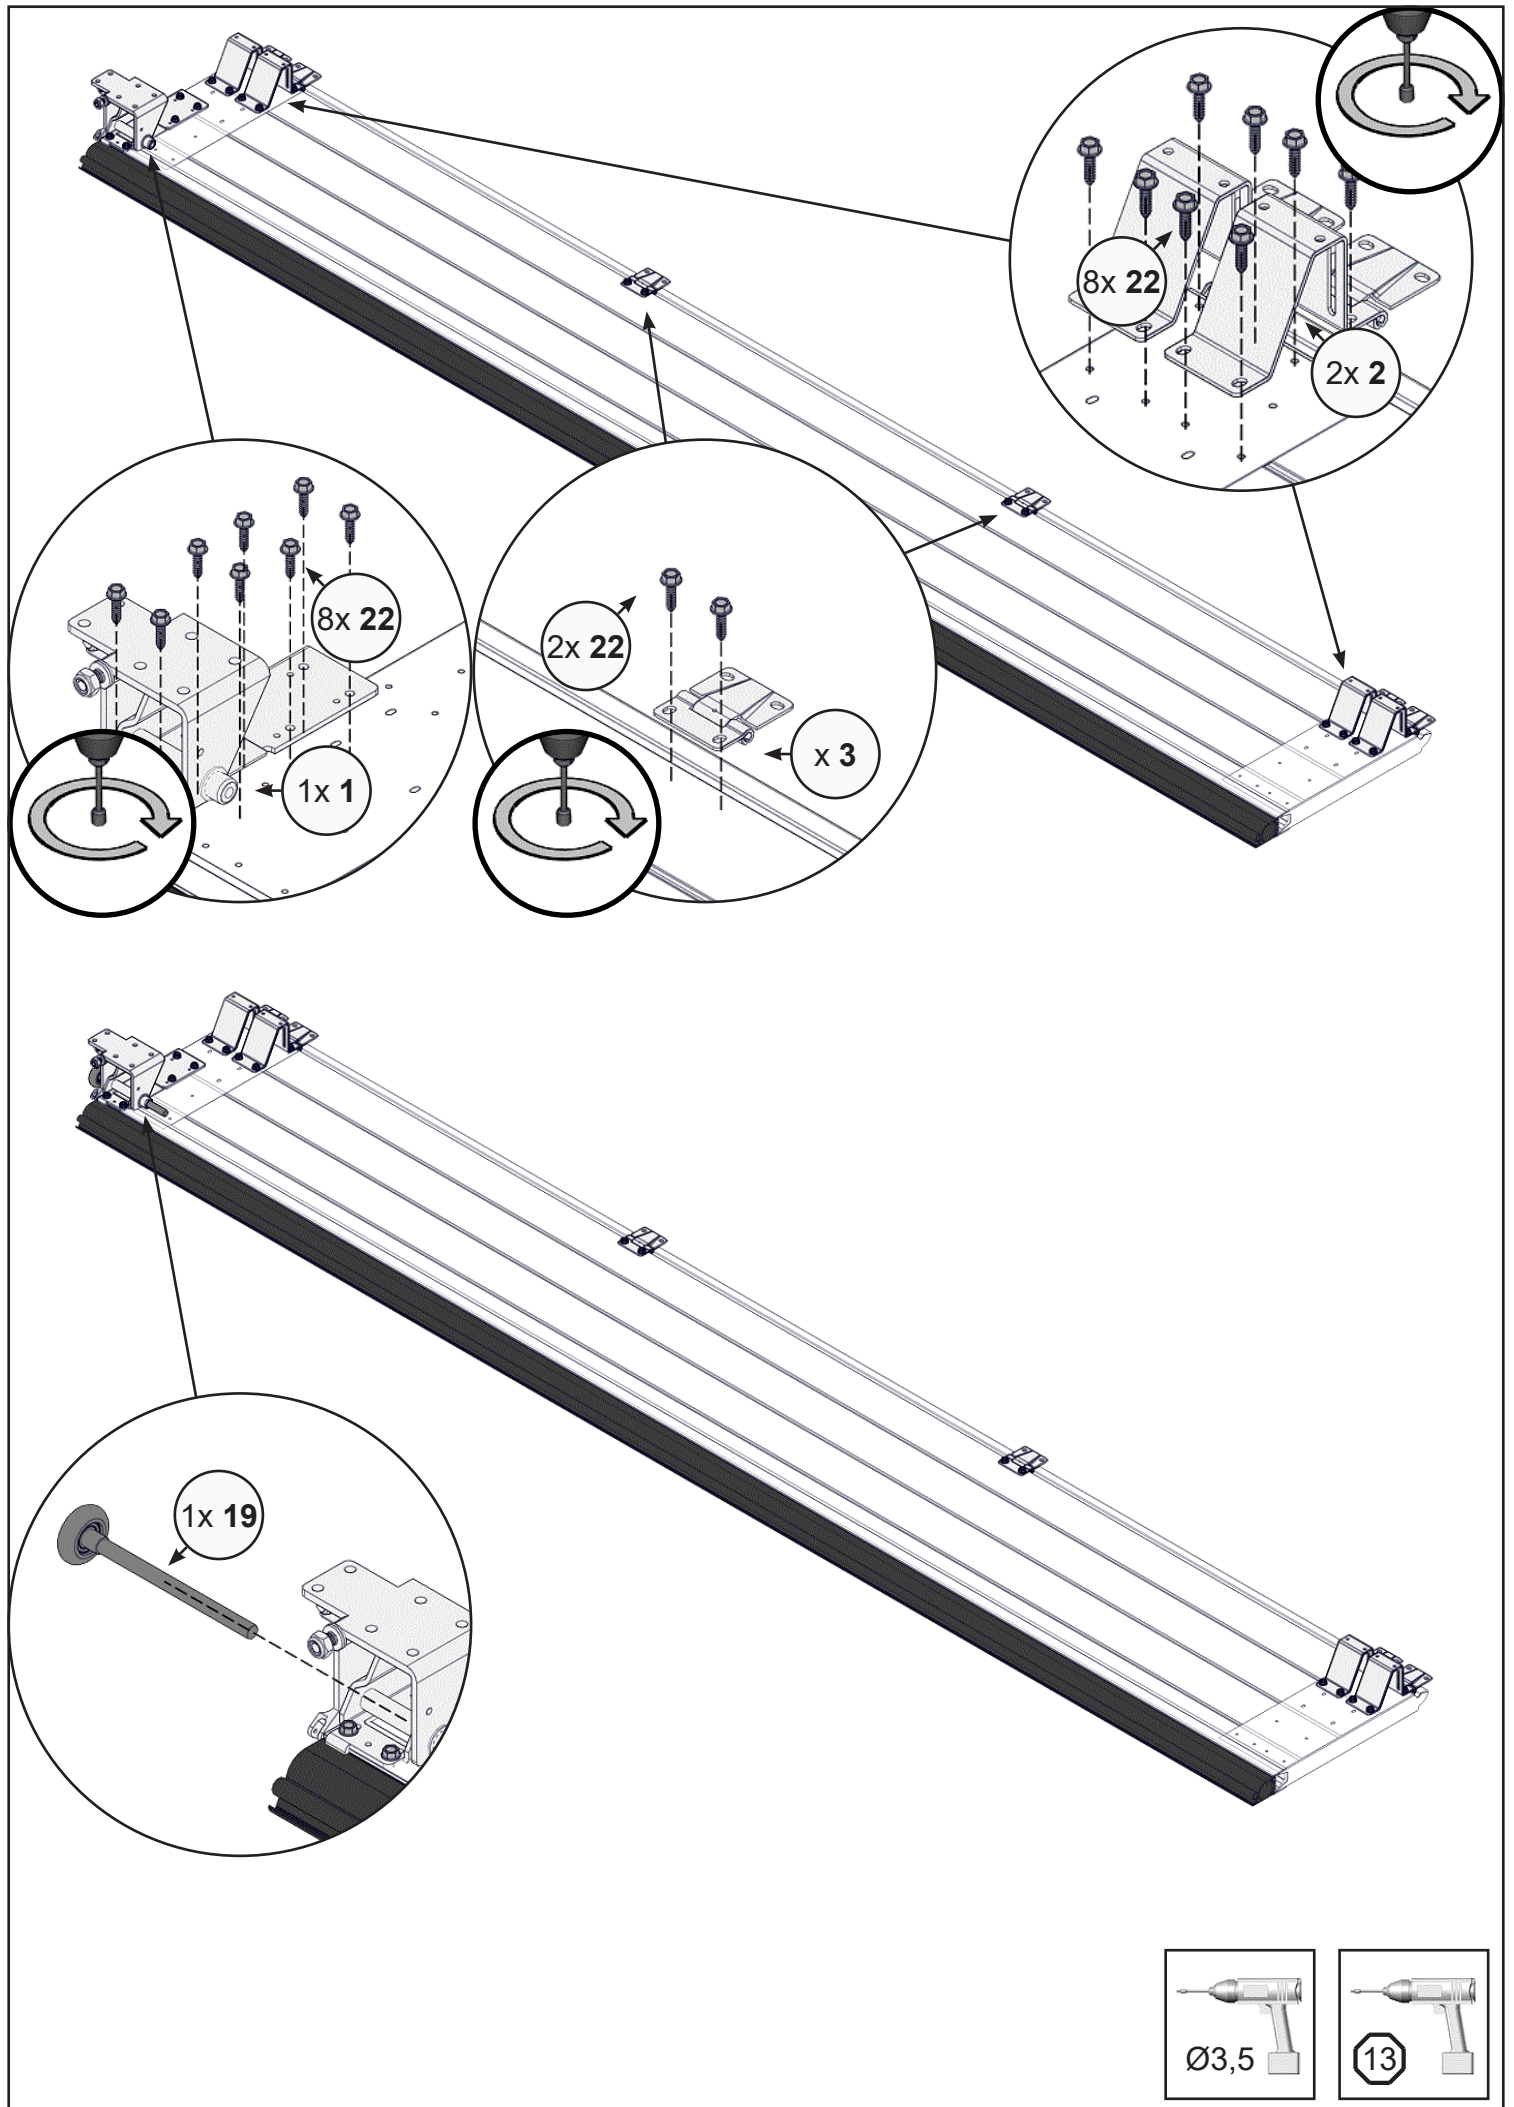


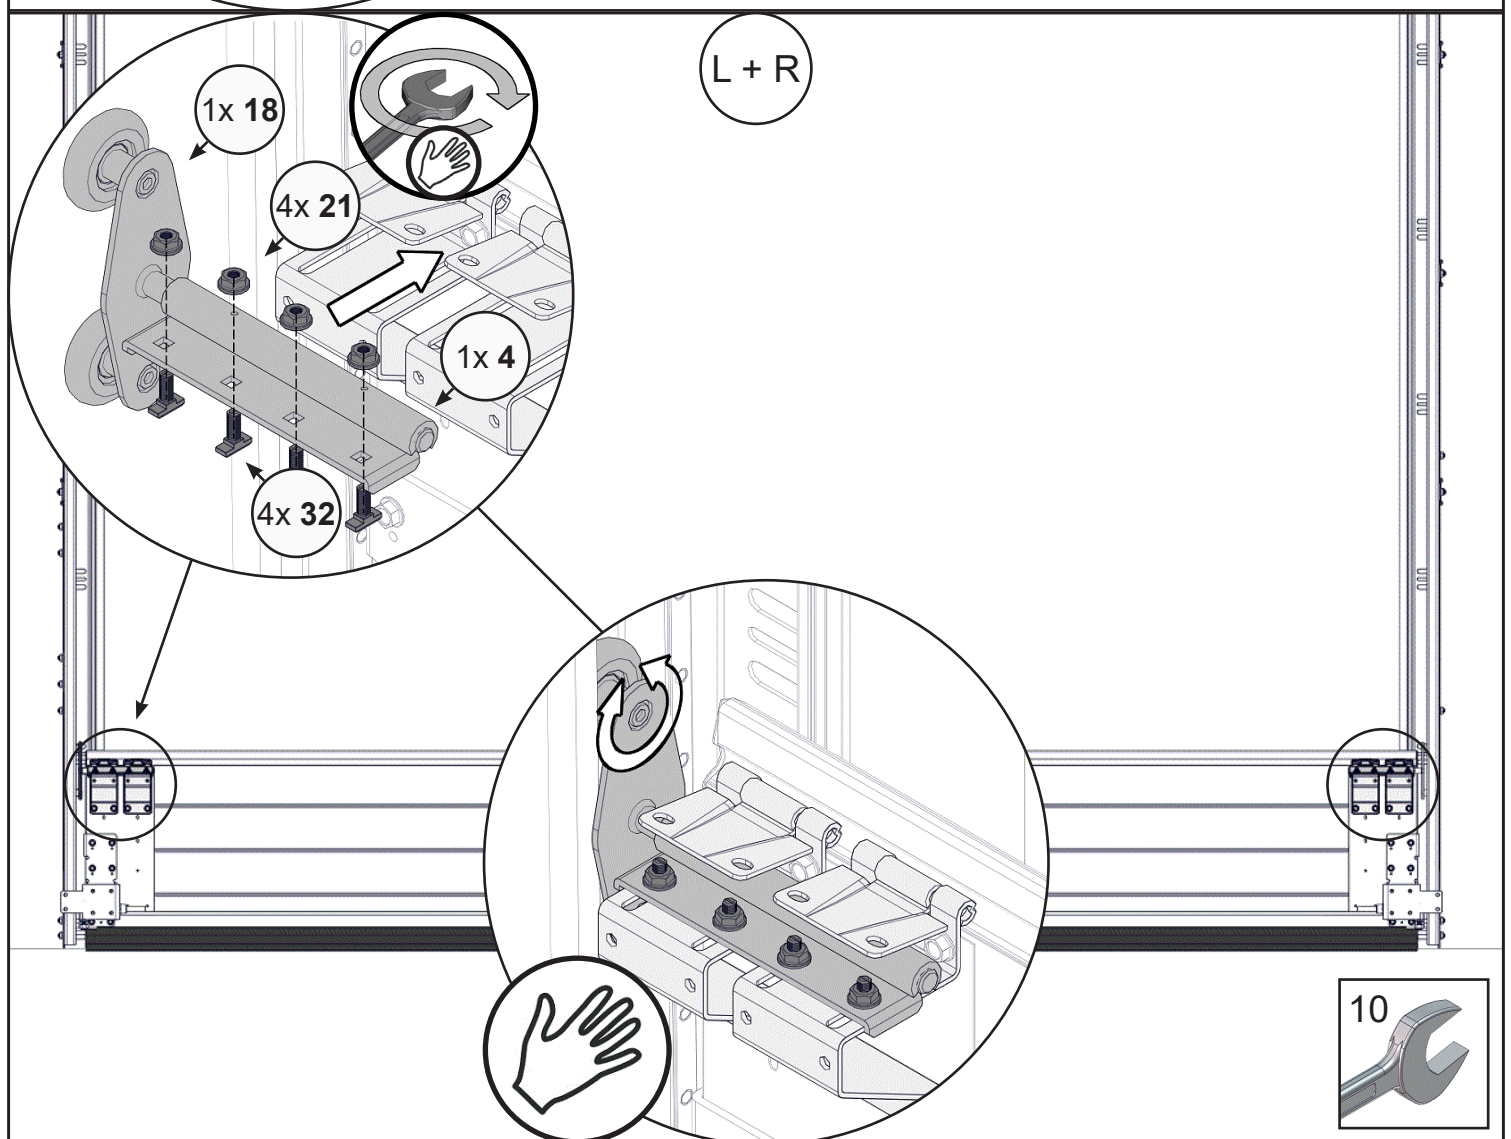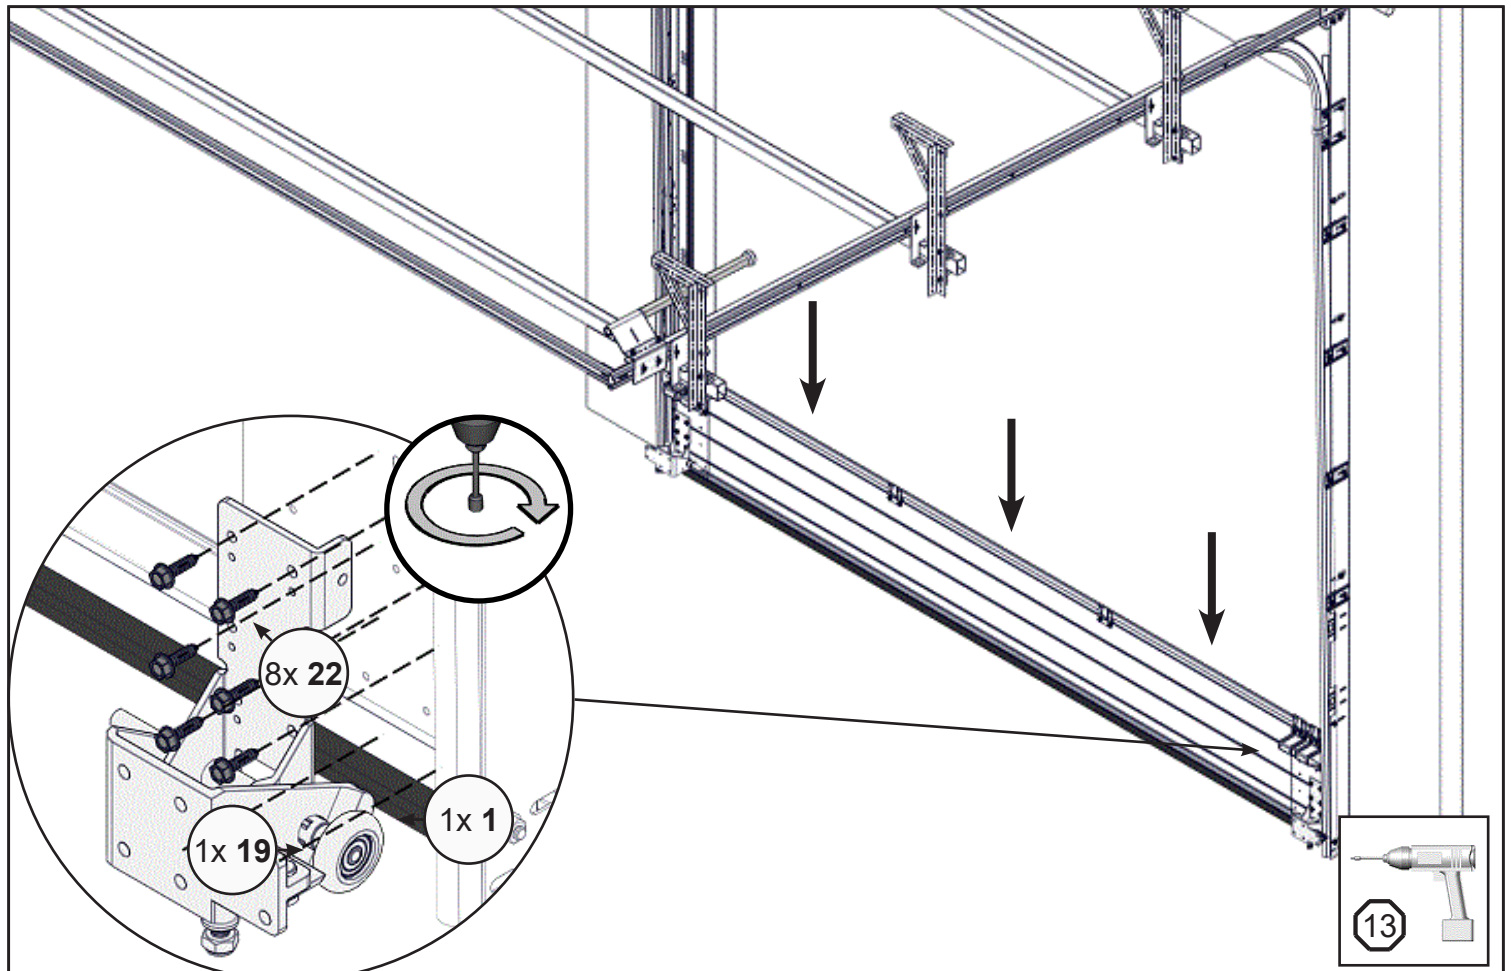



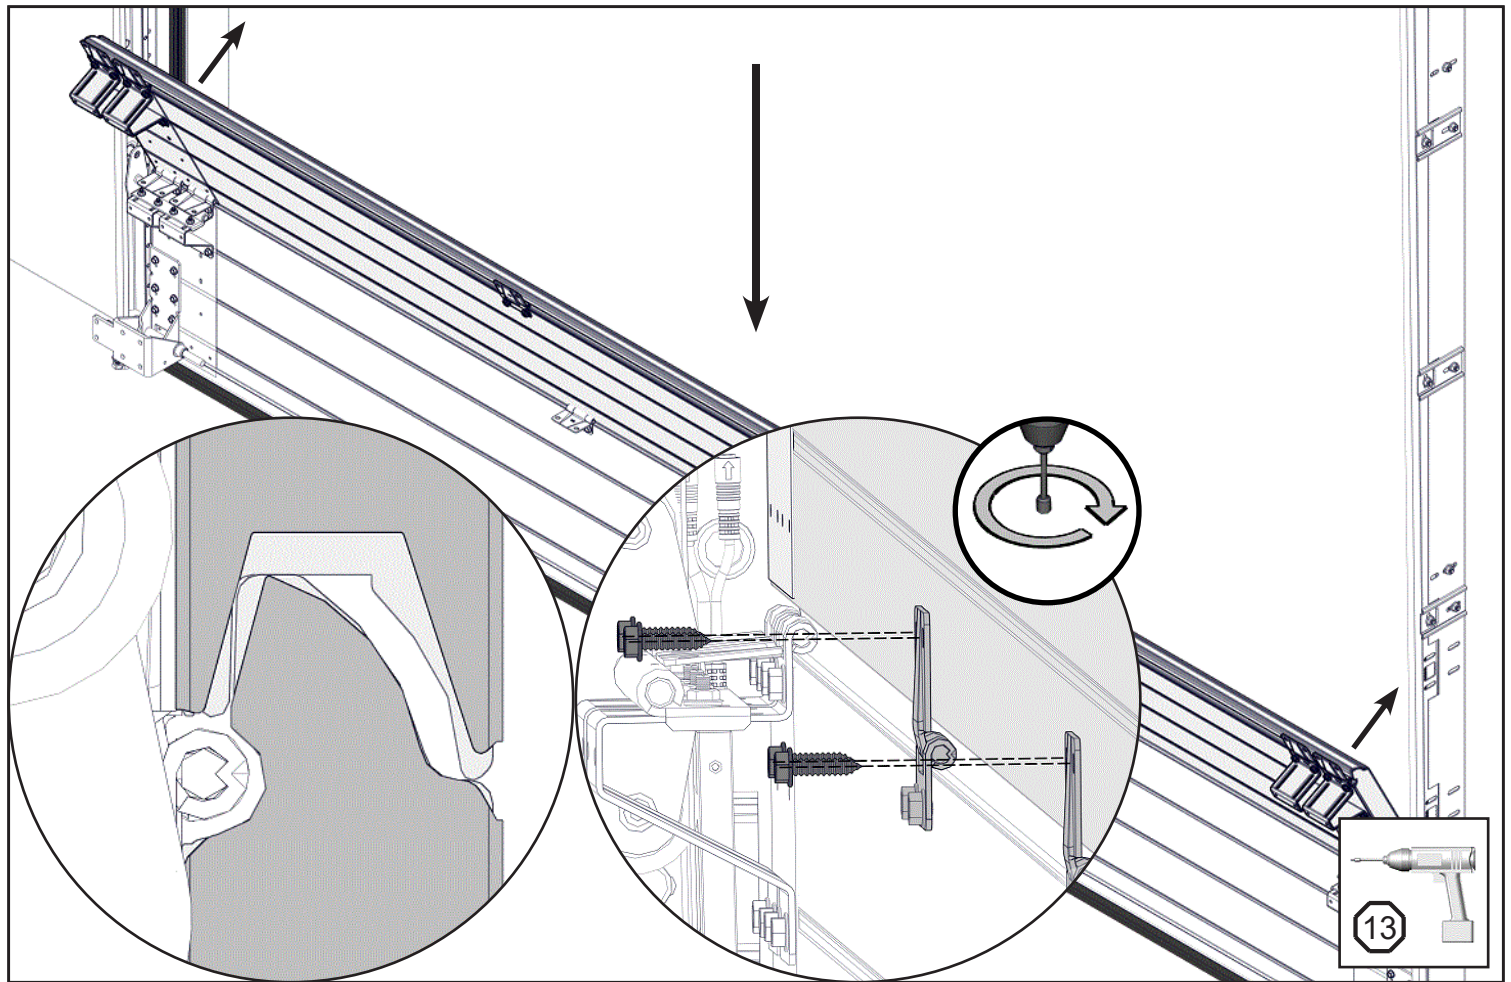




L + R

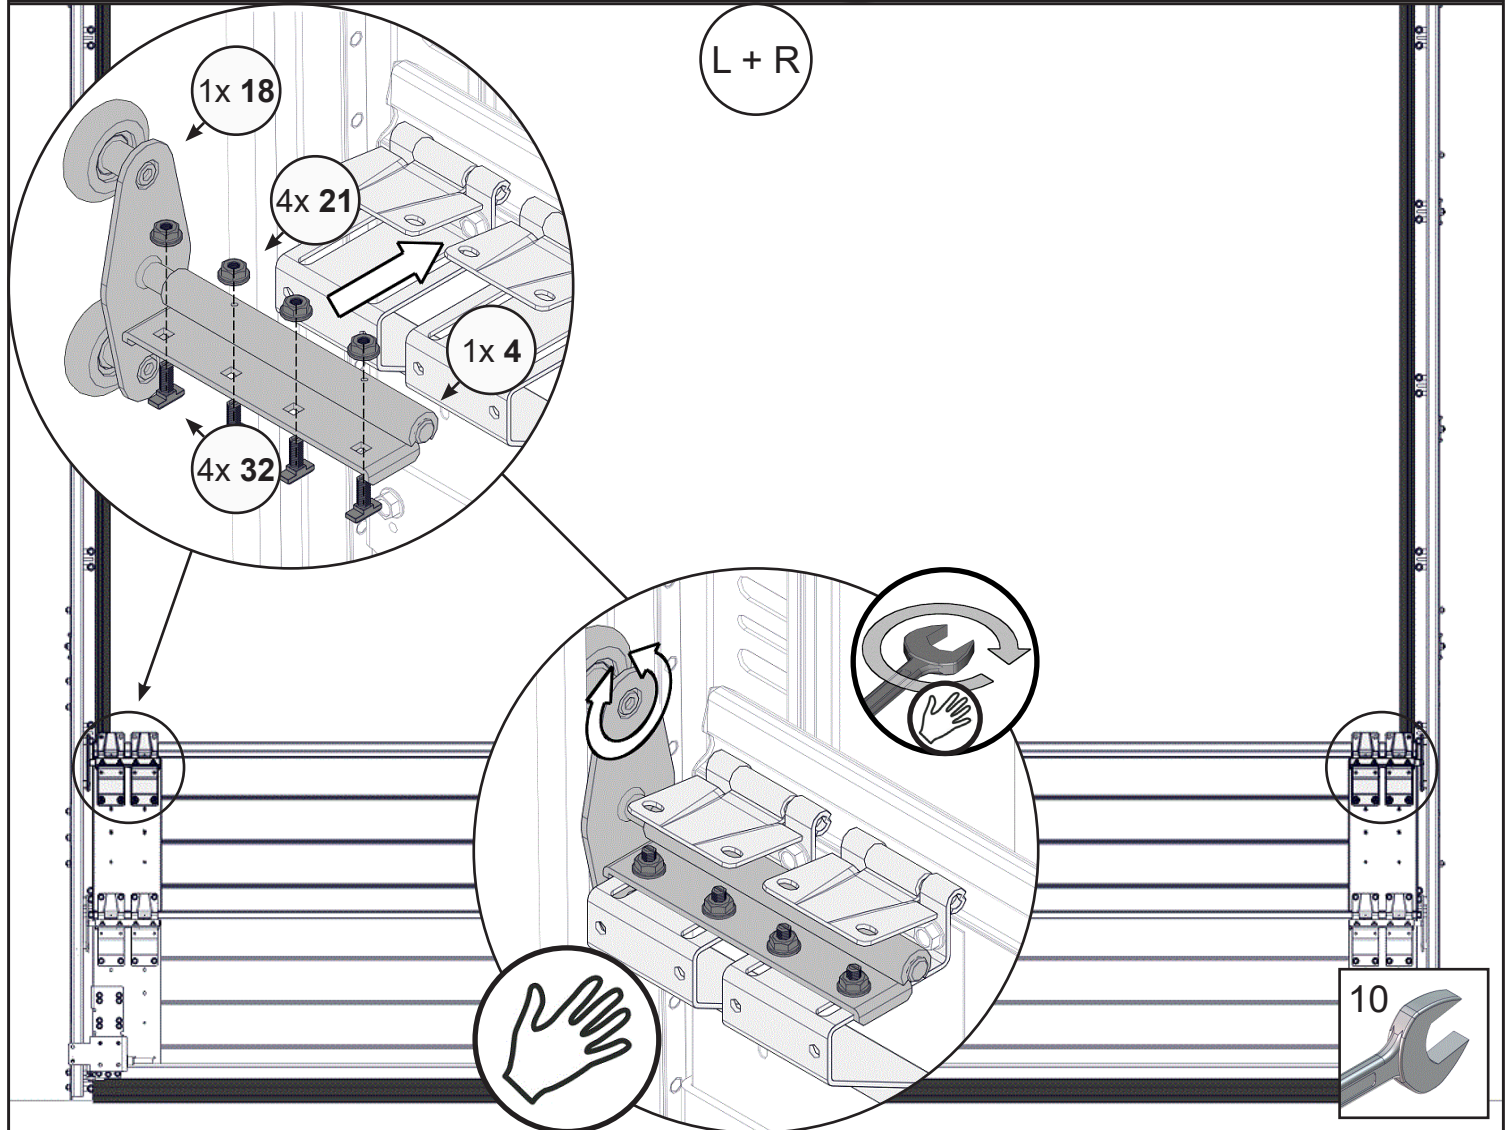

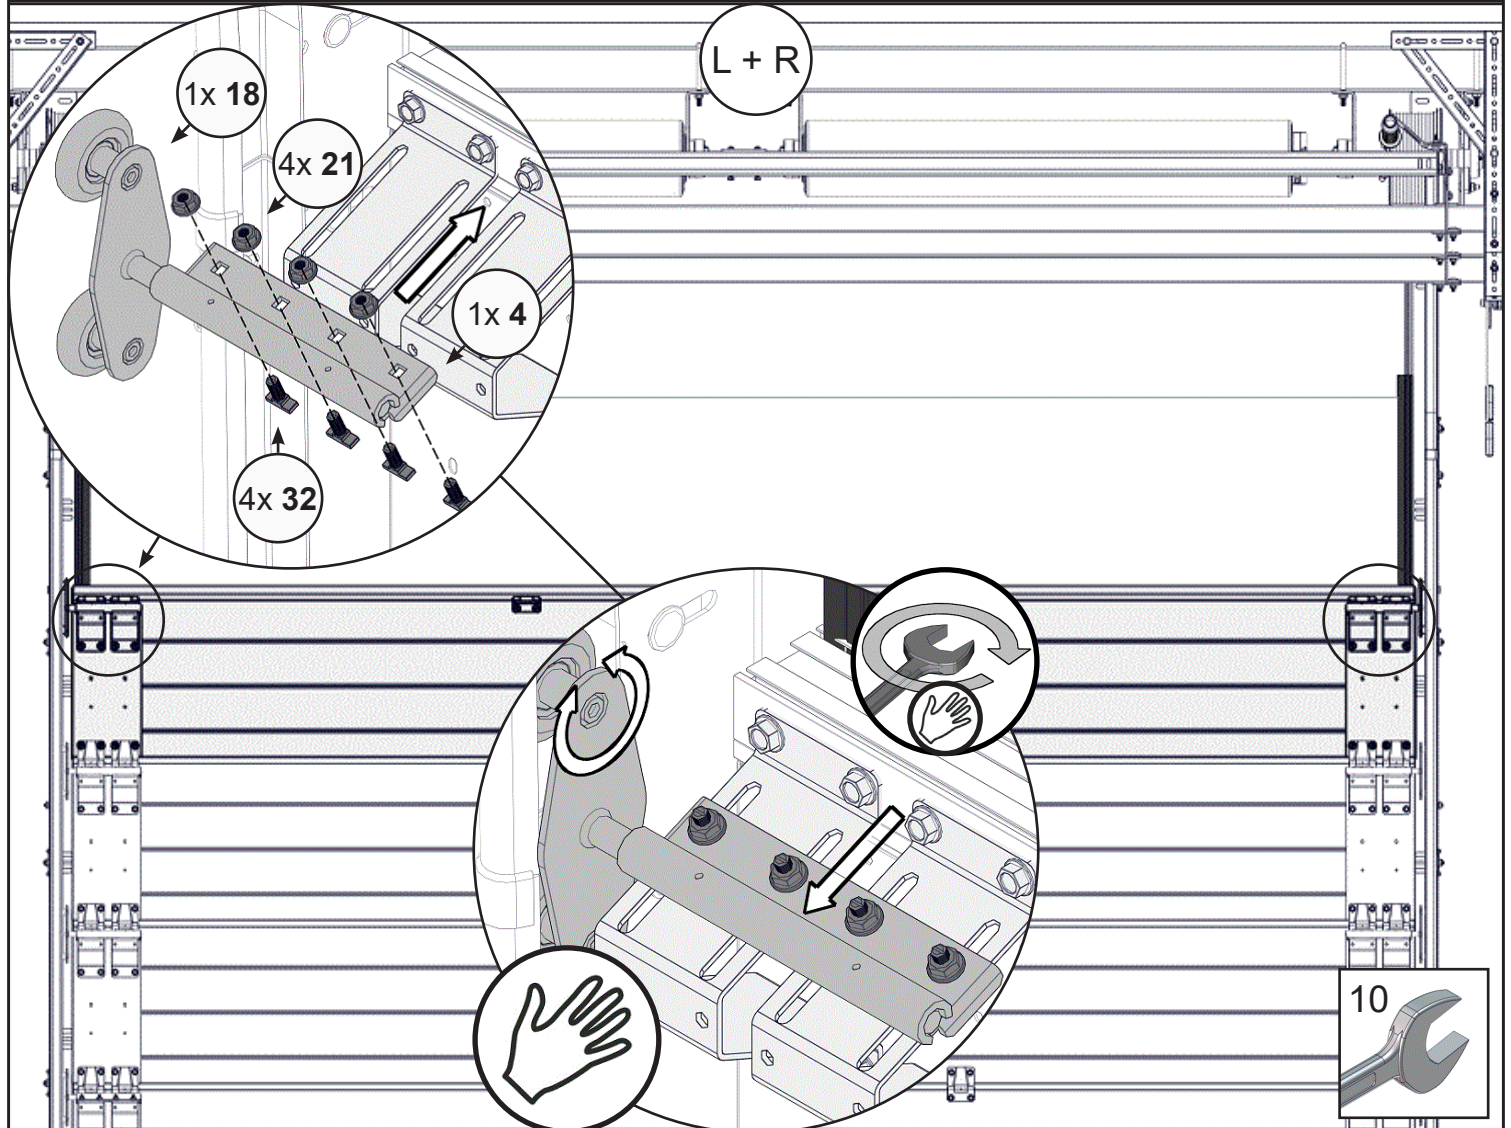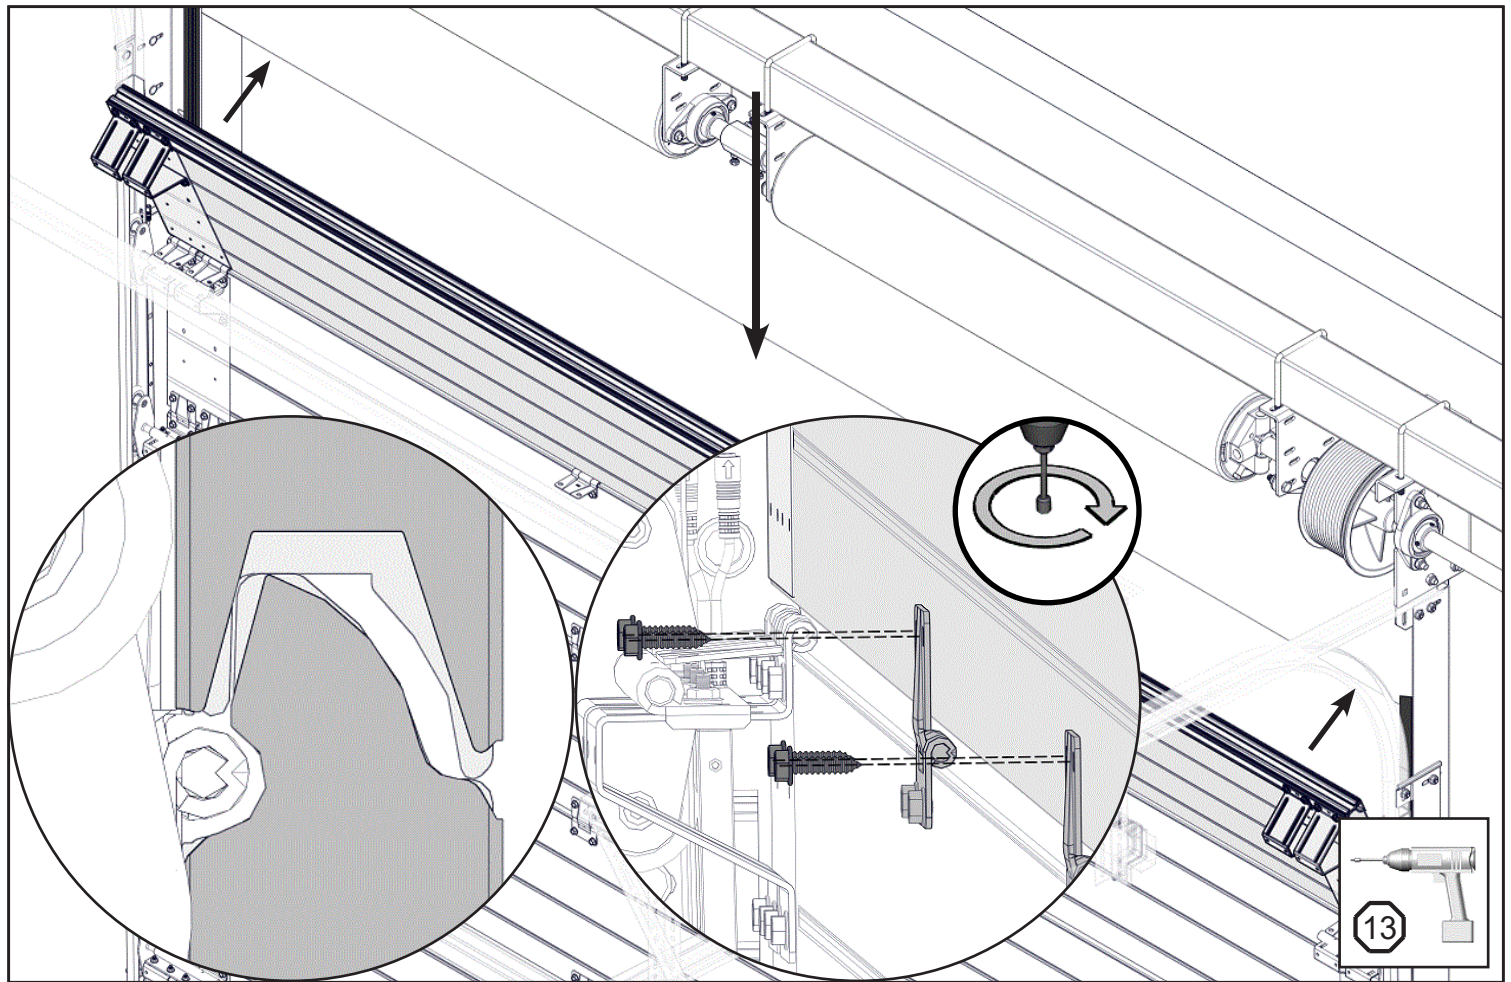

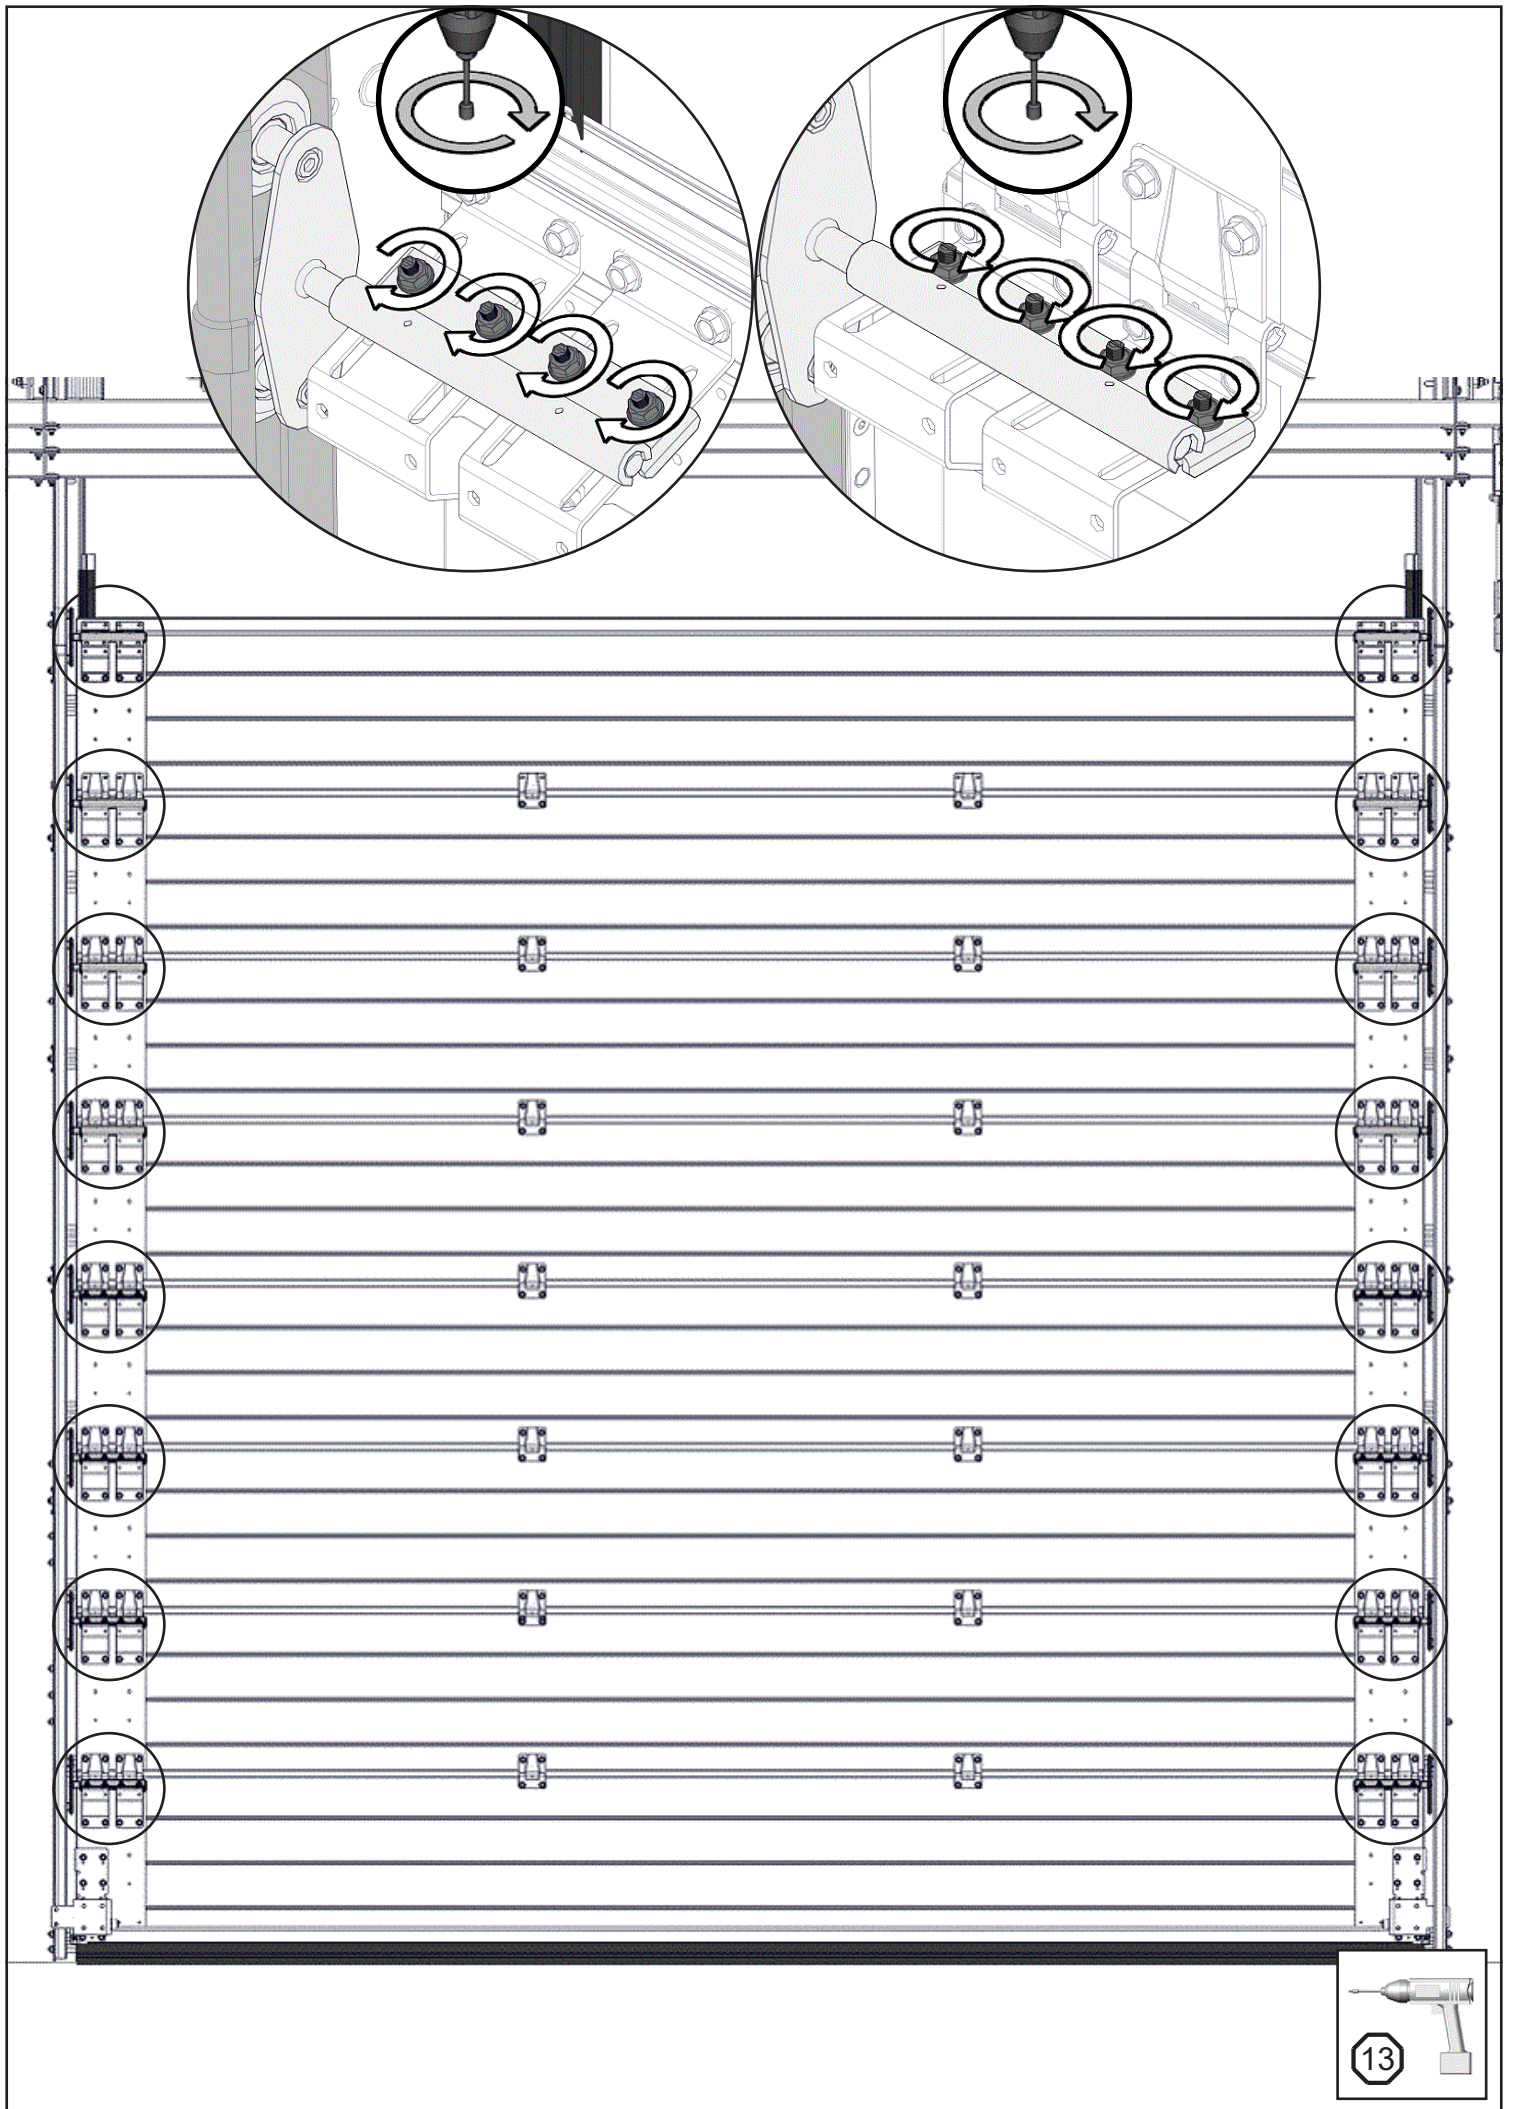

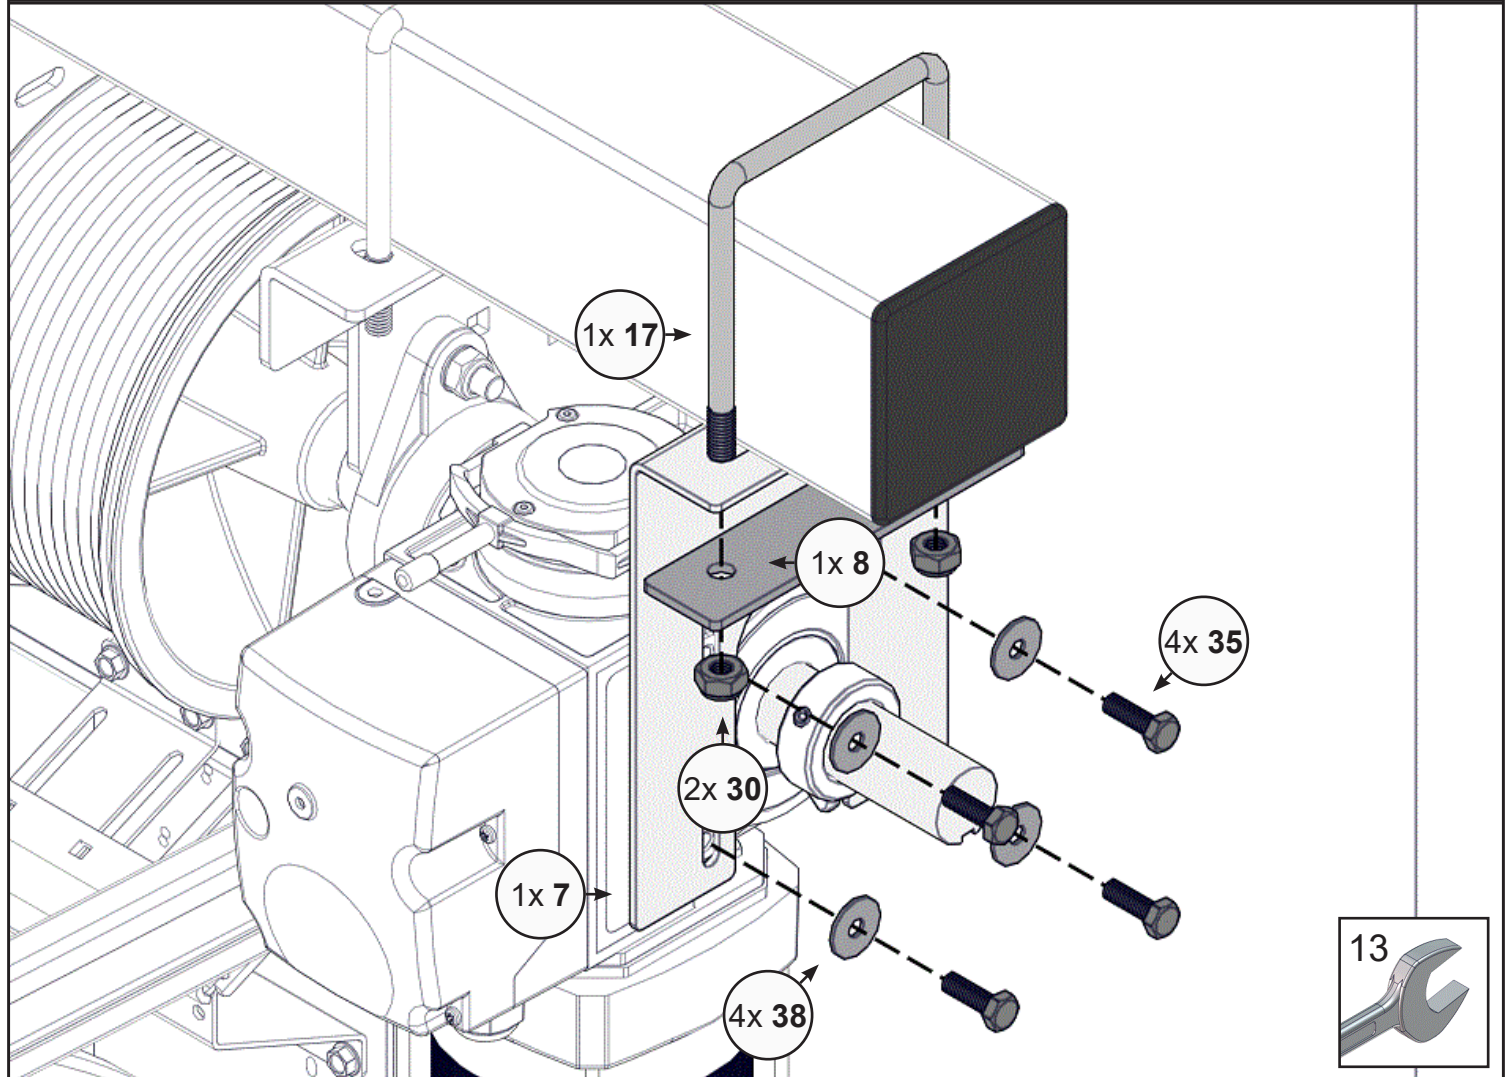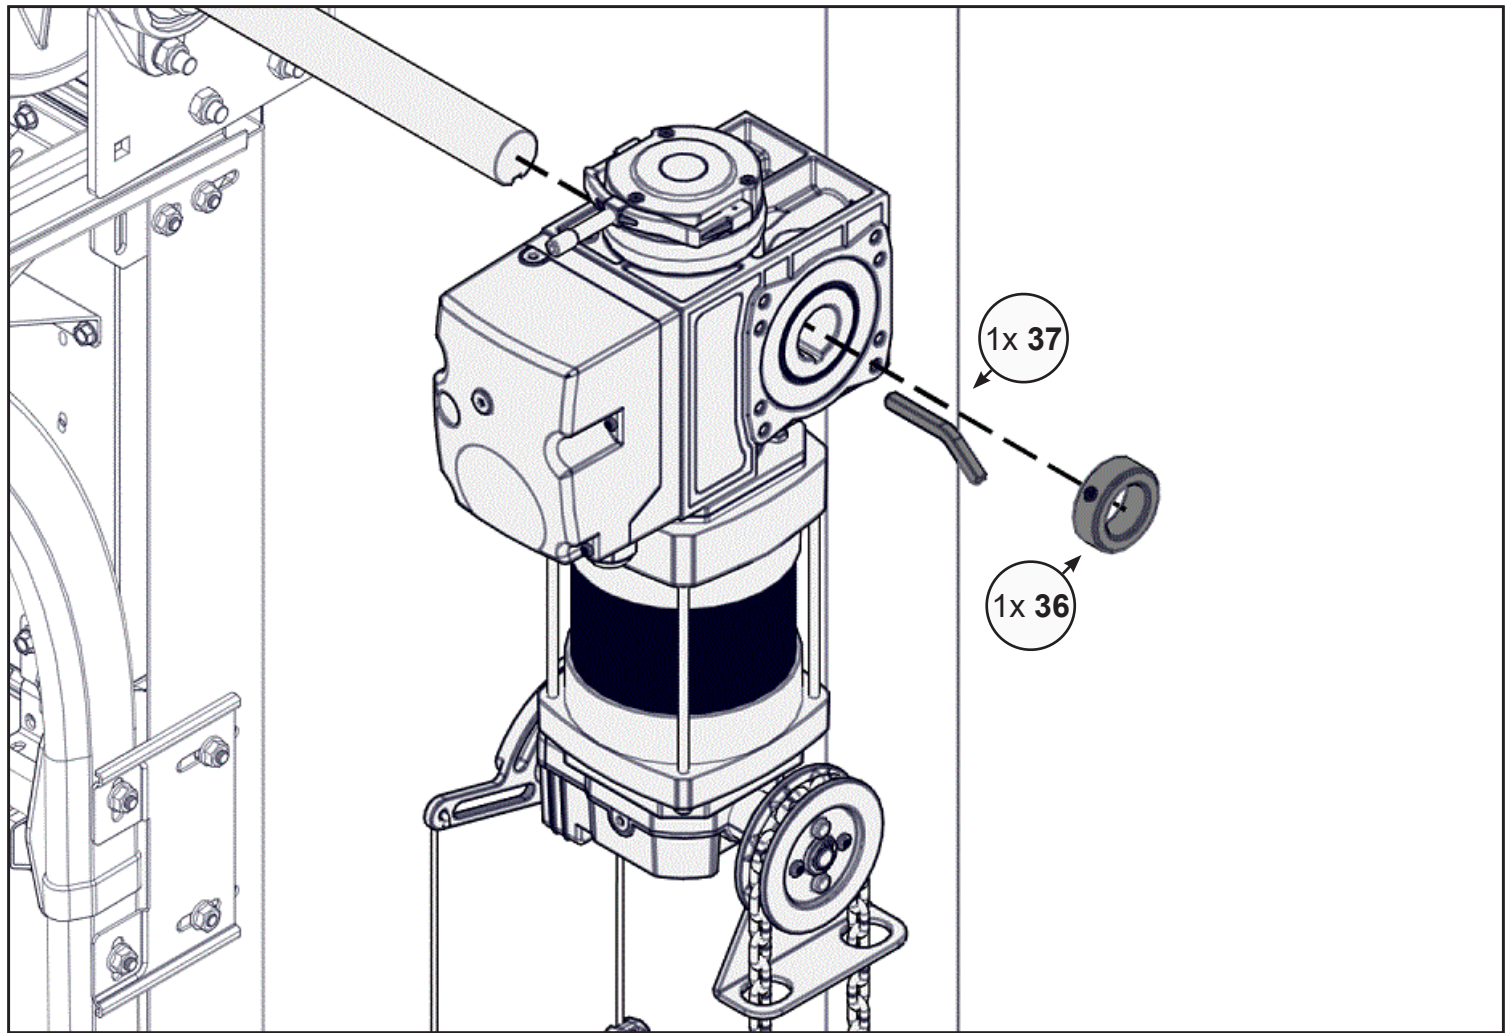

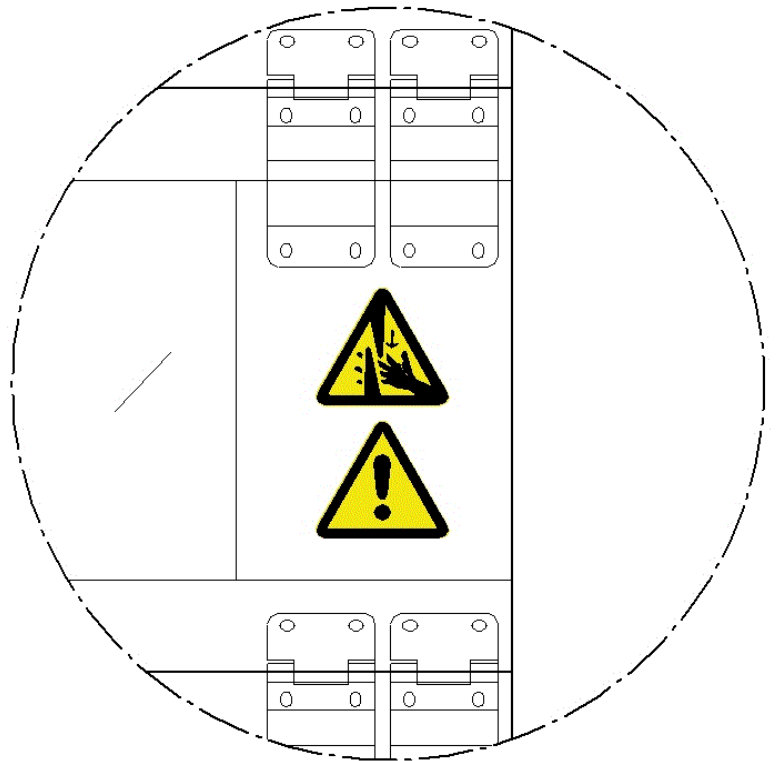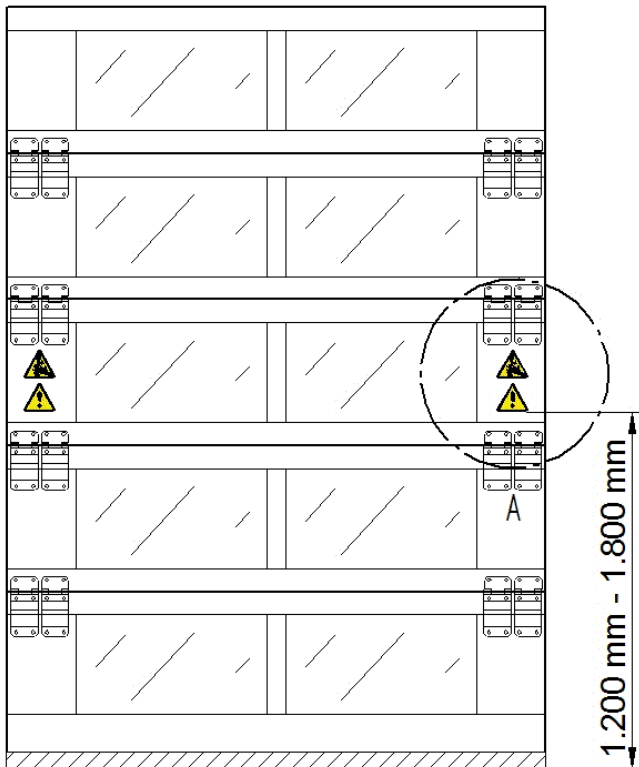

DETAIL A

PW 12 Bon Hardware Industrie

Pitch HBR E

0 0

Aant Deurtype DMB DMH Secties Velden Bostag Gewicht Turns

11.4


Klant
Klant
geleidelijk
Transport

Aant	Eenheid	Art. nr.	Artikel omschrijving	Doos	Length	Verpakt / Controls
1	-		Springs Left 8,00x51x960 Powdercoated			☐ ☐
1	-		Springs Right 8,00x51x960 Powdercoated			☐ ☐

Turns x 360°



VEER / FEDER / SPRING / RESSORT < 152 mm



VEER / FEDER / SPRING / RESSORT < 67 mm




STAAL / STAHL / STEEL / ACIER 52


1





2

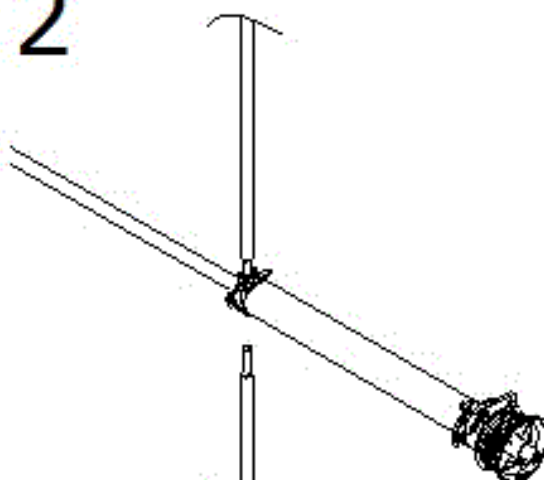




3





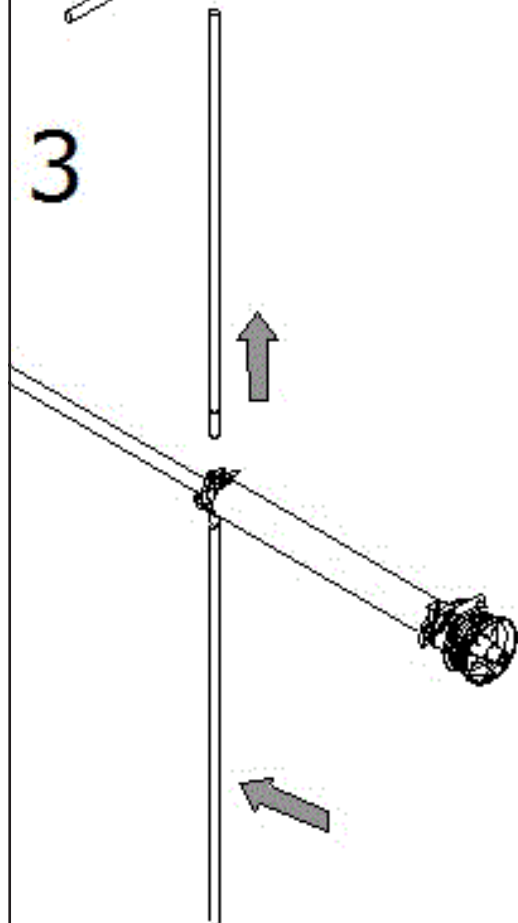









4

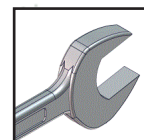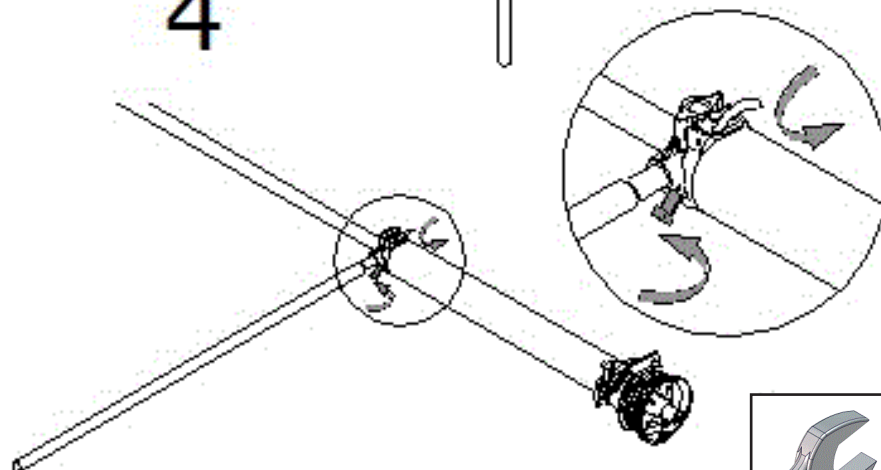

NL: Correcte wijze vastzetten van spankop
EN: Correct fastening of winding plug
DE: Richtige montage Feder spannkopf
FR: Fixation correcte du mandrin de tension

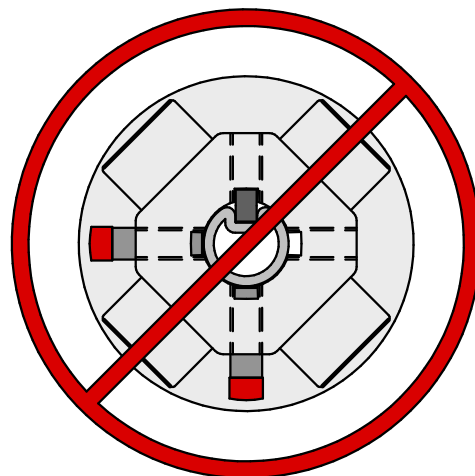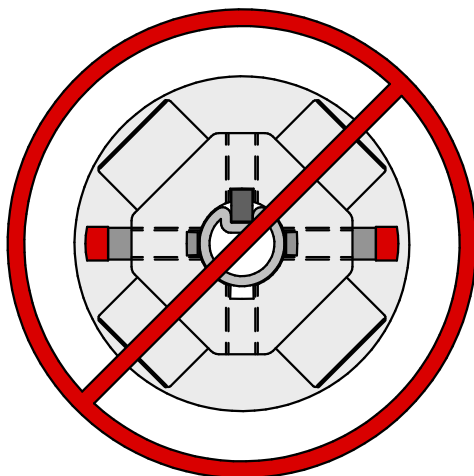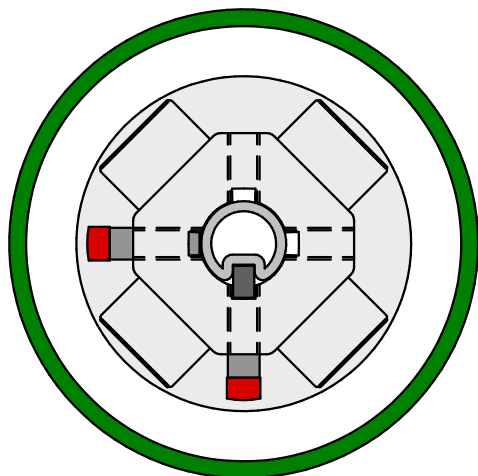

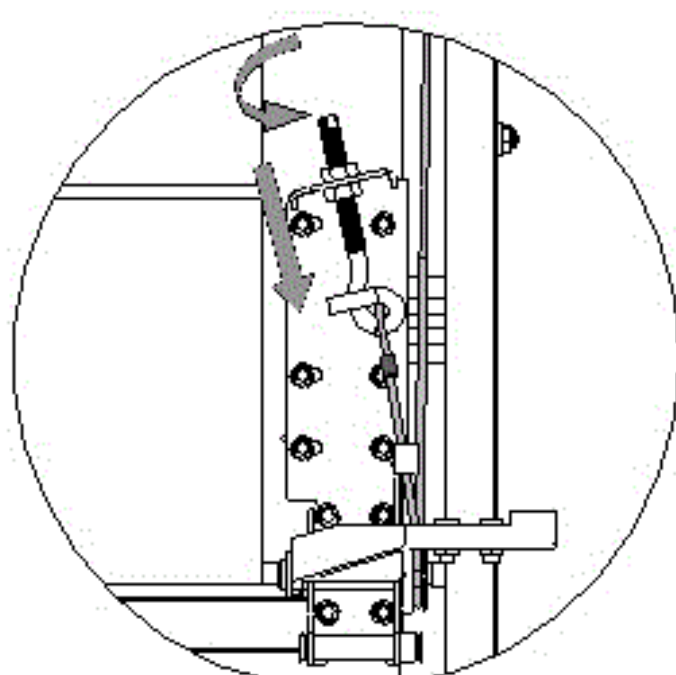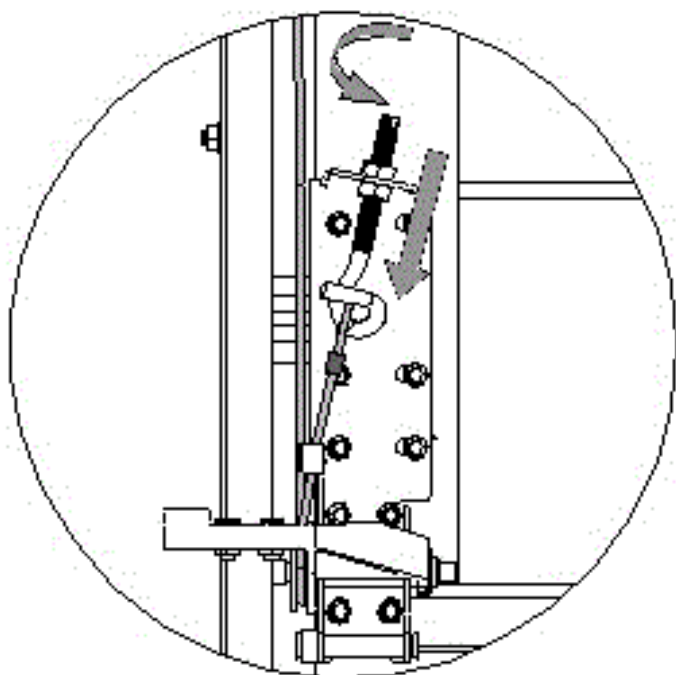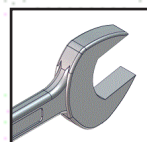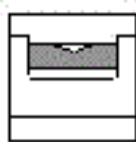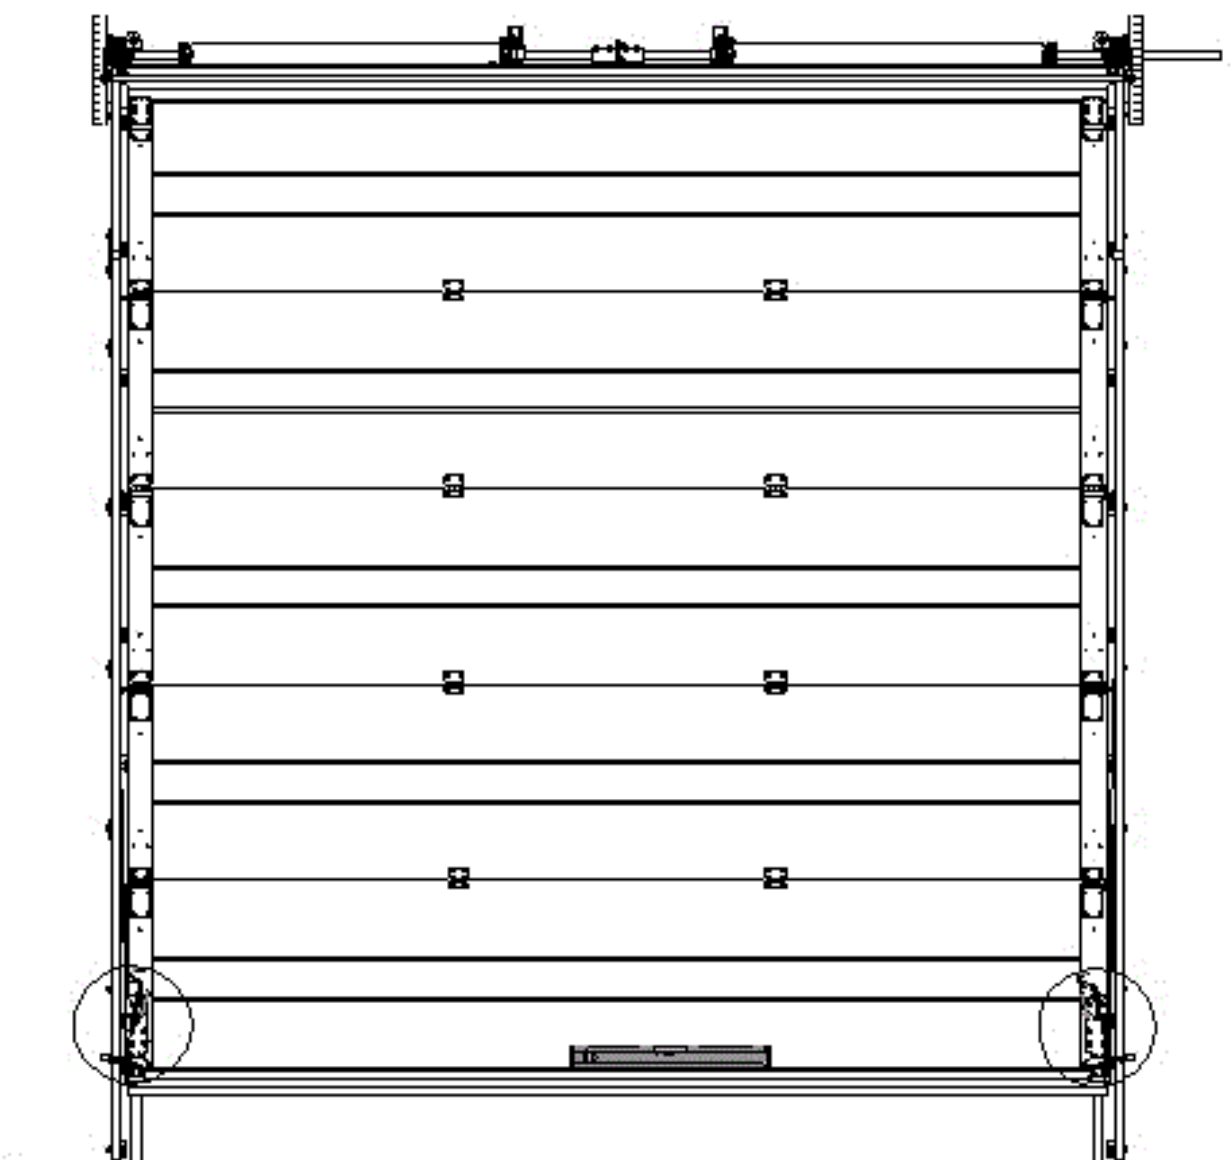

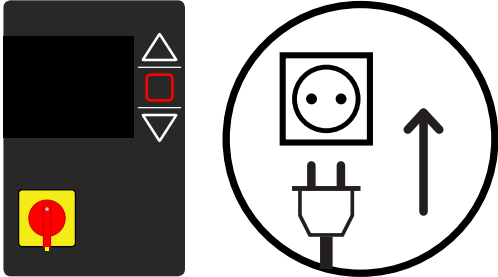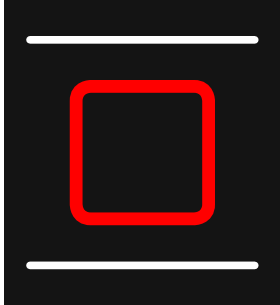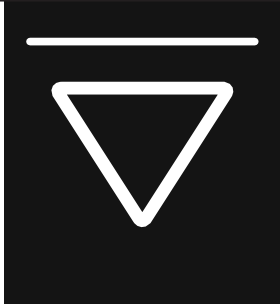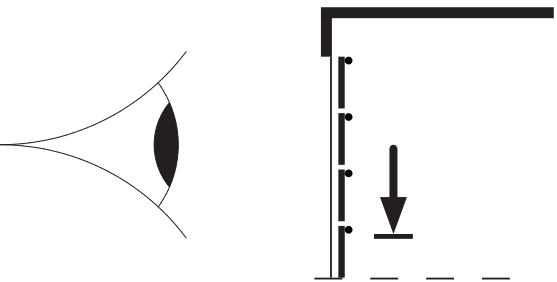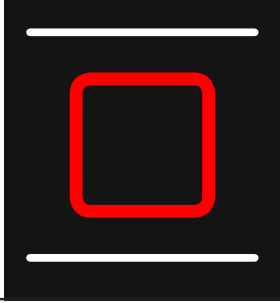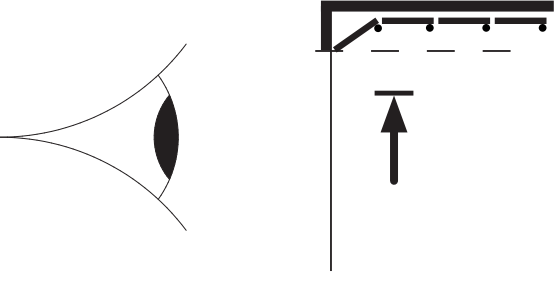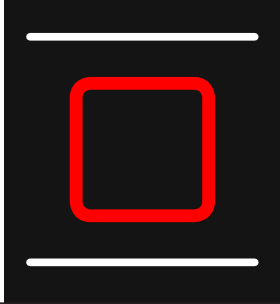1		
2		
3		
4		>3 sec 
5		
6		>3 sec 

Options

3199

